




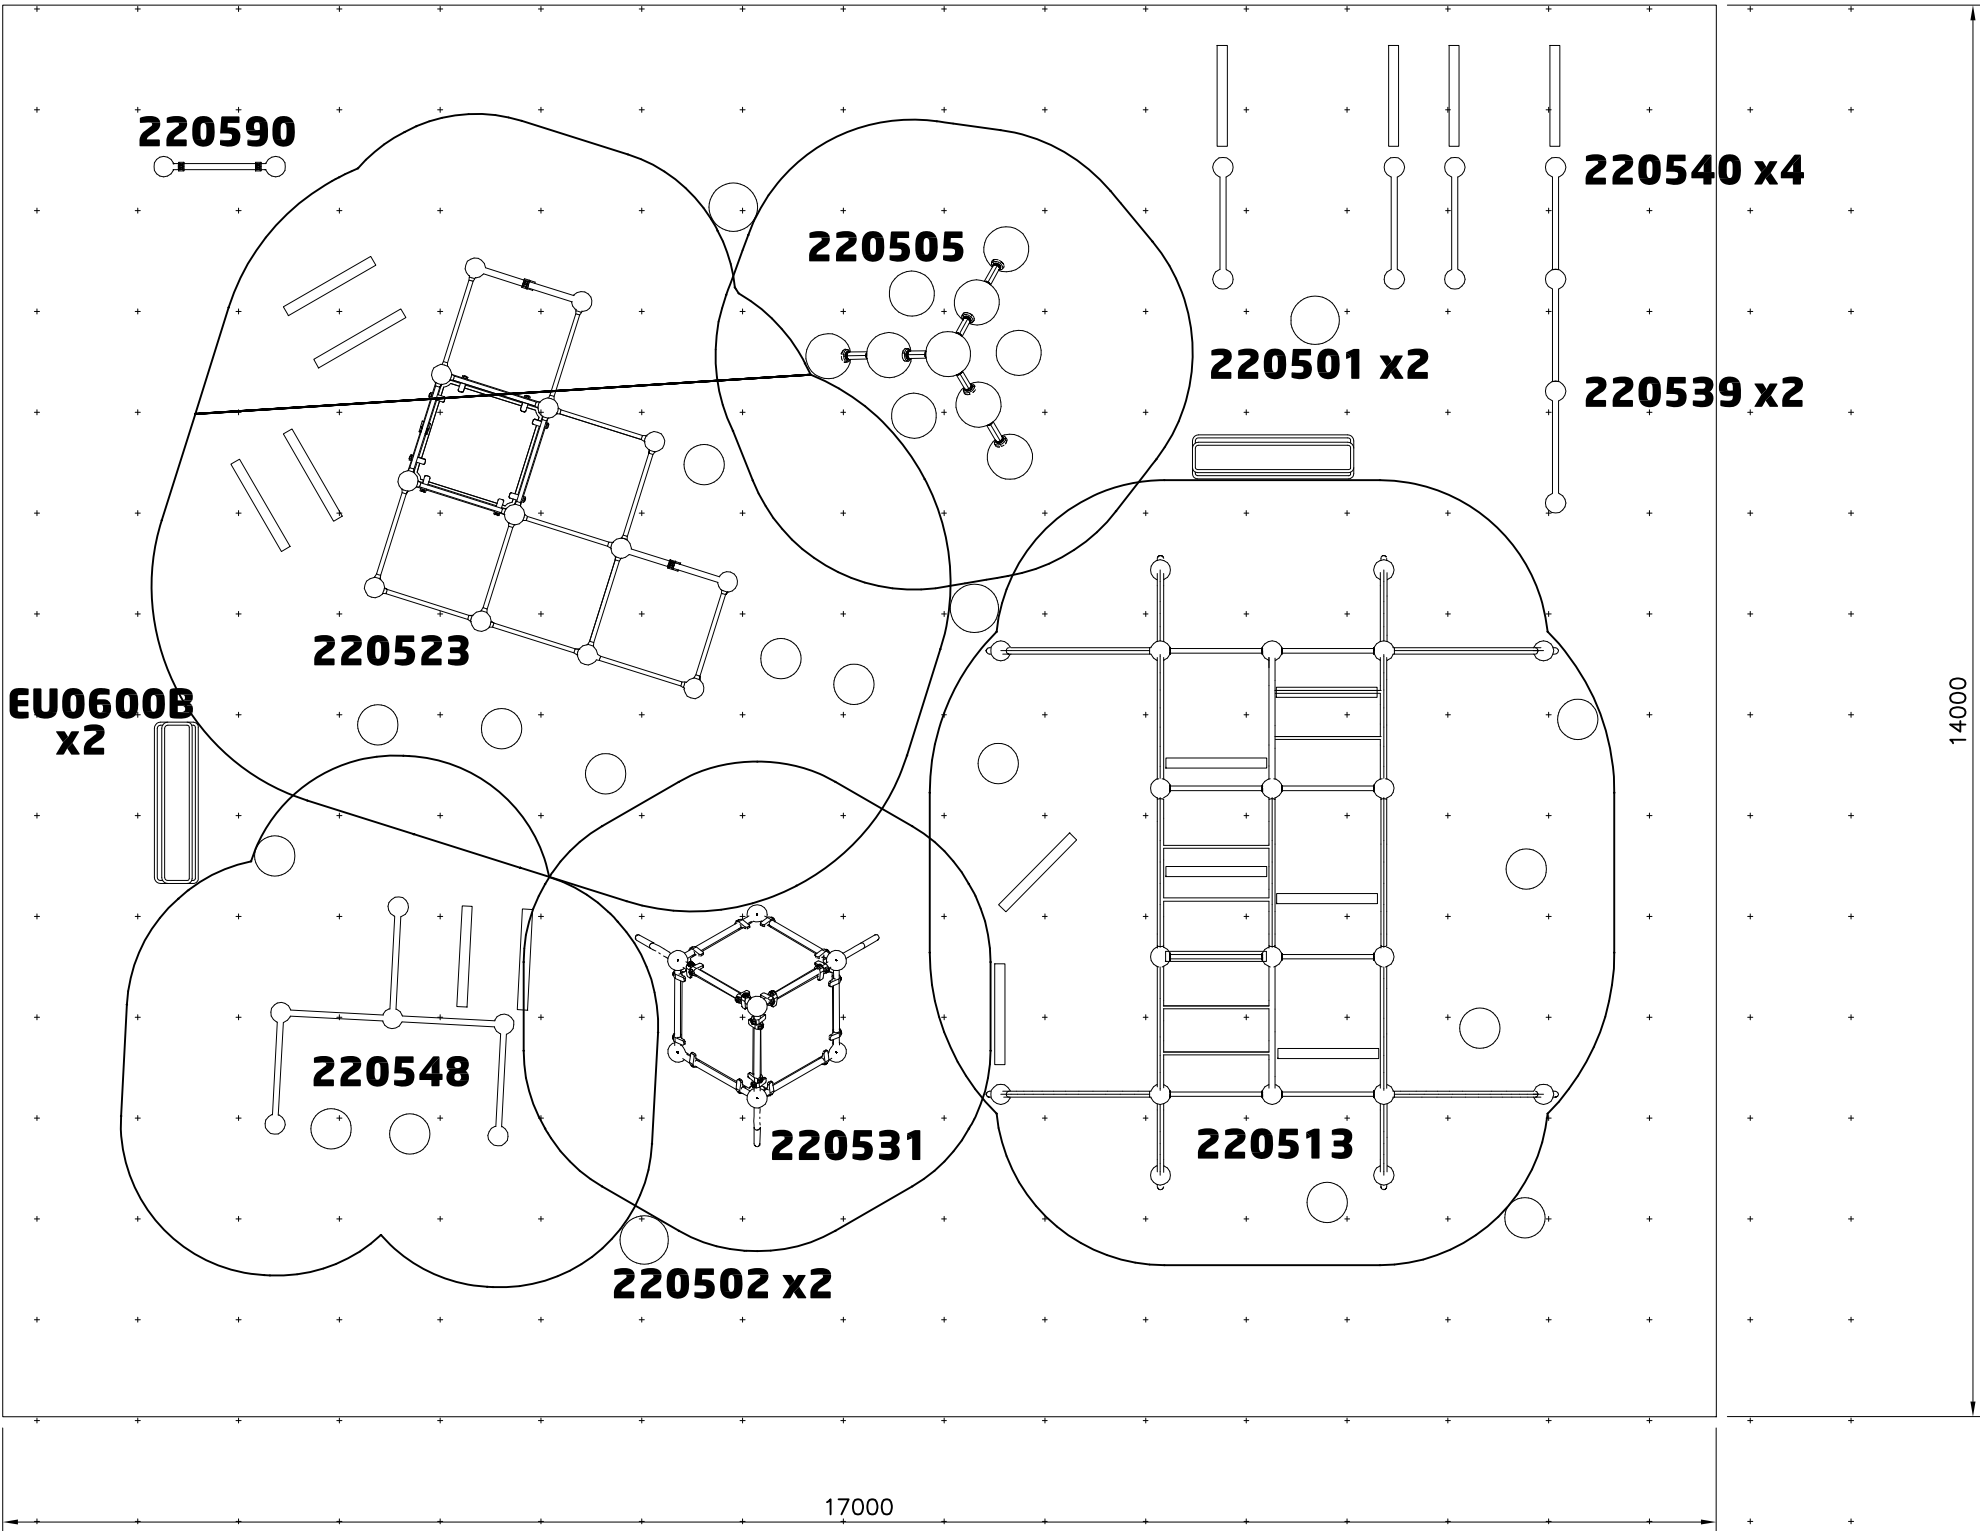

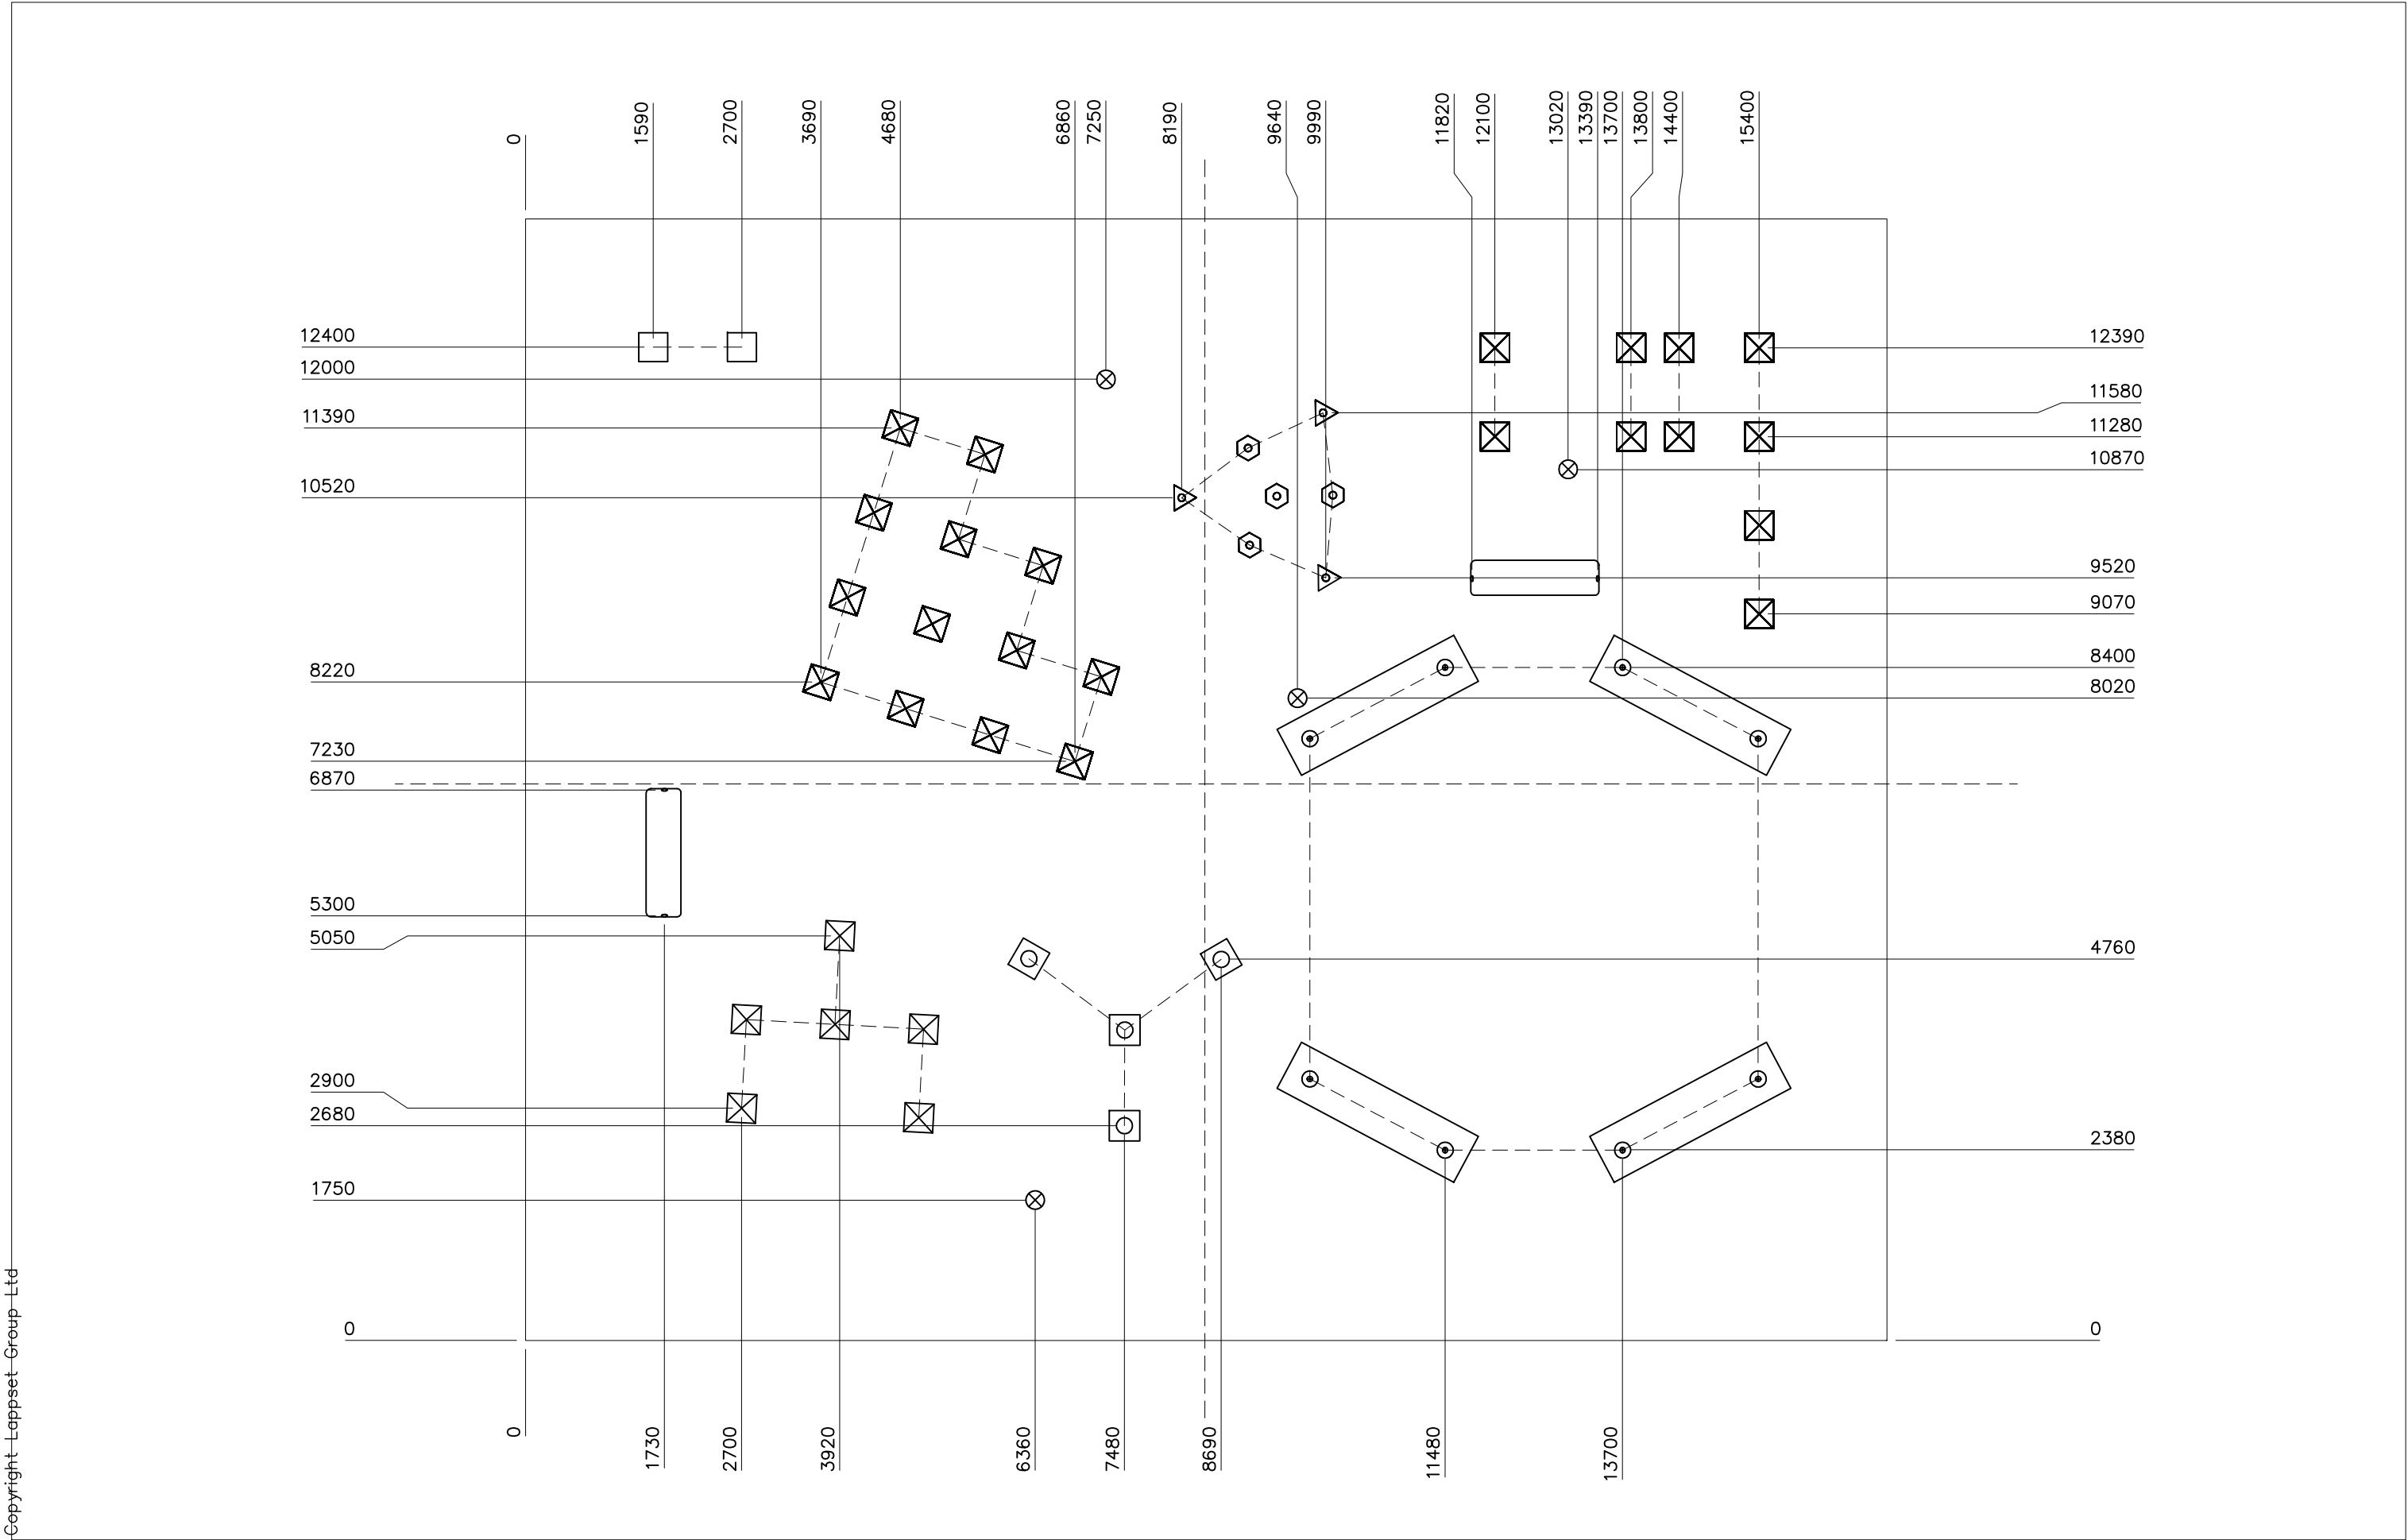

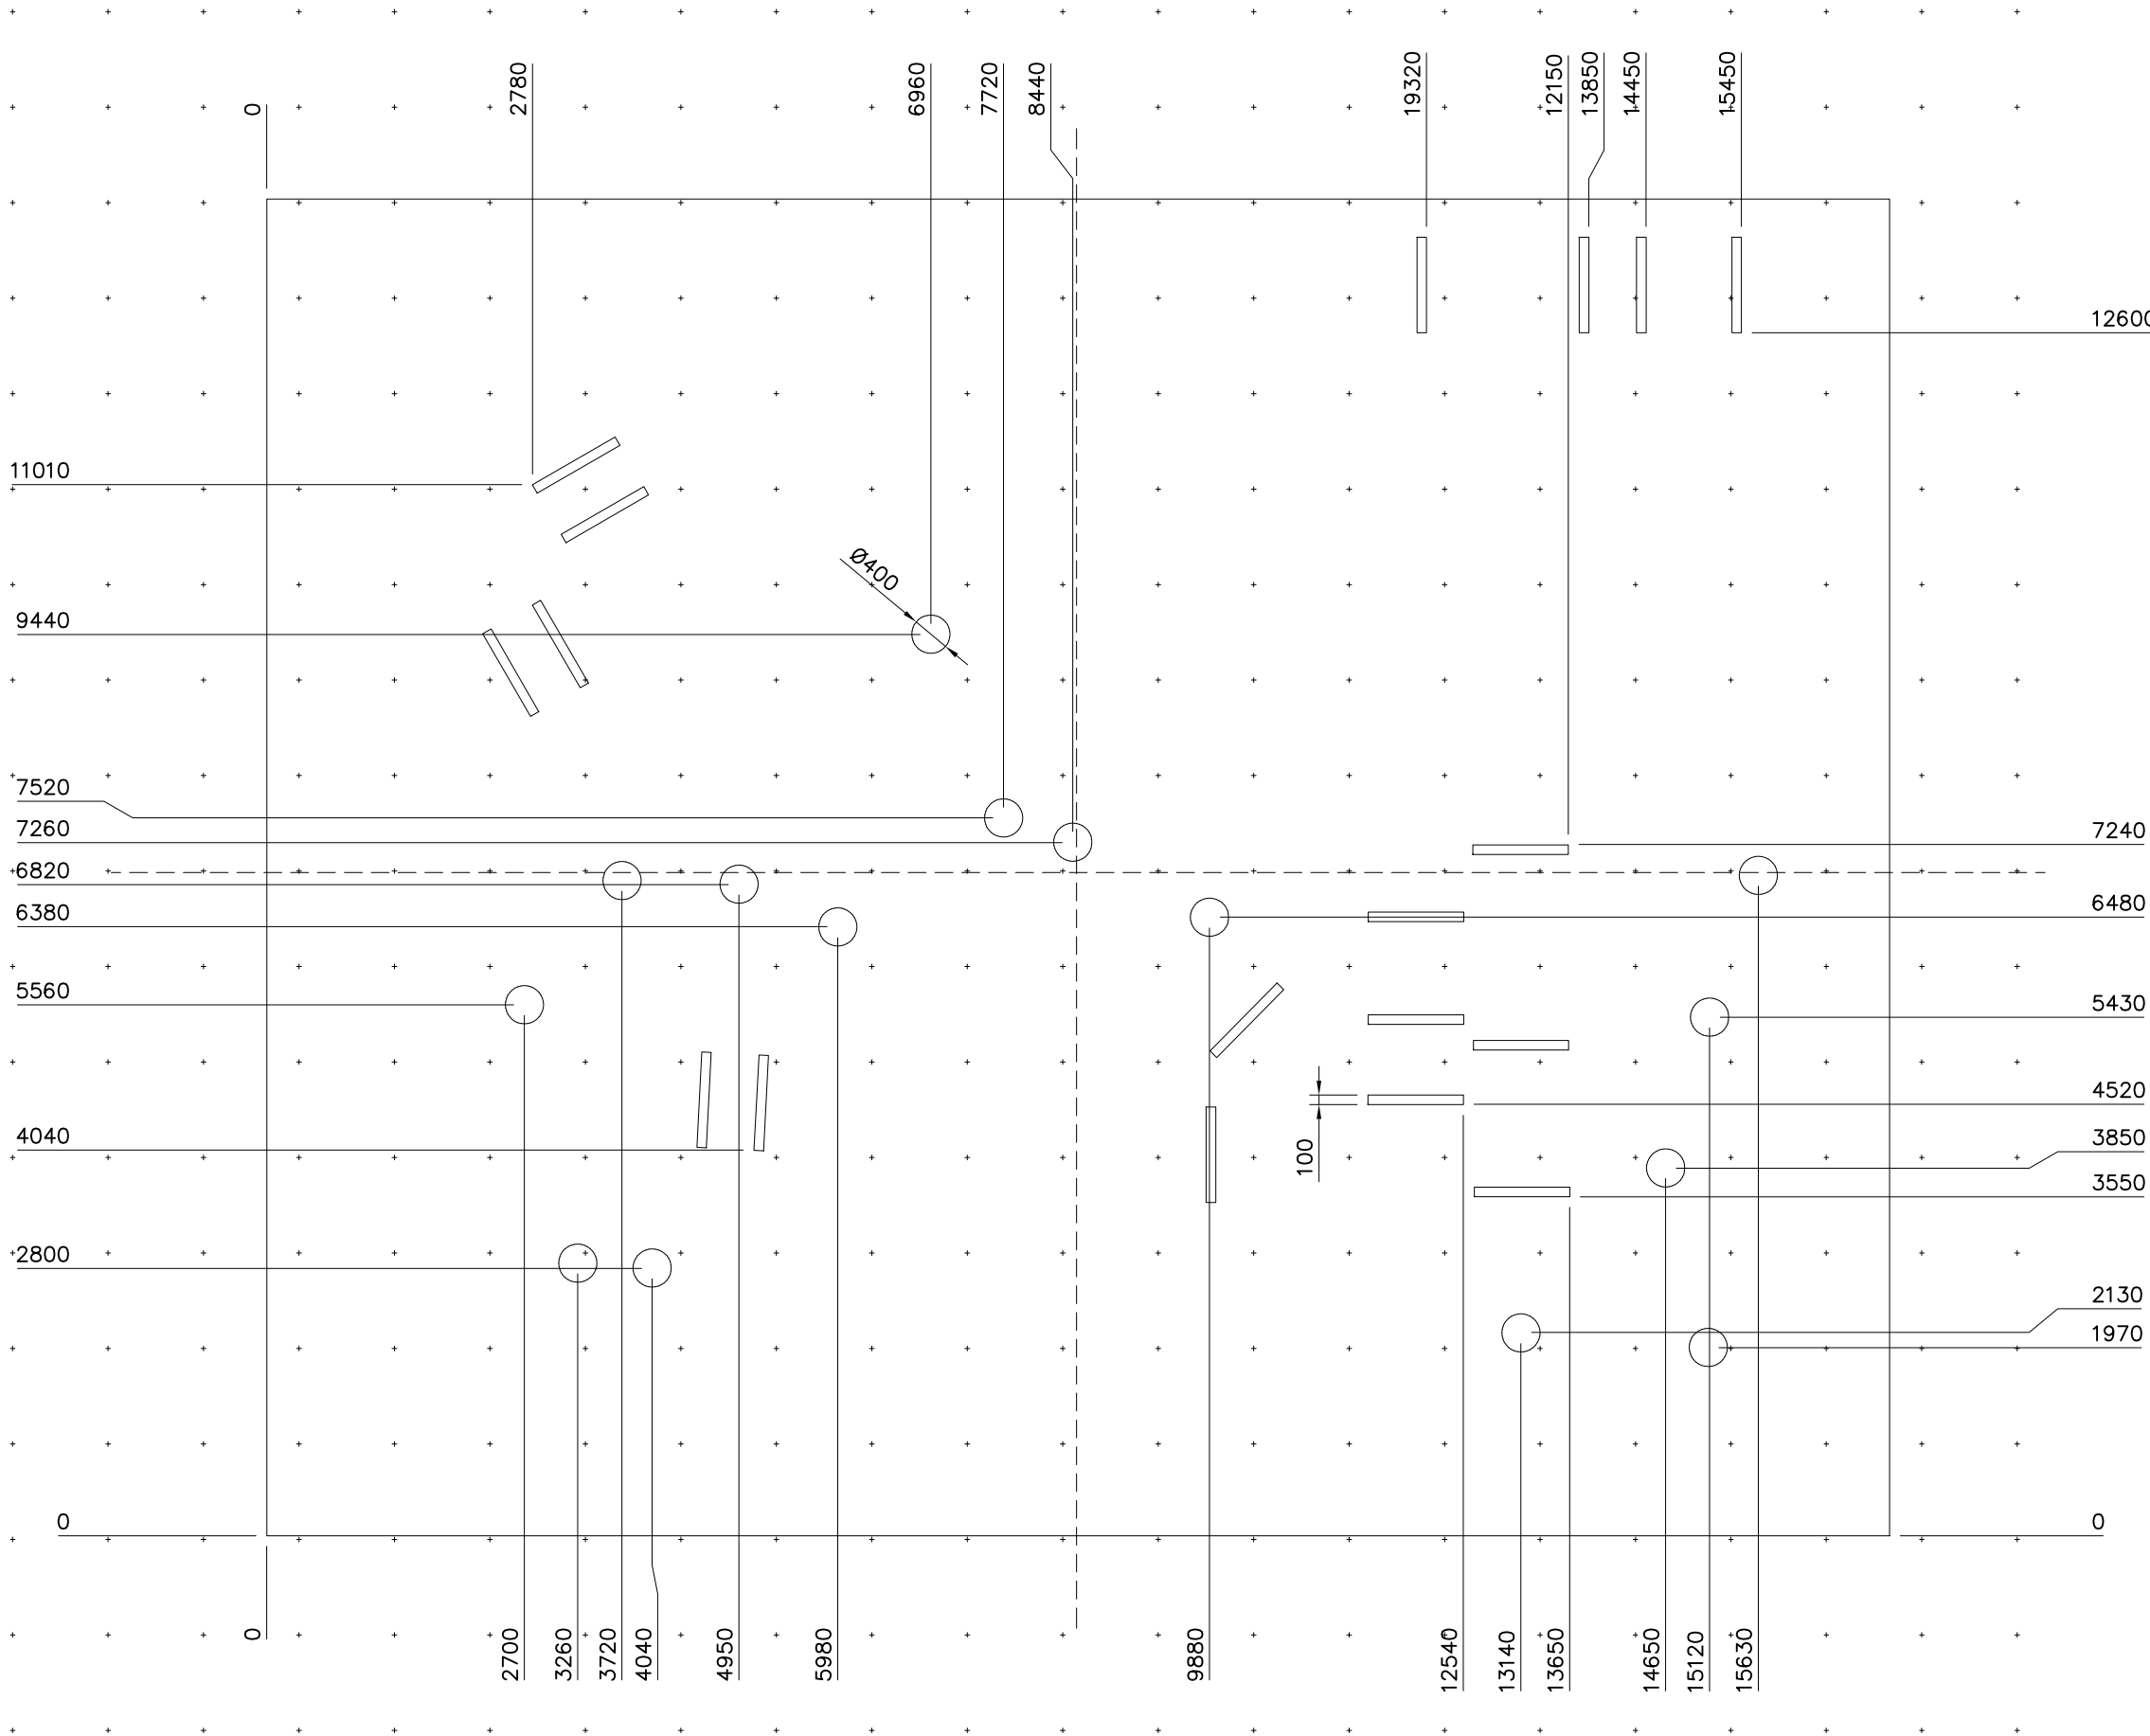








		① 702341 90x50	PCS 1	② 704599 90x50	PCS 1
		③ 902134 60x60x2	PCS 2	④ 902157 60x60x2	PCS 8
		⑤ 902424 L 1034	PCS 1	⑥ 904130 L 2148	PCS 2
		⑦ 902124 150x50x50	PCS 12	⑧ 980161 M10	PCS 12
		⑨ 902232 M10x55	PCS 6	⑩ 902233 M10x30	PCS 6
		⑪ 704829 15x913x993	PCS 1	⑬ 909855 M8x35	PCS 8
		⑭ 909256 Ø16/8.4x1.6	PCS 8	⑮ 909633 M8	PCS 8
		⑯ 909873 M8x40	PCS 8	⑰ 704855-704866 NOT INCLUDED 8x560x640	PCS 1

LAPPSET
PARKOUR

220590

DATE: 24.5.2018

2(2)

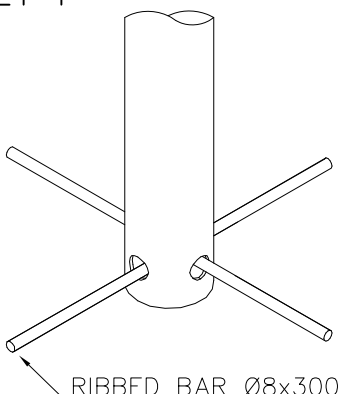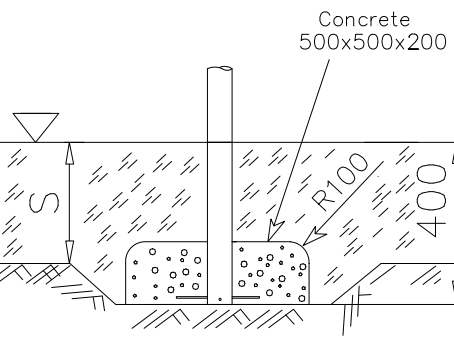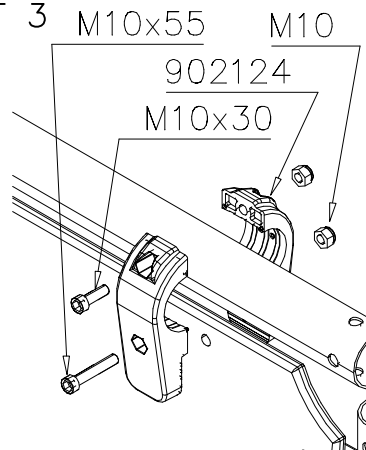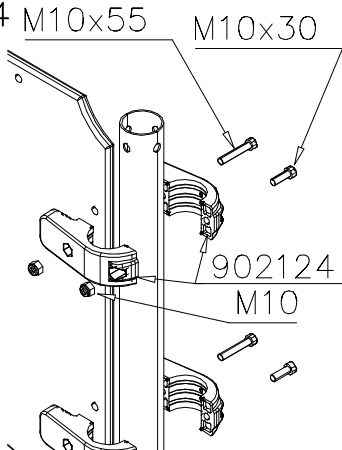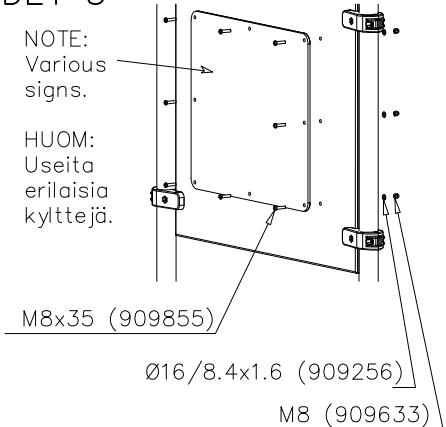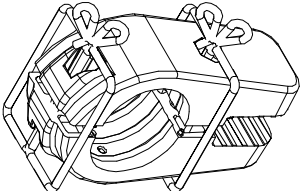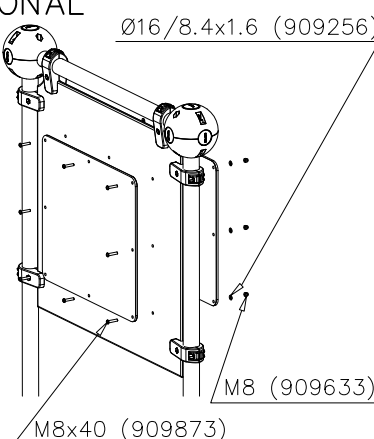DET 1  RIBBED BAR Ø8x300	DET 2  Concrete 500x500x200	DET 3  M10x55 M10 902124 M10x30
DET 4  M10x55 M10x30 902124 M10	DET 5  NOTE: Various signs. HUOM: Useita erilaisia kylttejä. M8x35 (909855) Ø16/8.4x1.6 (909256) M8 (909633)	 NOTE: Use a wire marked pairs of the same junction. Huom! Käytä langalla merkittyä paria samassa liitoksessa.
OPTIONAL  Ø16/8.4x1.6 (909256) M8 (909633) M8x40 (909873)		


LAPPSET®

PARKOUR

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 23.2.2015

220523


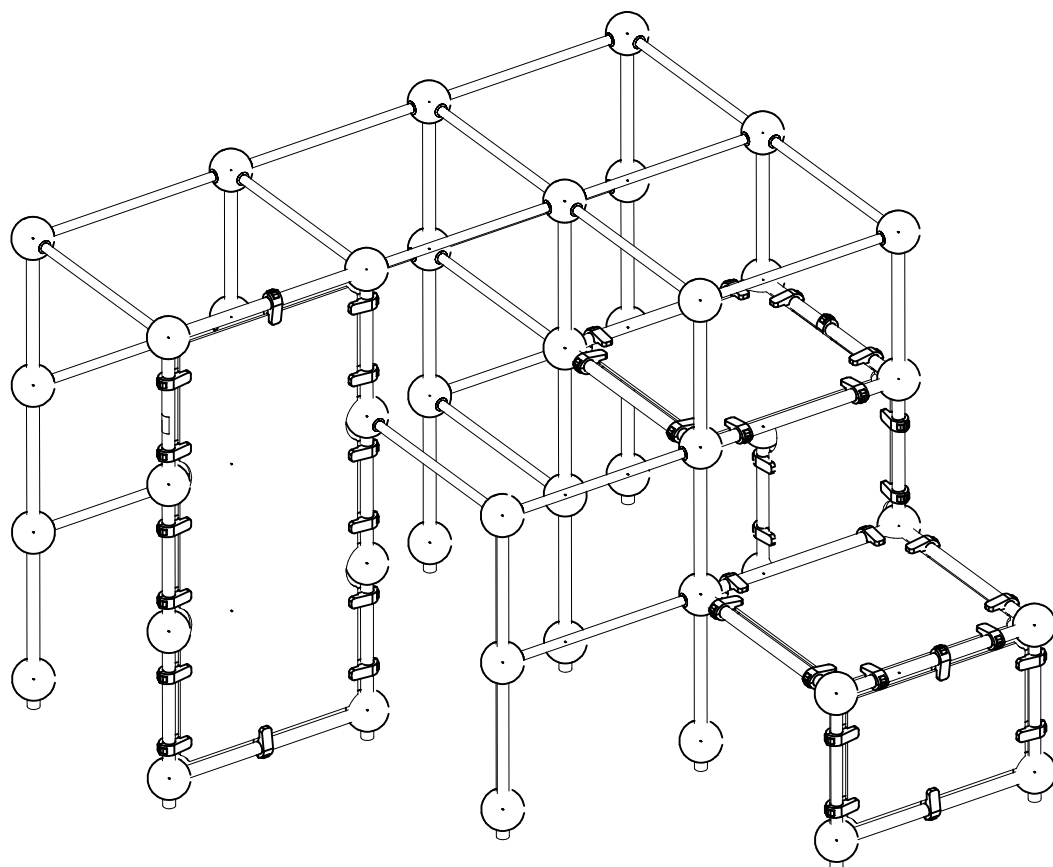


DATE: 23.2.2015



[illegible]


EN Impact Area 45.4 m² (489 sq ft)

Grid Size 1000 mm (40" in)

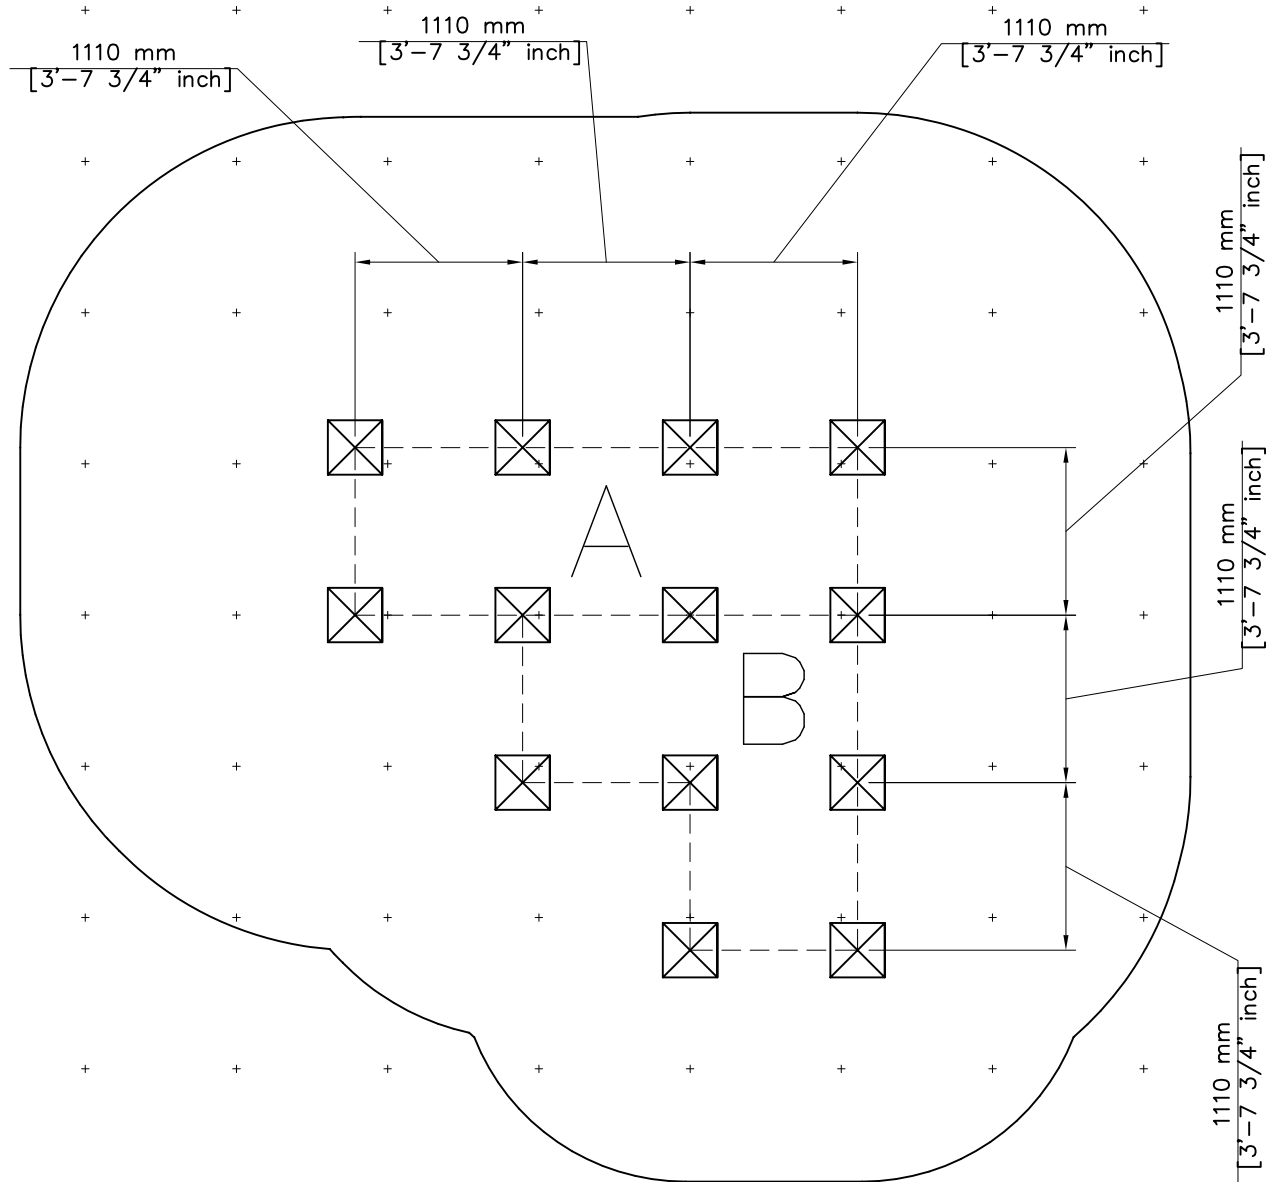

— EN Impact Area 45.4 m² (489 sq ft)
 - - - Falling Space 45,4 m² (489 sq ft)
 Max Falling Height 2530 mm (8'-3 3/4" in)

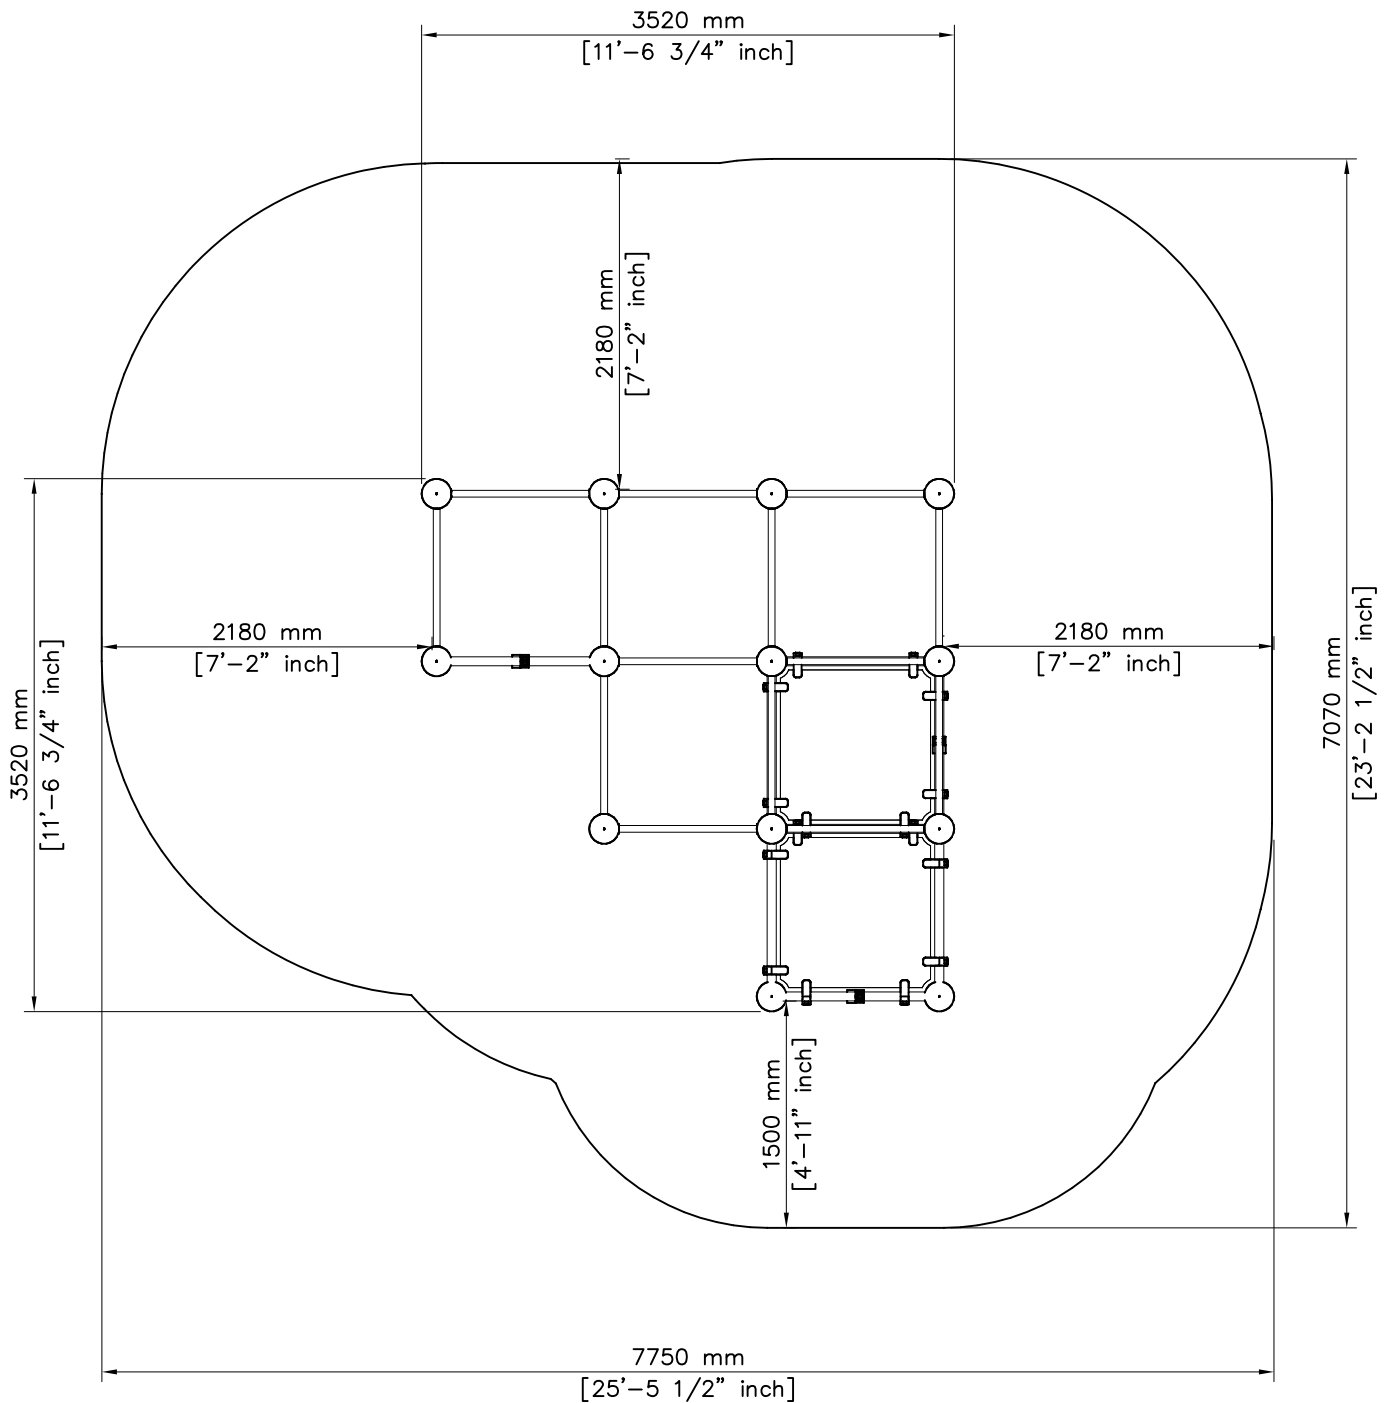

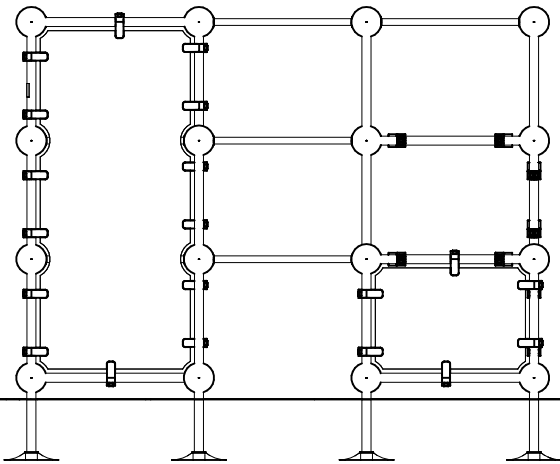




2530 mm
[8'-3 3/4" inch]



1740 mm
[5'-8 3/4" inch]

960 mm
[3'-1 3/4" inch]



0 mm
[0" inch]


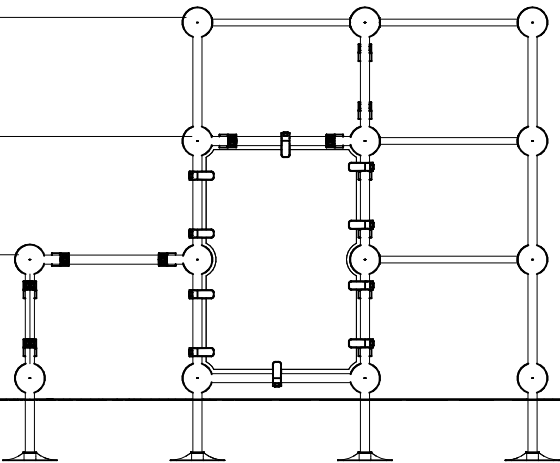


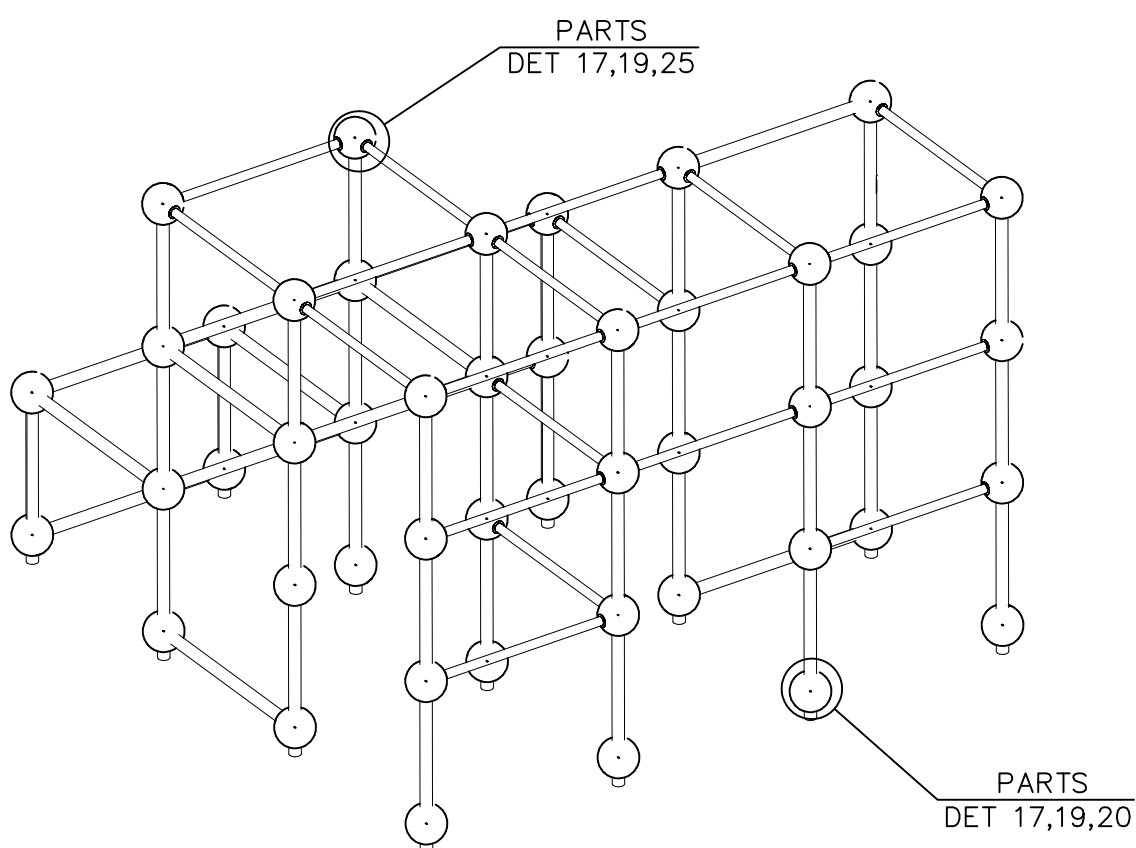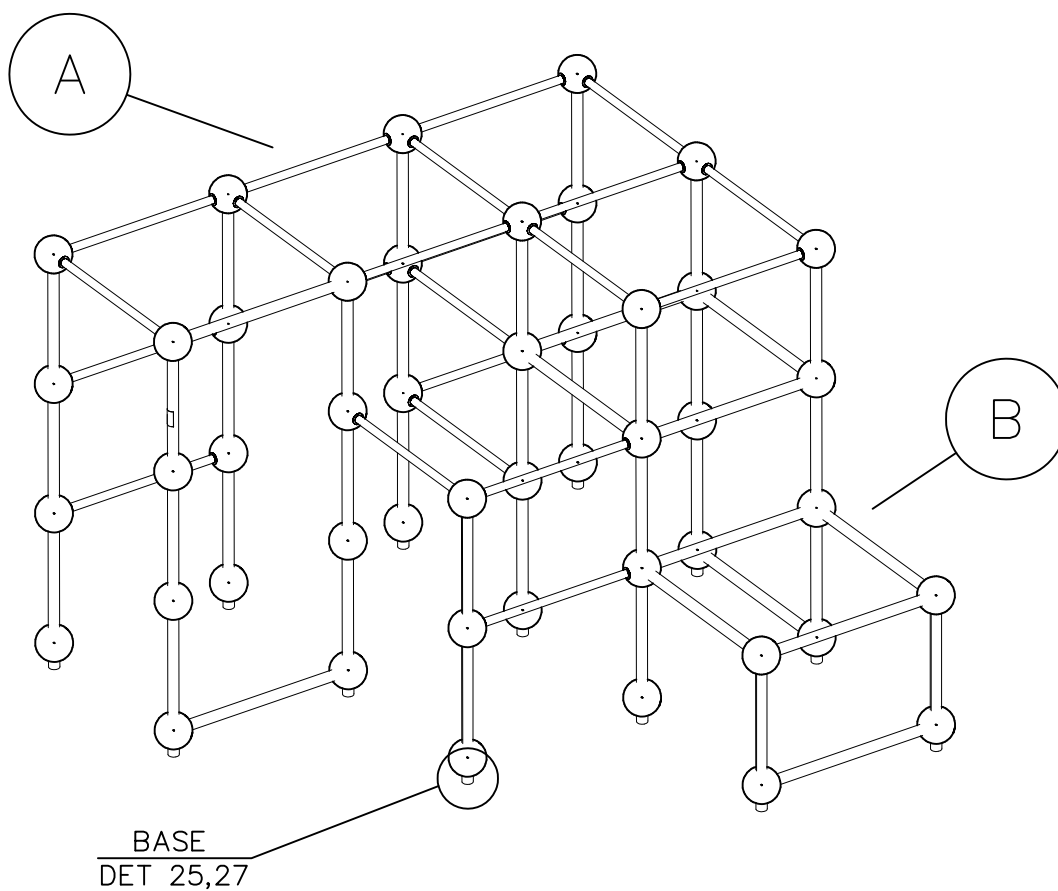

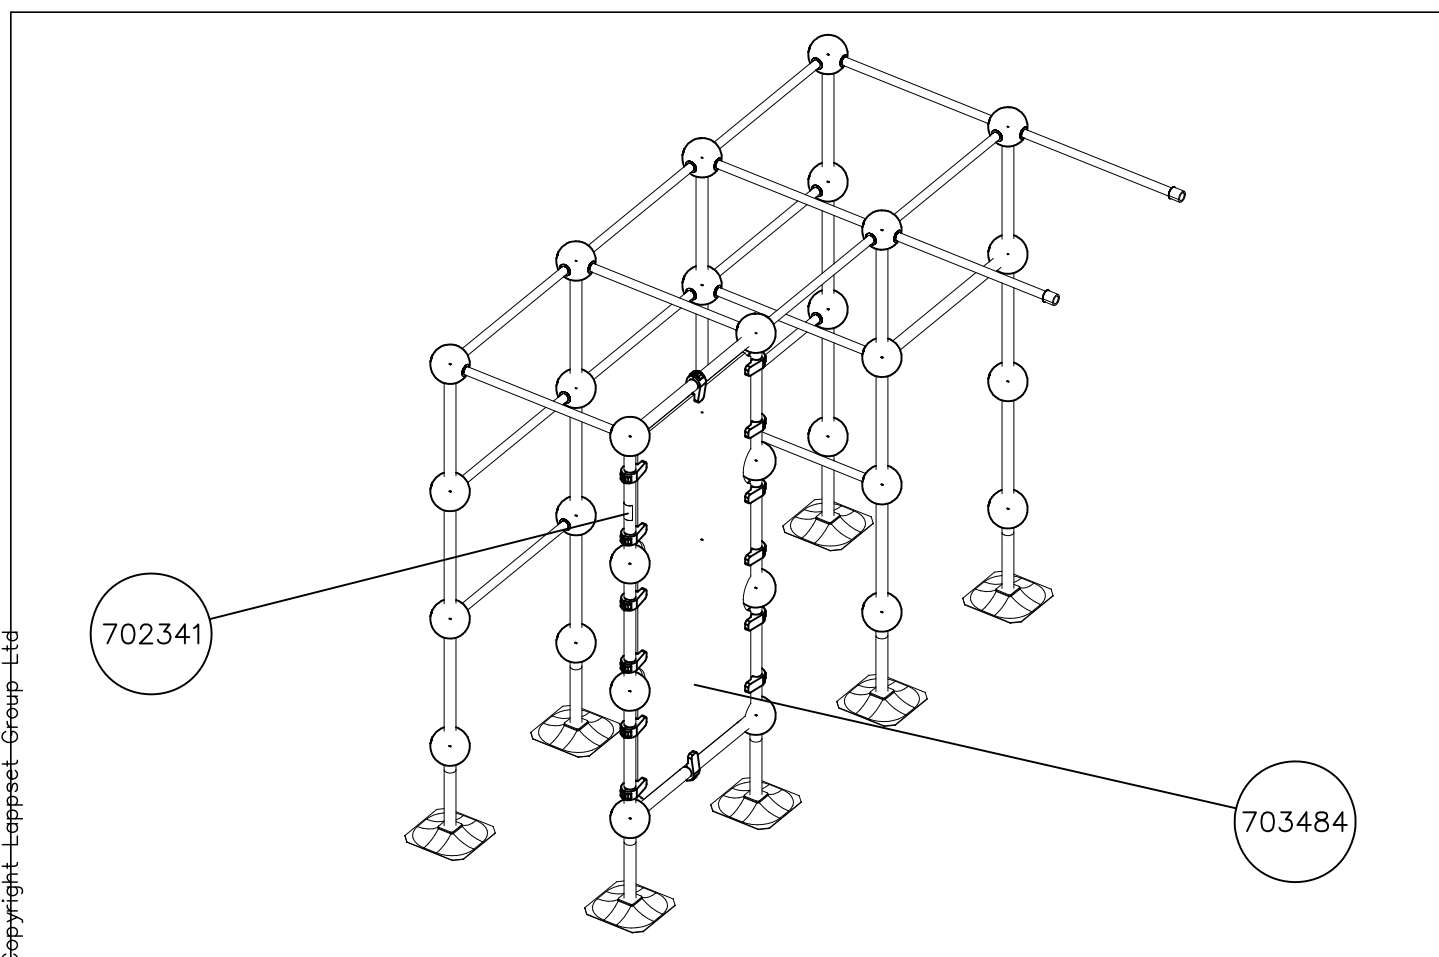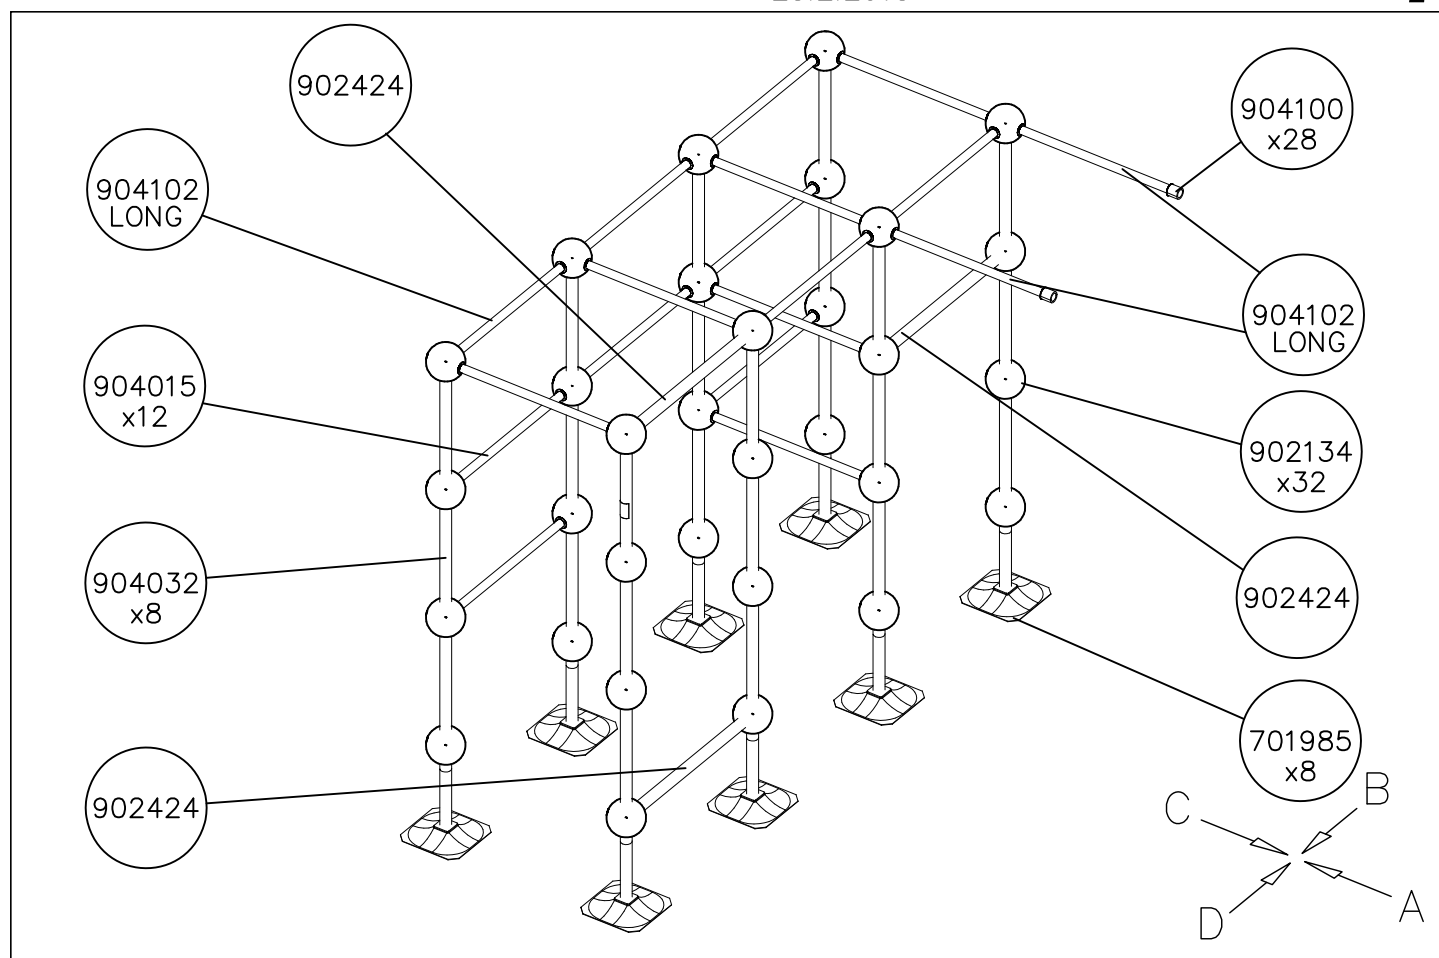

DATE: 23.2.2015

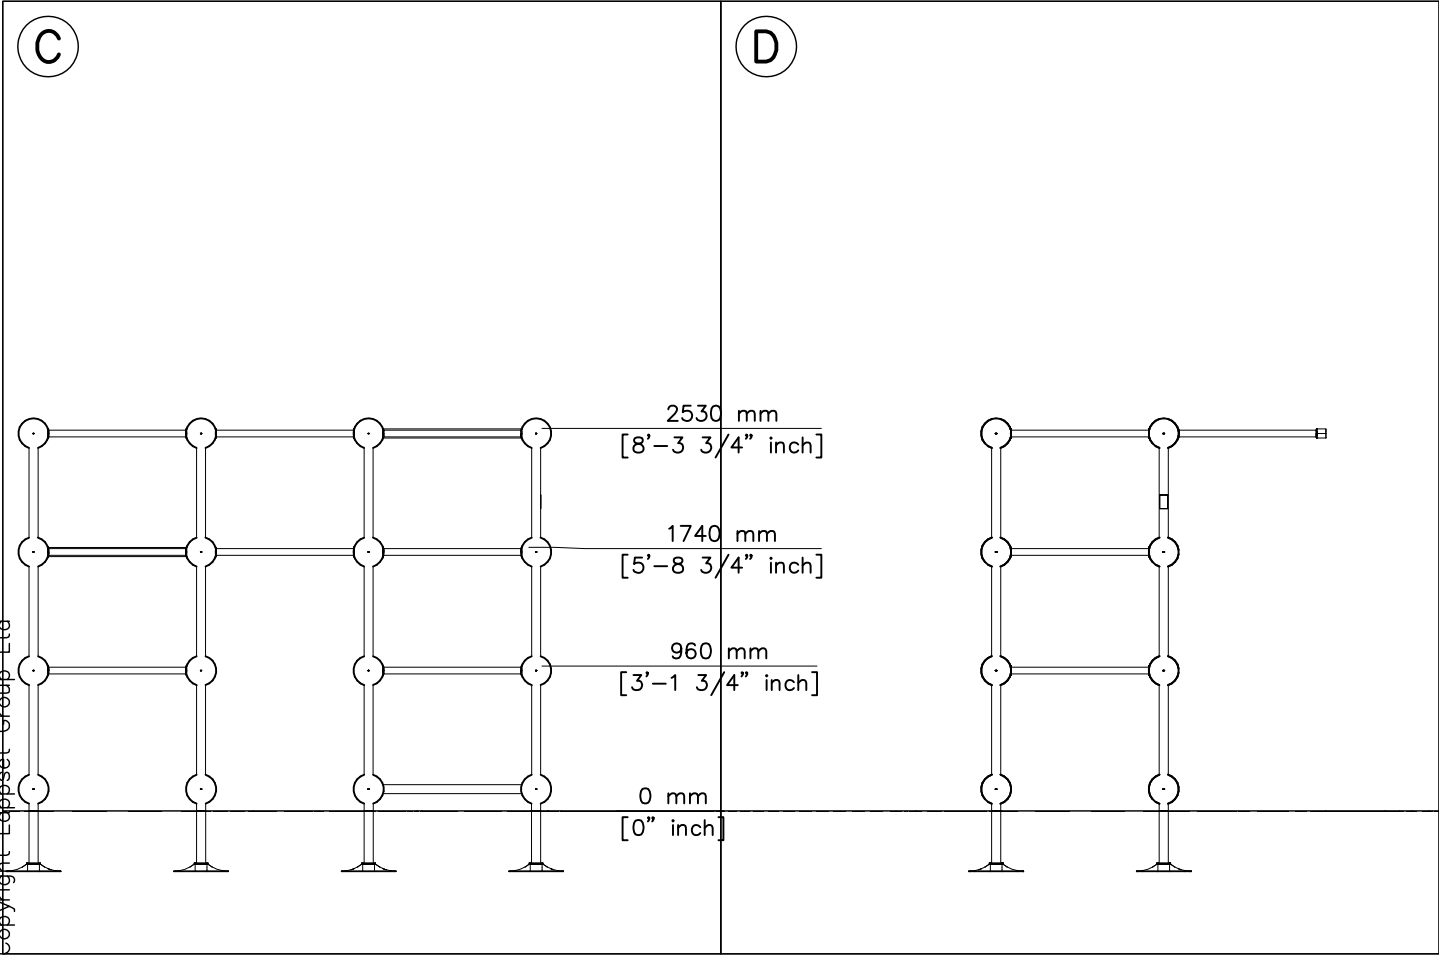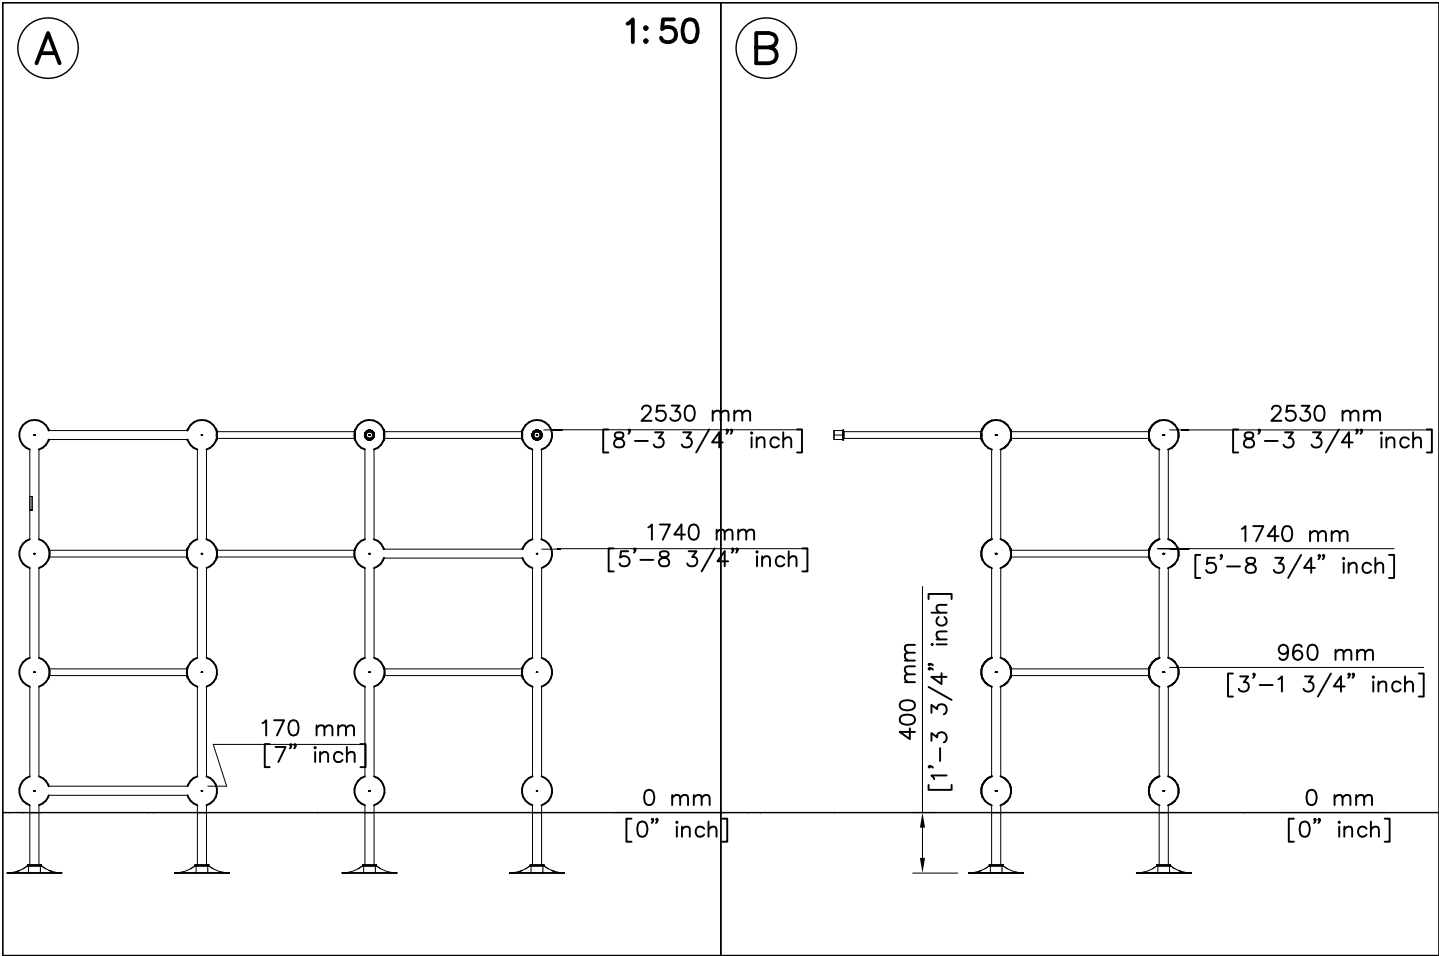


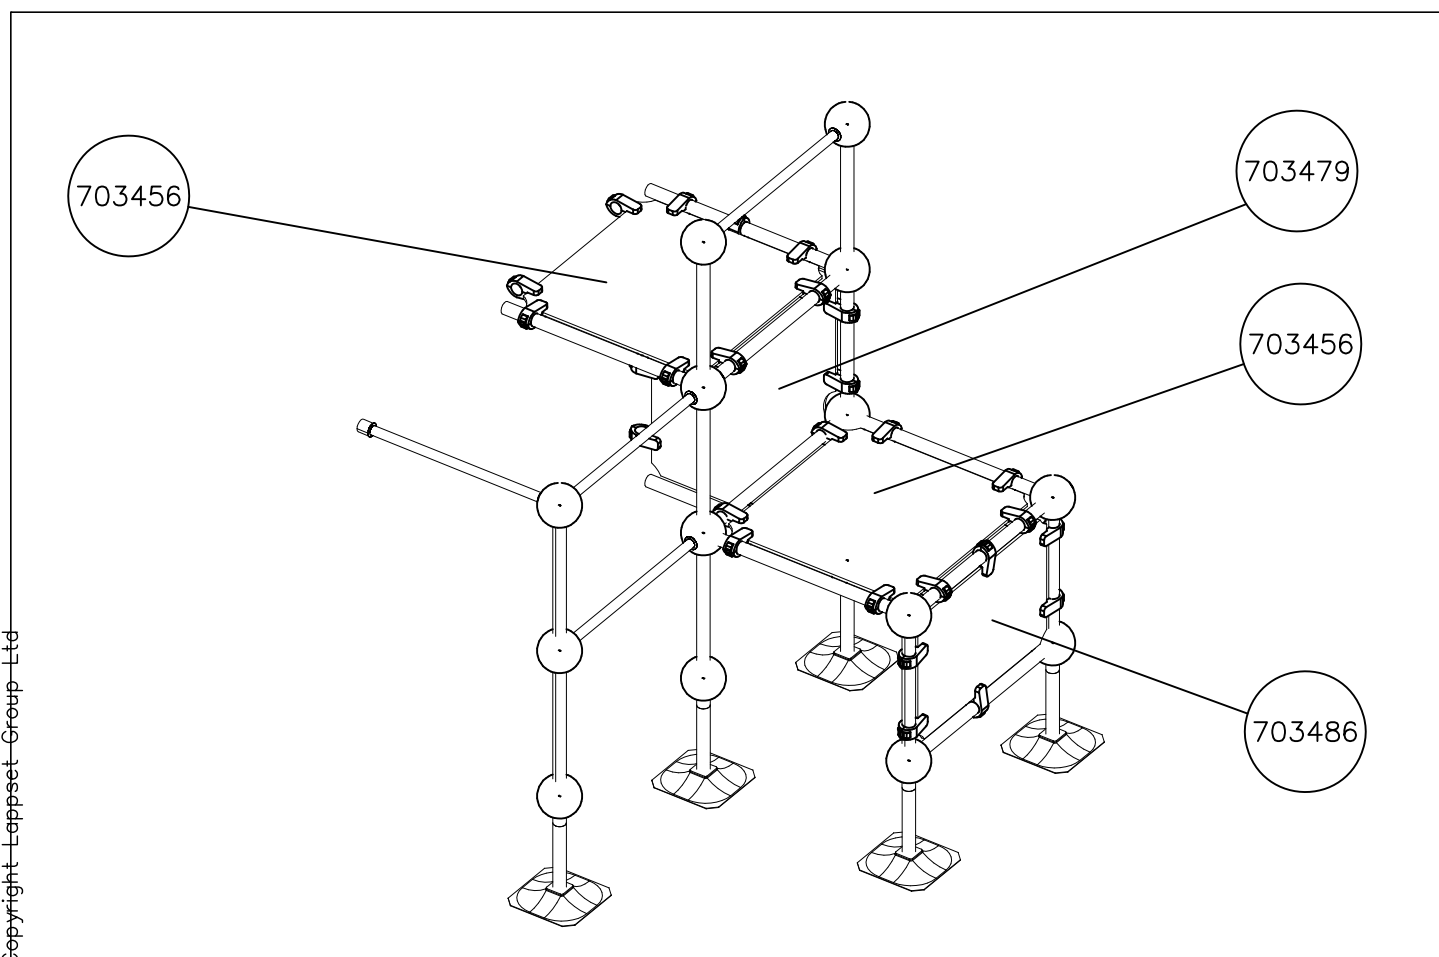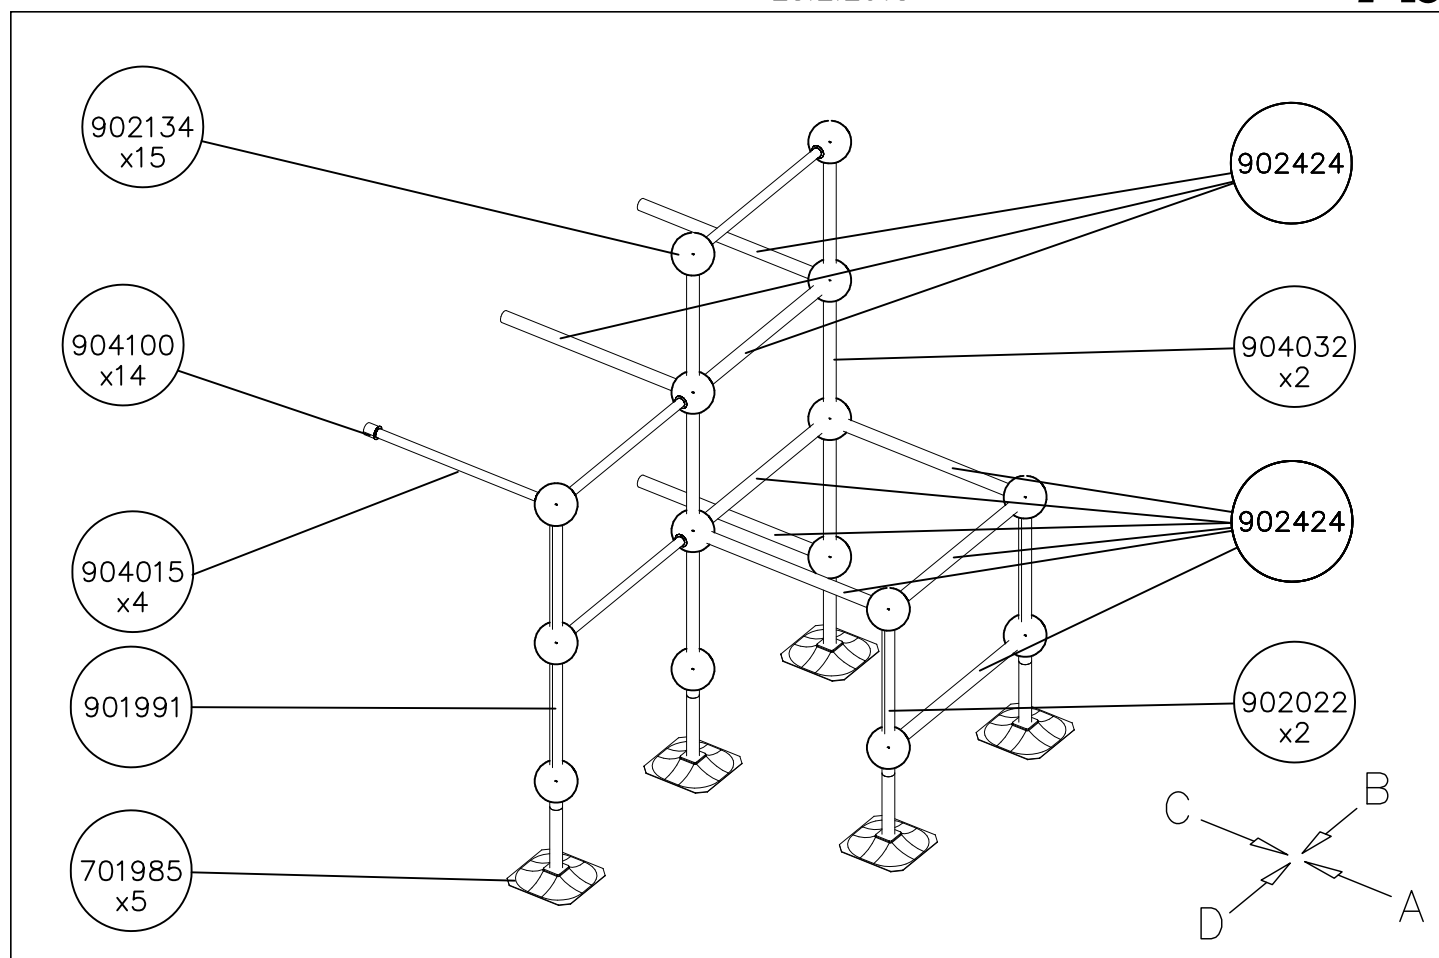


DATE: 23.2.2015

1:50


A

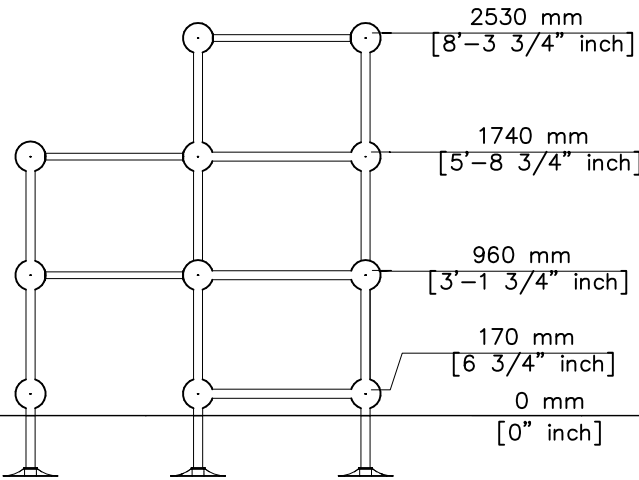


B

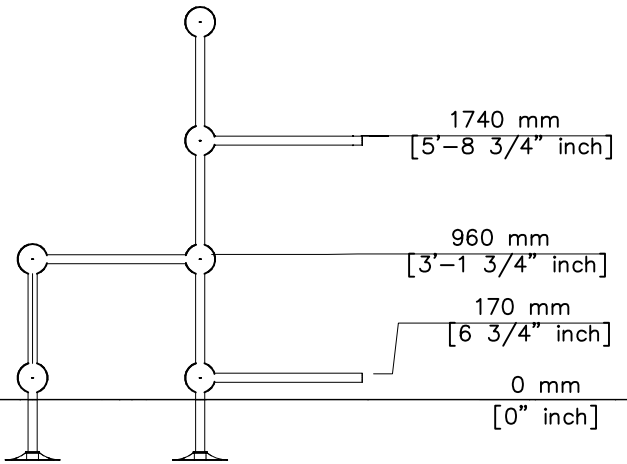



C

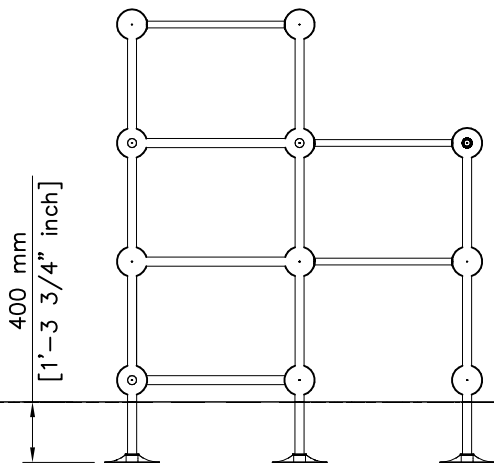


D

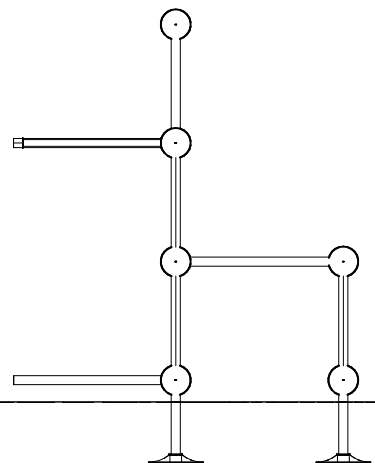


Max Falling Height 2530 mm

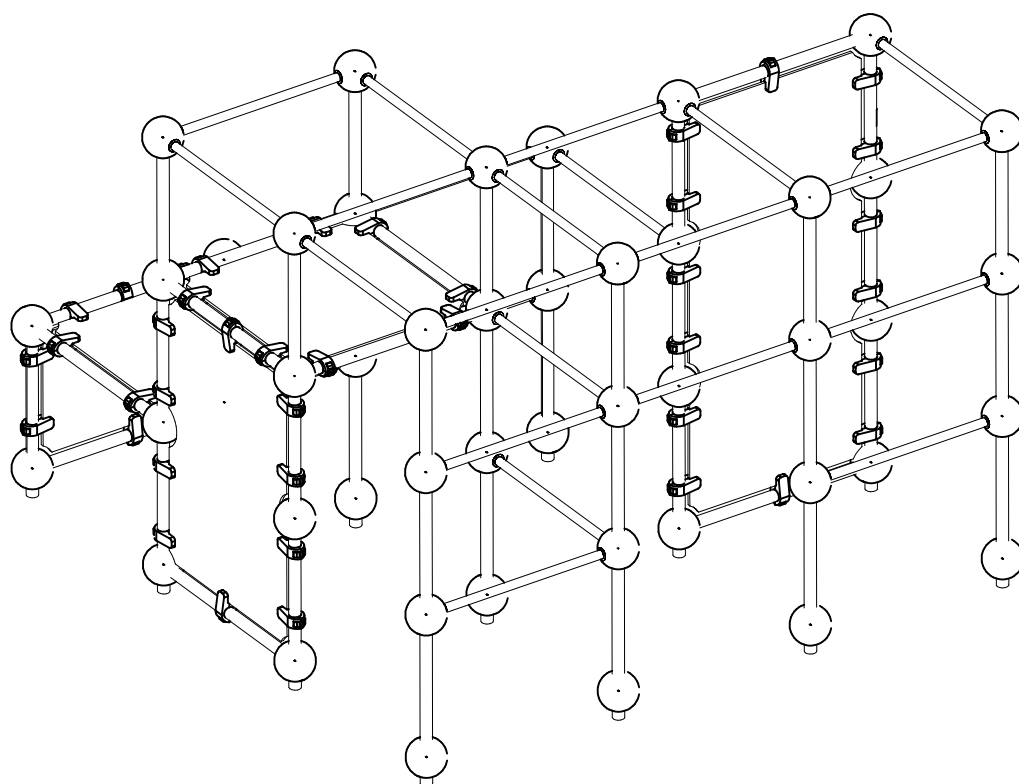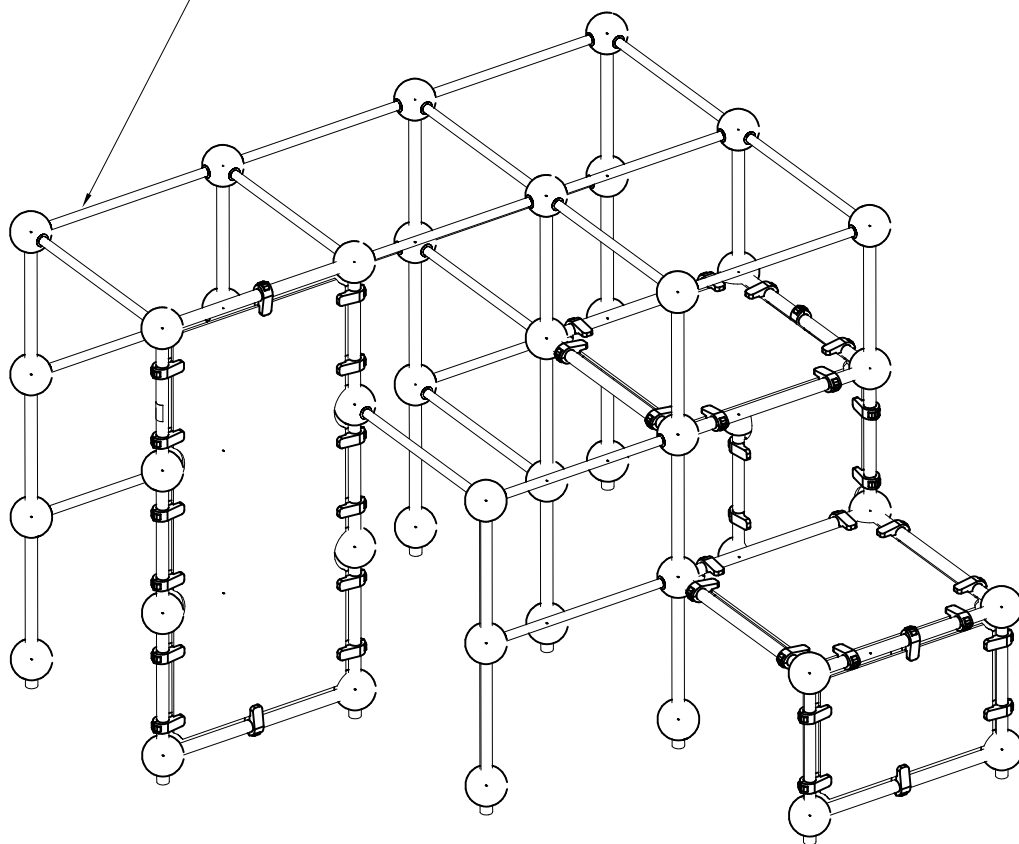

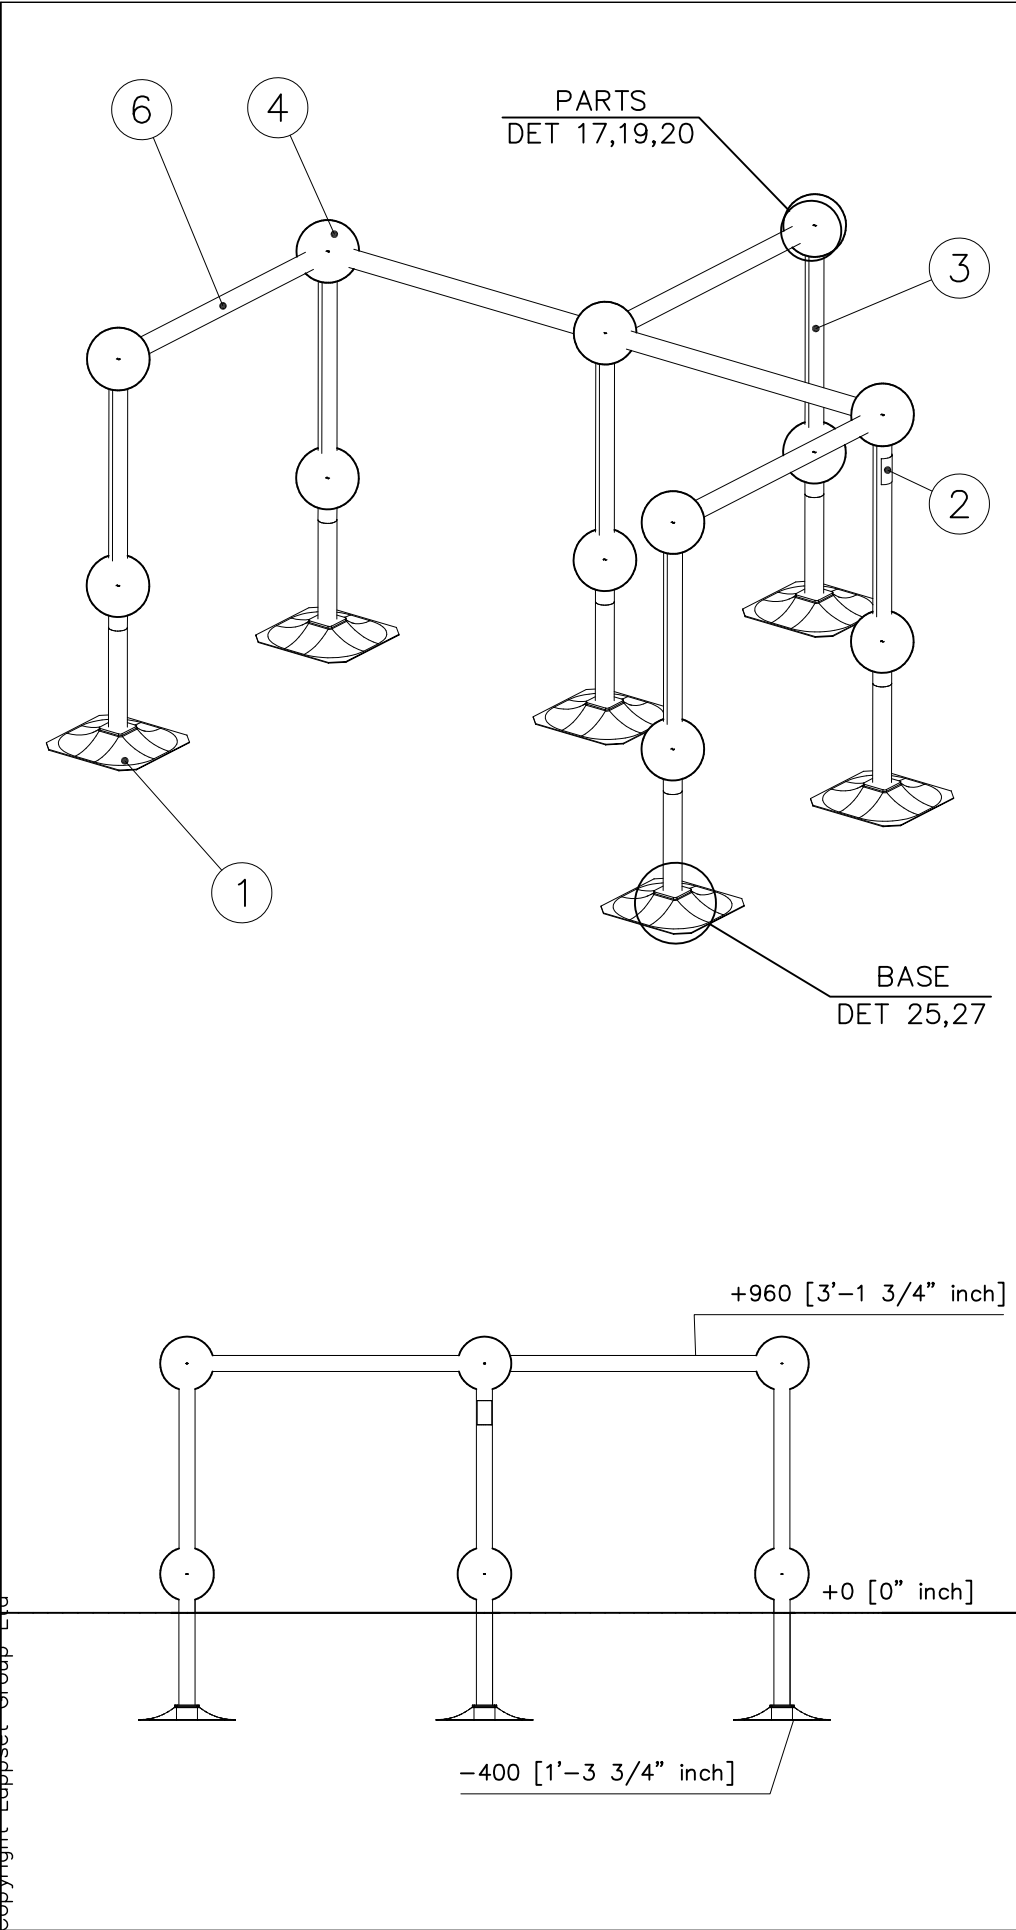

① 701985	PCS	② 702341	PCS
	6		1
③ 902022	PCS	④ 902134	PCS
	6		12
⑤ 902157	PCS	⑥ 902424	PCS
	44		5
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS

EN/AS Impact Area 21.9 m² (235.7 sq ft)
Falling Space Area 21.9 m² (235.7 sq ft)
Max Falling Height 960 mm (3' - 1 3/4" in)

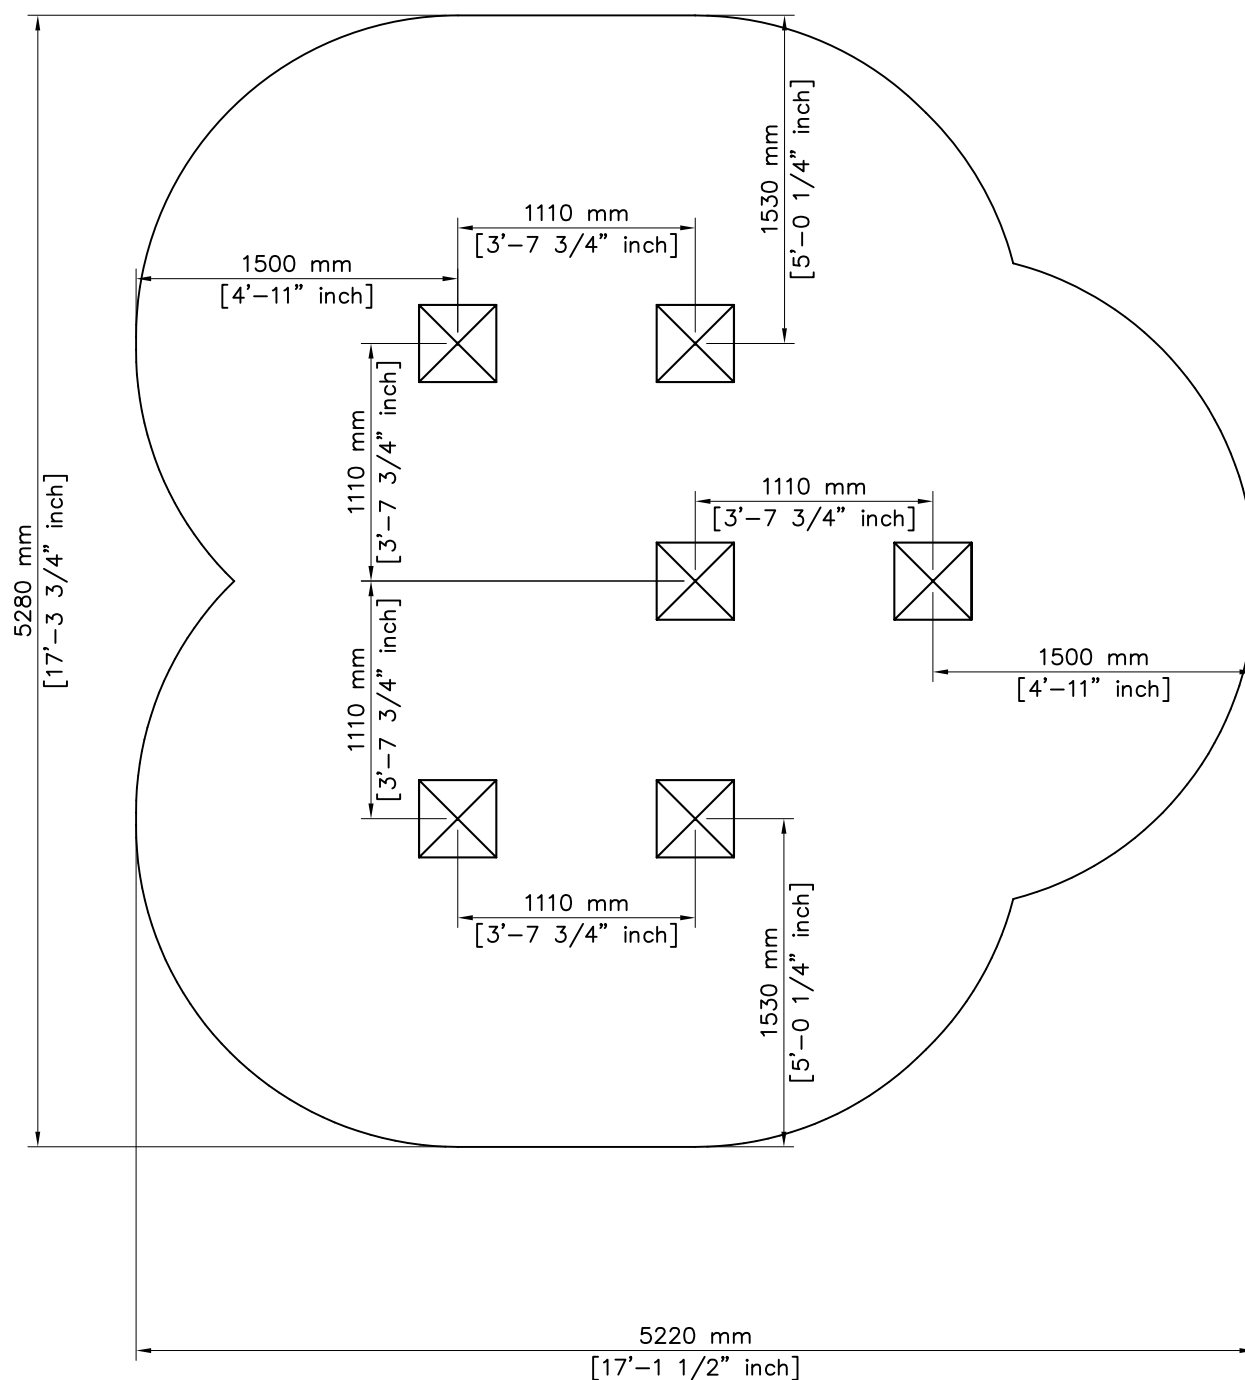


LAPPSET®



















PARKOUR

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION




REF: 220505
DATE: 21.7.2020

220505



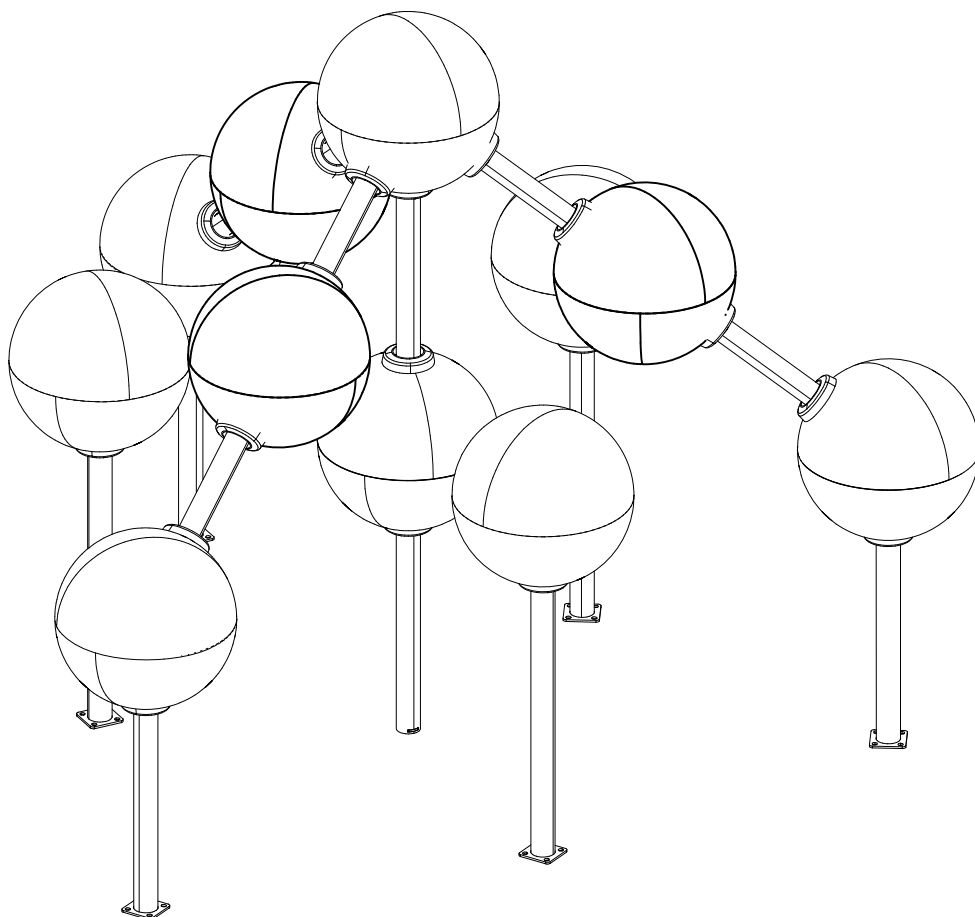


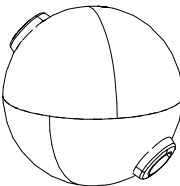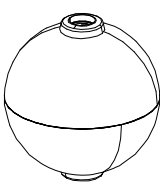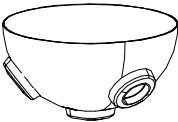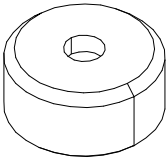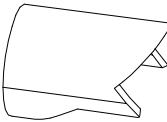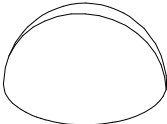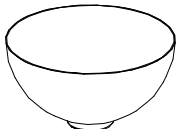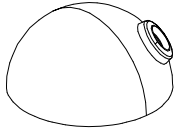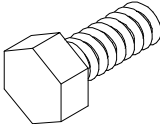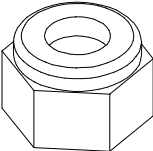709770  Black	PCS 3	709771  Ø450	PCS 1	709772  YELLOW	PCS 1	709773  Ø450	PCS 3	908458  90x90x1934	PCS 1	908456  Ø60x2,5x1500	PCS 3
908460  90x90x1005	PCS 3	911353  Ø77x36	PCS 4	908455  Ø19x2x26	PCS 6	904111 	PCS 1	908592  Ø450x225	PCS 3	908593  Ø450x225	PCS 3
909639  M10x25	PCS 12	909638  Ø20/10.5	PCS 21	909637  M10	PCS 15	980151  Ø16/8.4	PCS 1	909274  M8x30	PCS 1	702341  90x50	PCS 1
909519  50x380x380	PCS 4	909868  M8x50	PCS 1	911354  M8x90	PCS 3	709910  M8x85	PCS 1	903238  M10x140	PCS 3		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS





Copyright Lappset Group Ltd

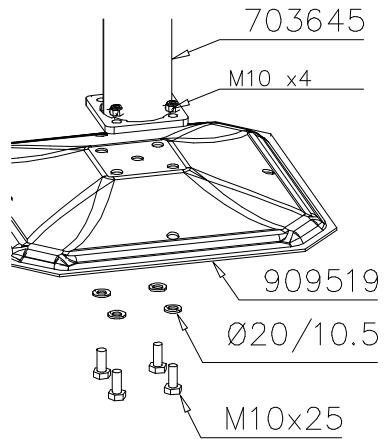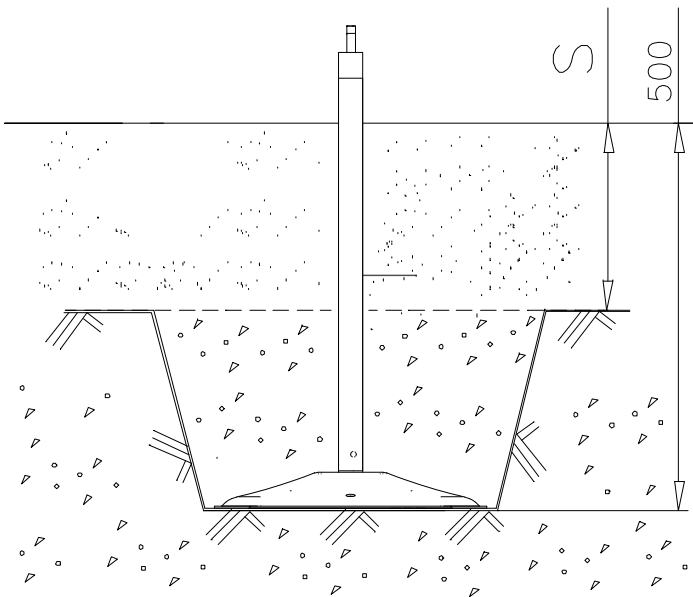
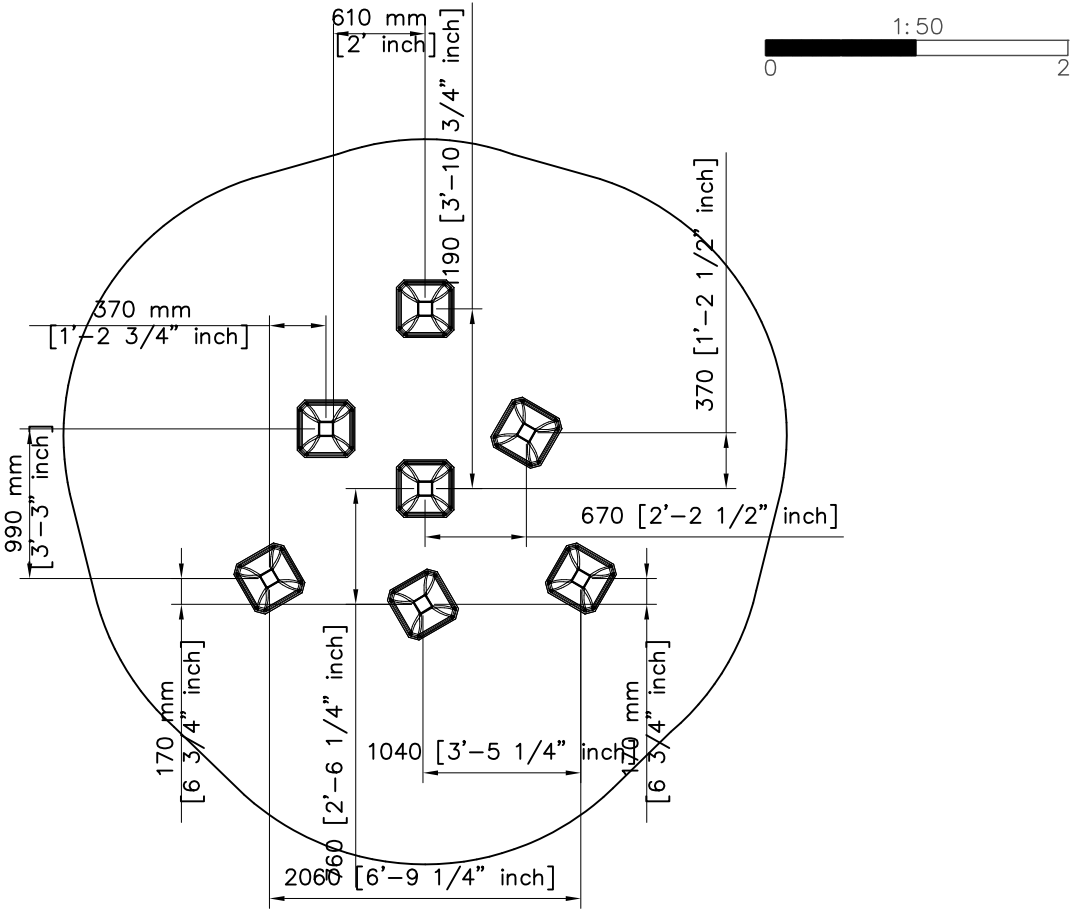


EN Impact Area 17.7 m2 (194 sq ft)
 ----- Falling Space 22 m2 (234 sq ft)
 Max falling height 1510 mm. (4'-11 1/2" in)

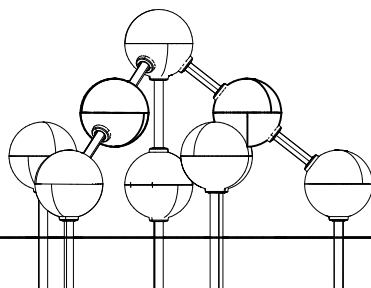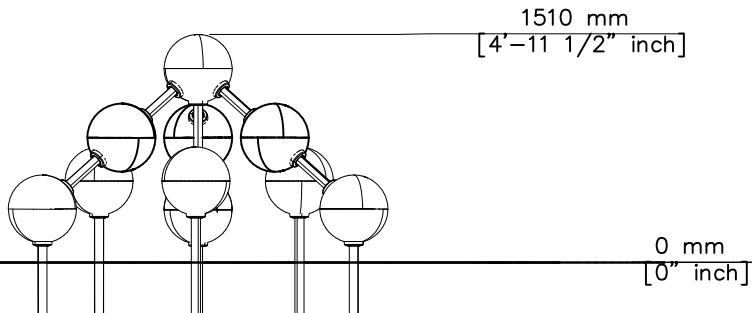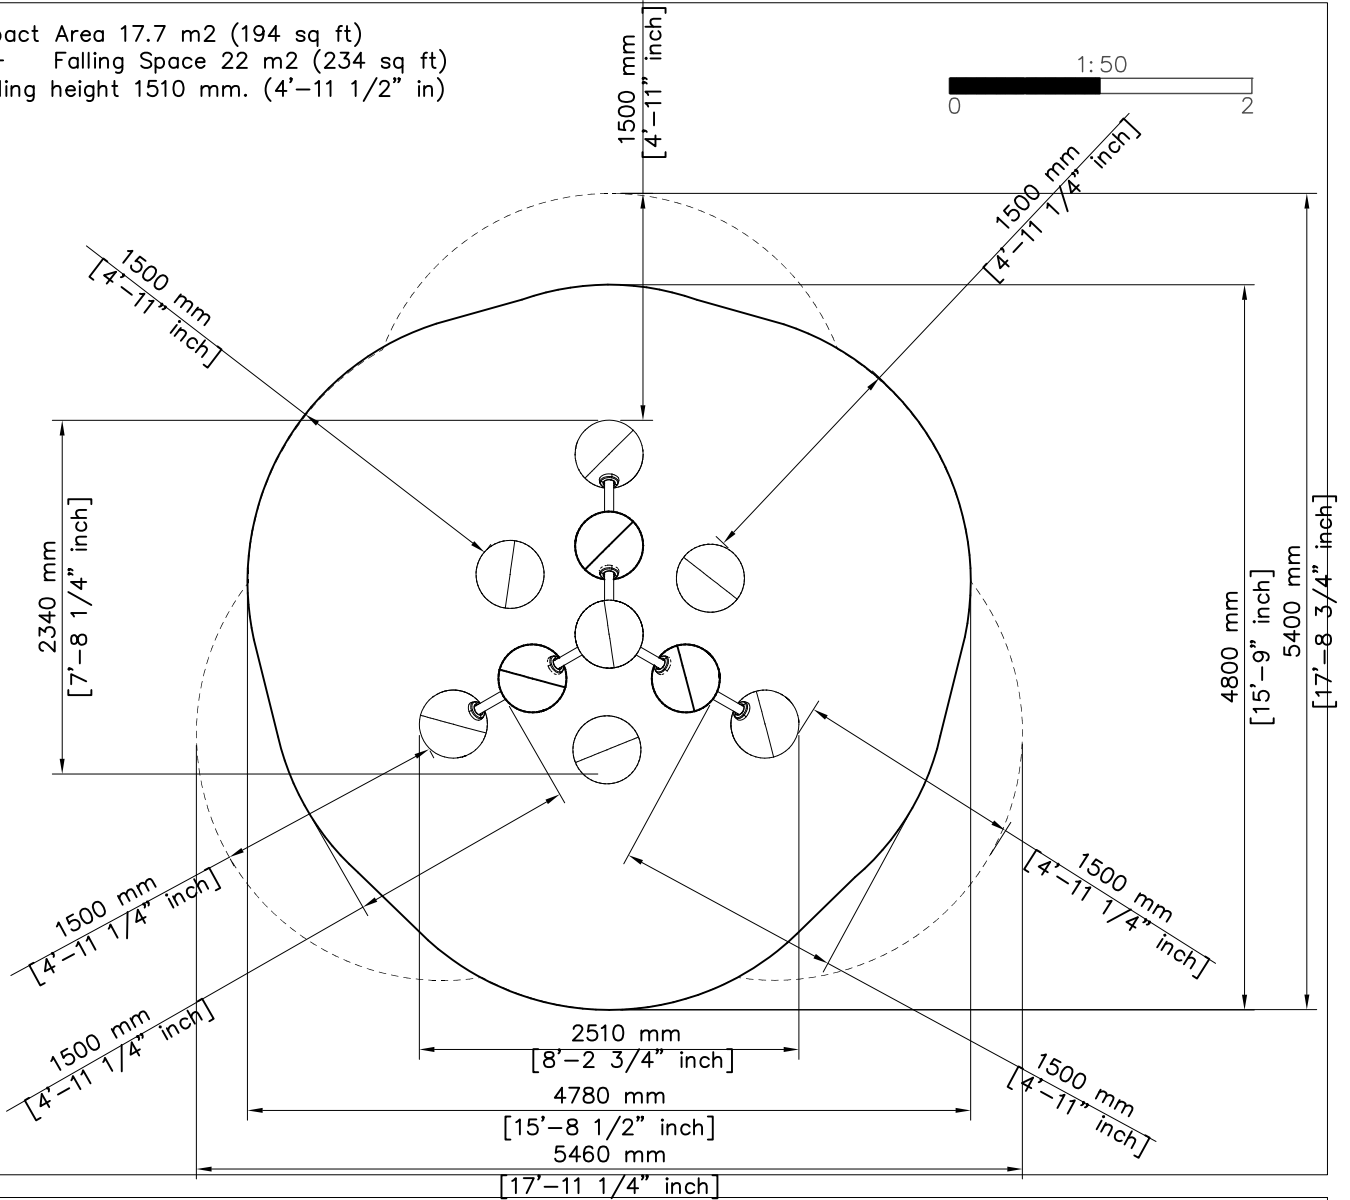


AS Impact Area 22 m2 (234 sq ft)
Max falling height 1510 mm. (4'-11 1/2" in)

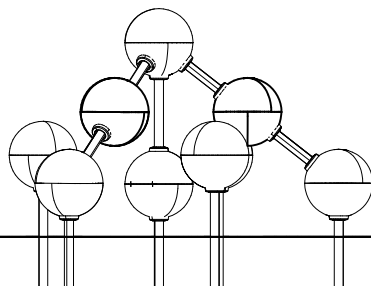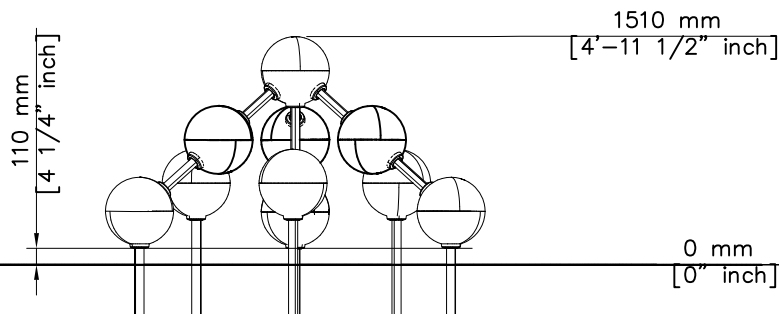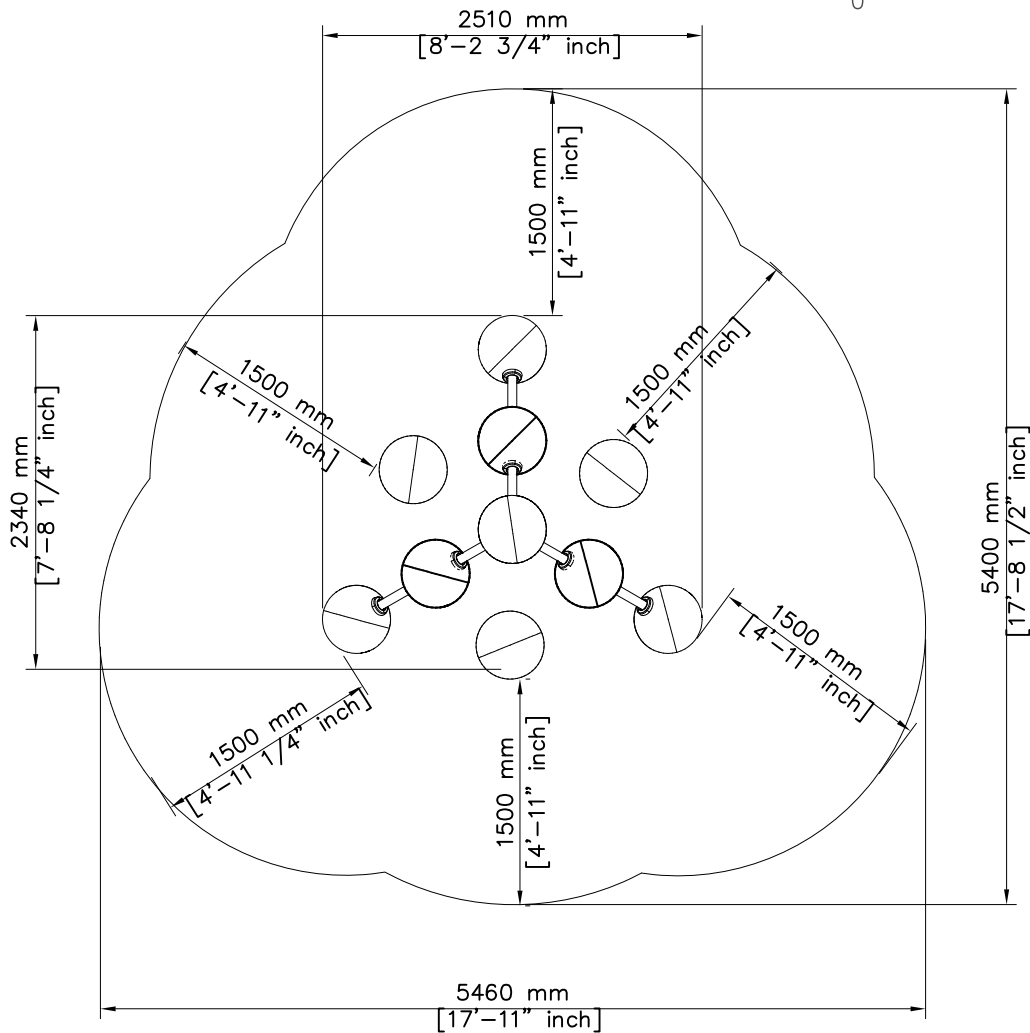


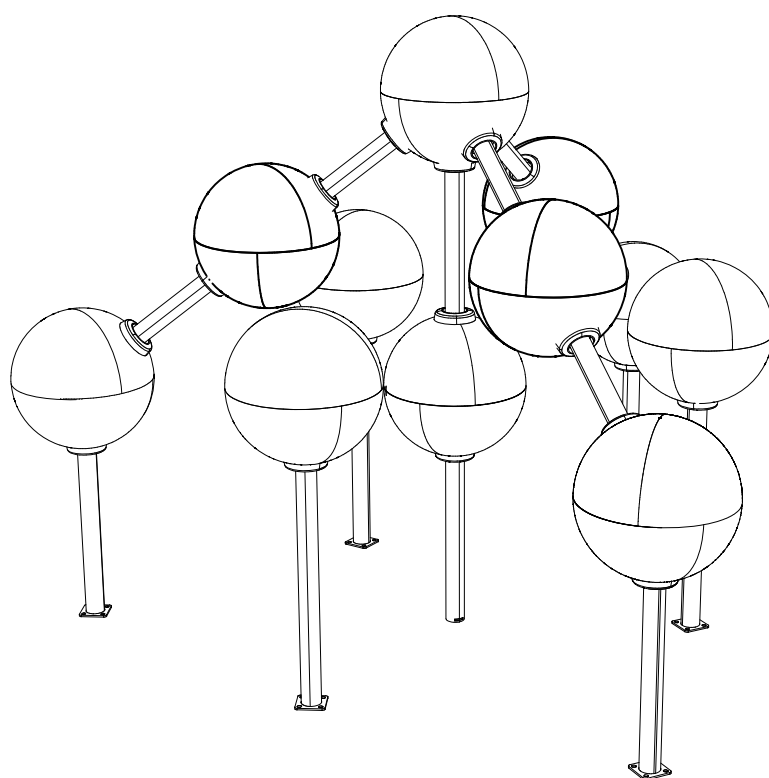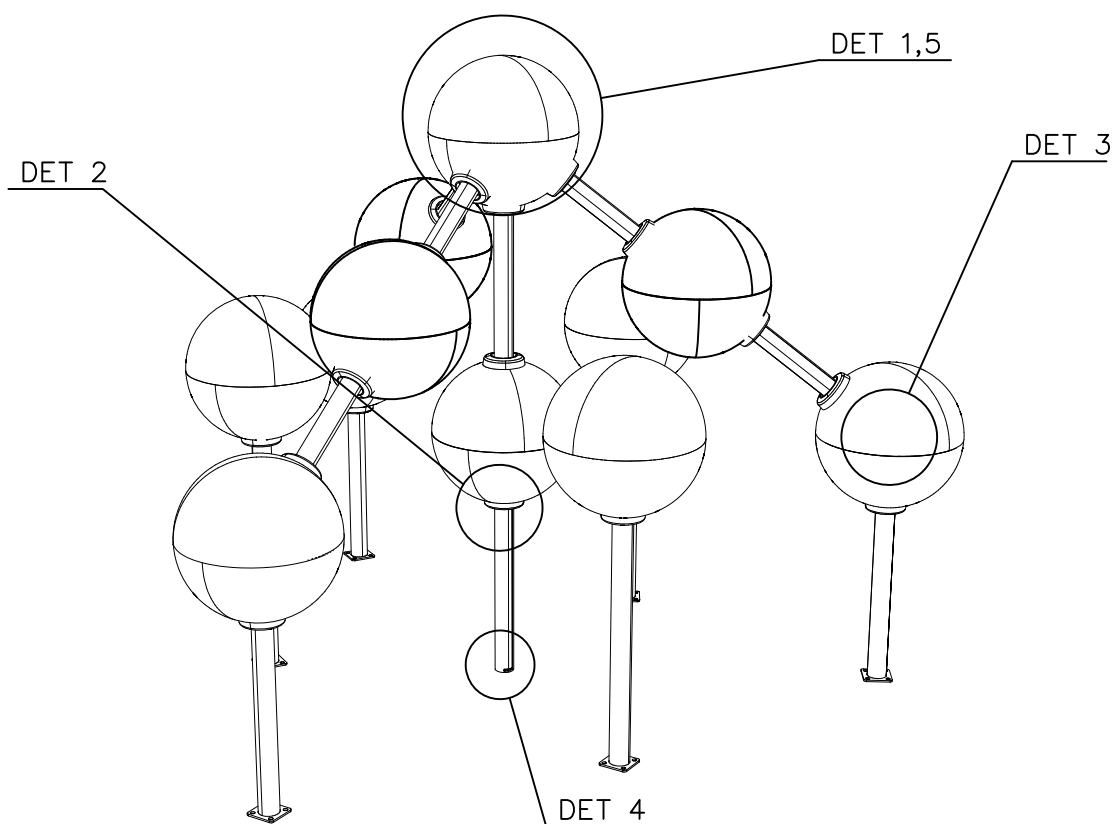


DET 1

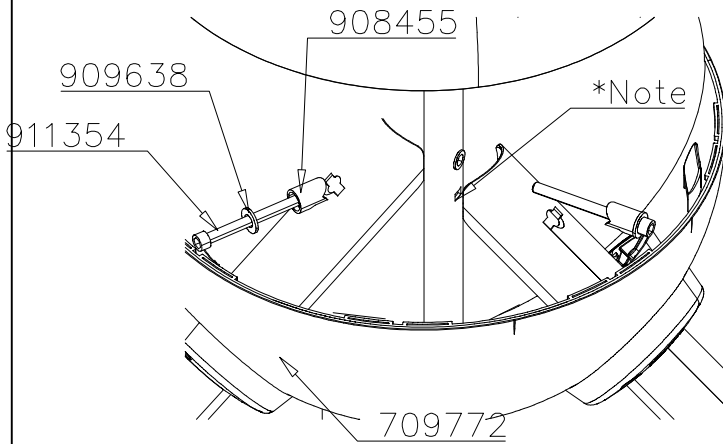


DET 2

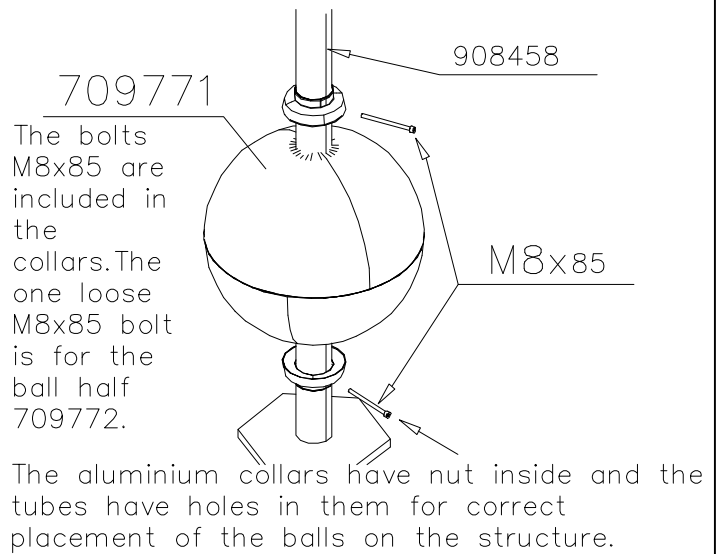


DET 3

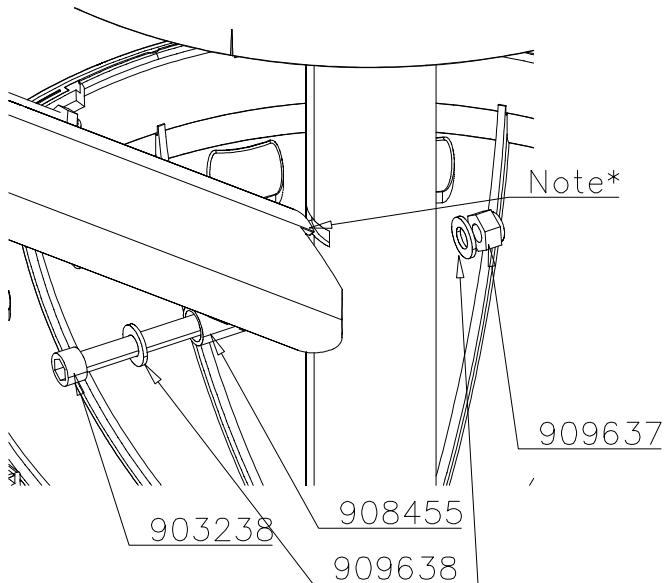

DET 4

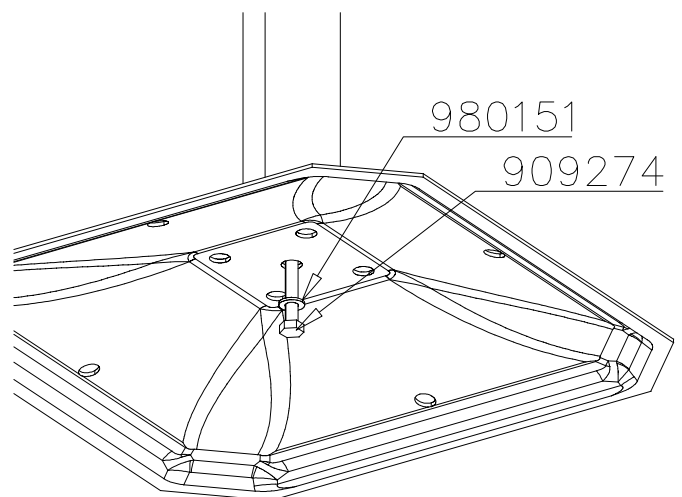

DET 5


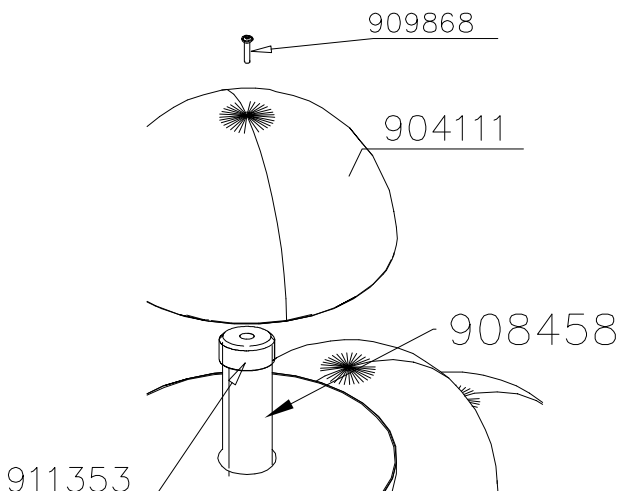


*Note

The wide "teeth" of tube 908456 goes downwards to element 908460, and thinner "teeth" upwards to middle tube

Slide the ball half 709772 from the foundation side of the center tube in place, then the middle ball 709771, and finally install the foundation foot.

911353 is placed on top of 908458 and tubes 908460

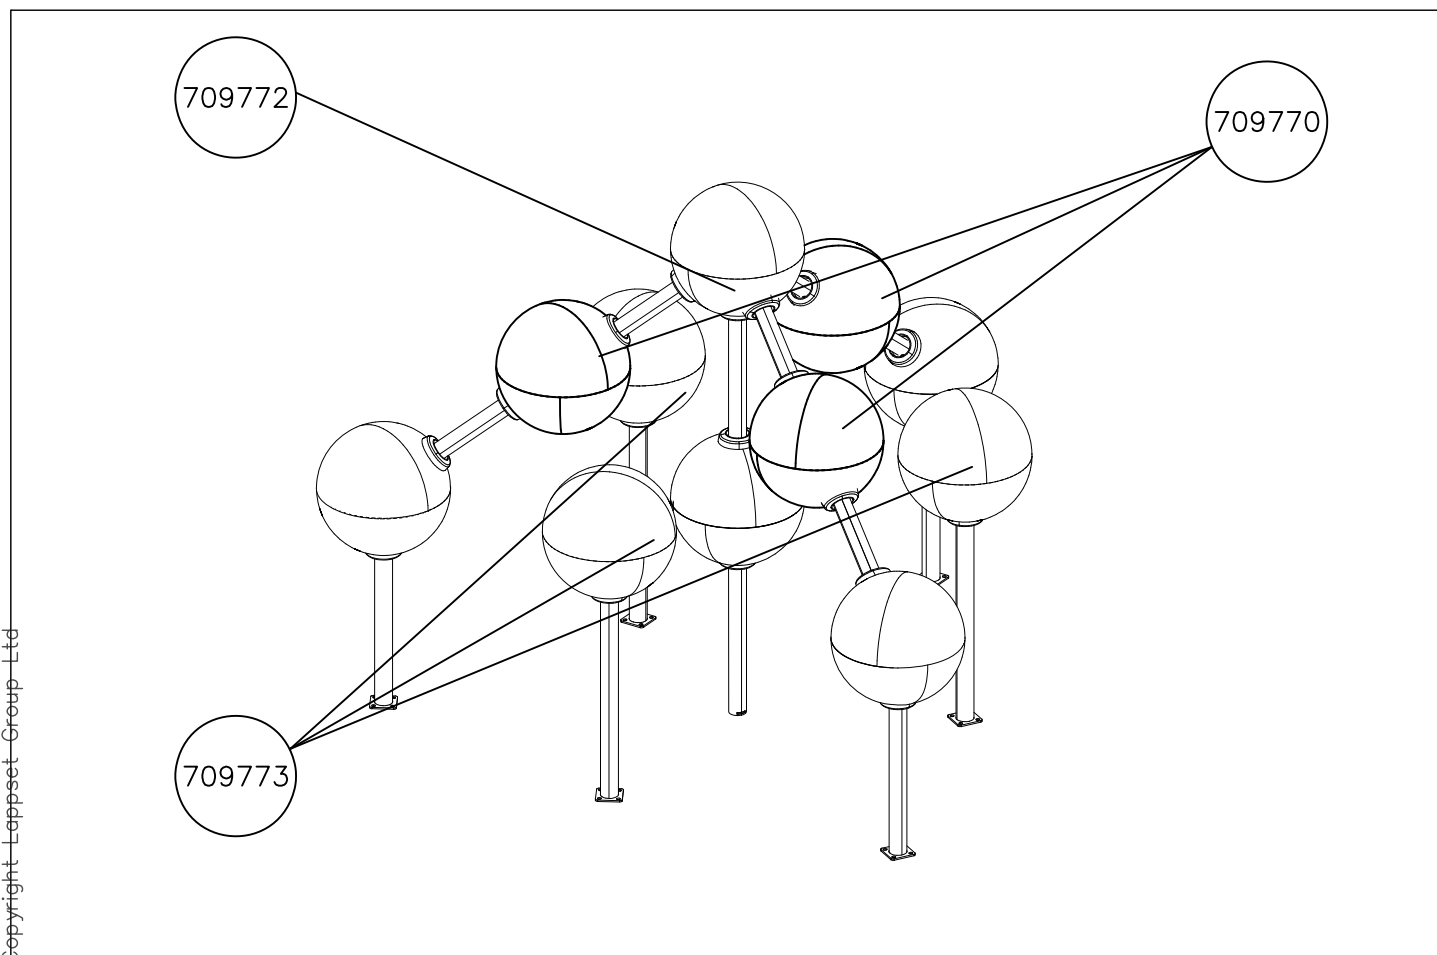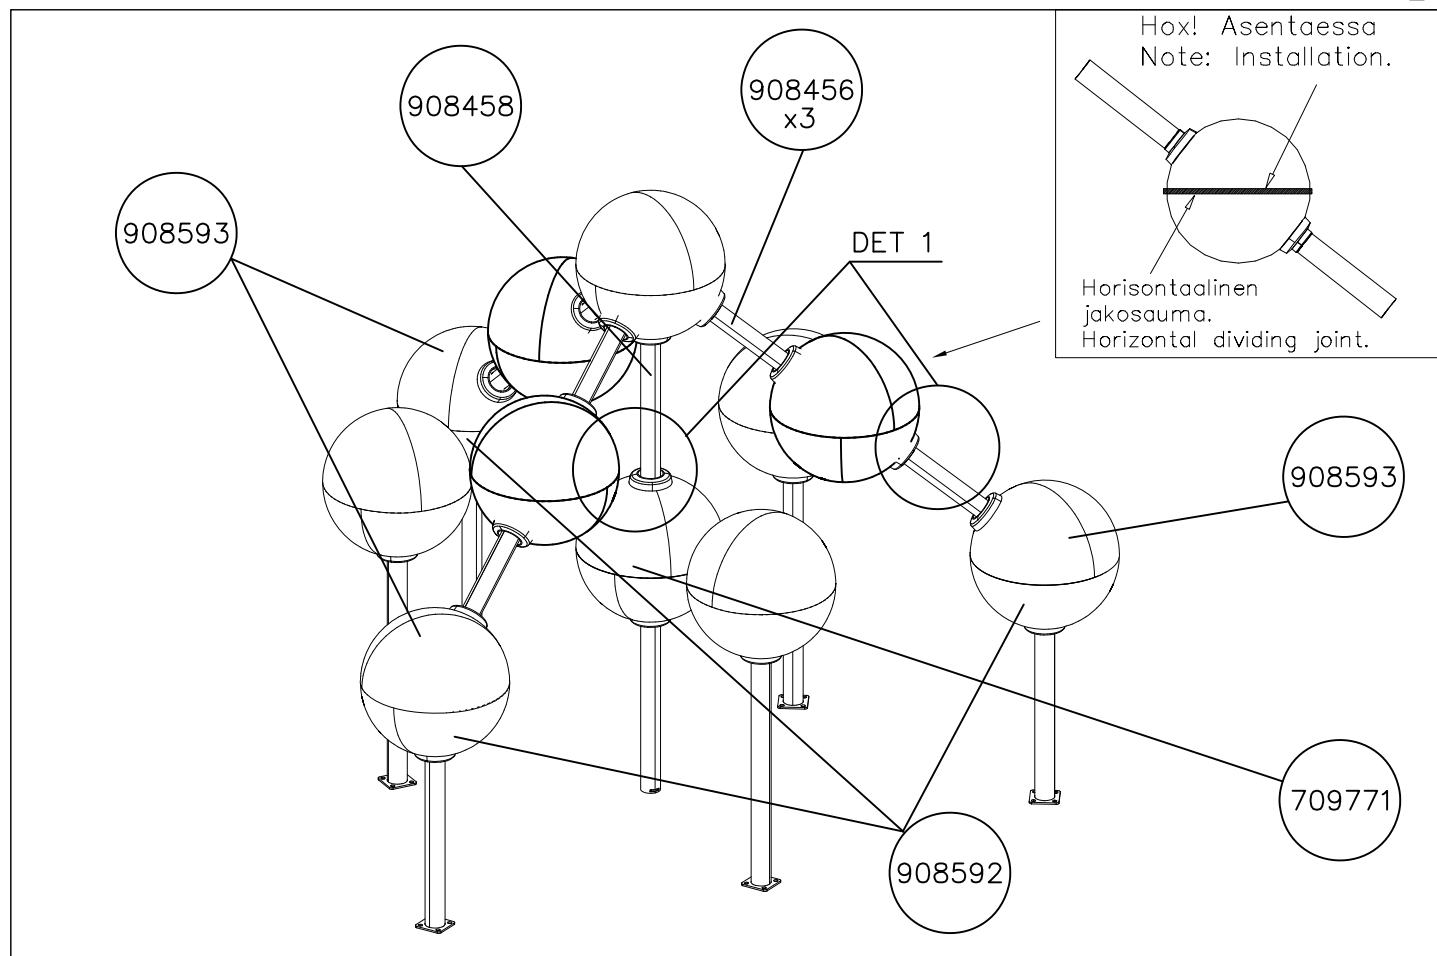


LAPPSET®

PARKOUR







ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 23.2.2015



220531

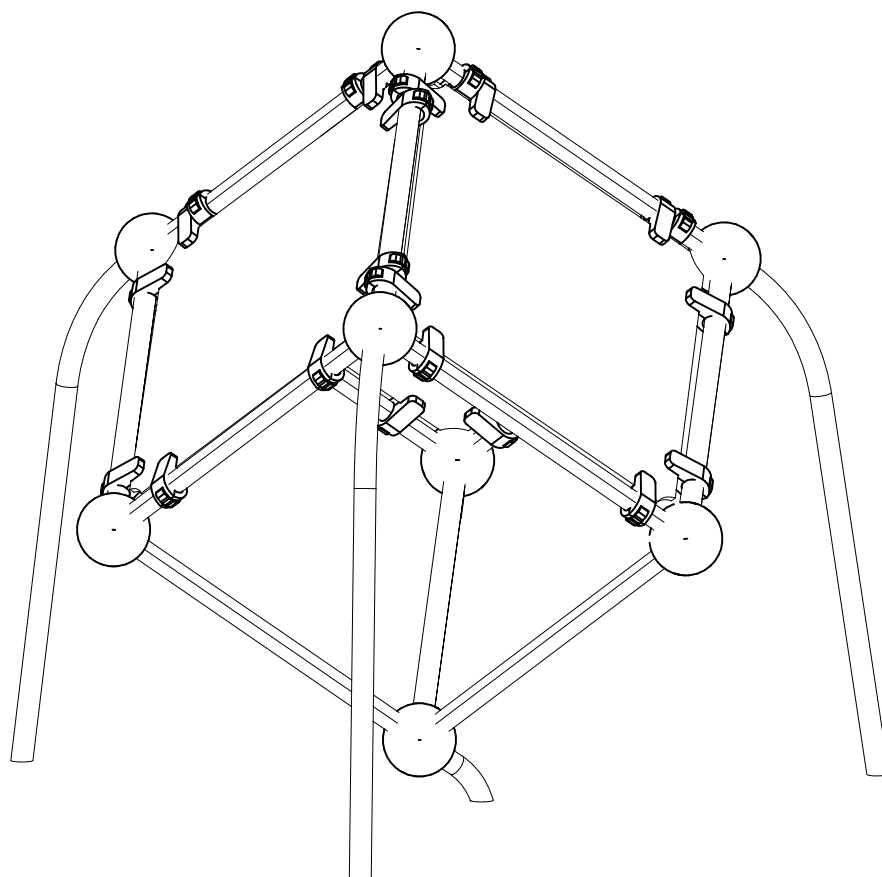



DATE: 23.2.2015

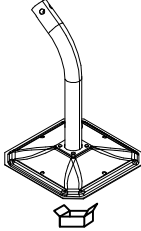

702341	PCS	703456	PCS	703459	PCS	703638	PCS	703640	PCS	902134	PCS
	1		2		1		1		3		8
90x50											
904747	PCS	902424	PCS		PCS		PCS		PCS		PCS
	20		12								
60x60x2		L 1034									
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS



EN/AS Impact Area 17.8 m² (192 sq ft)
Falling Space Area 17.8 m² (192 sq ft)
Grid size = 500 mm (20" in)

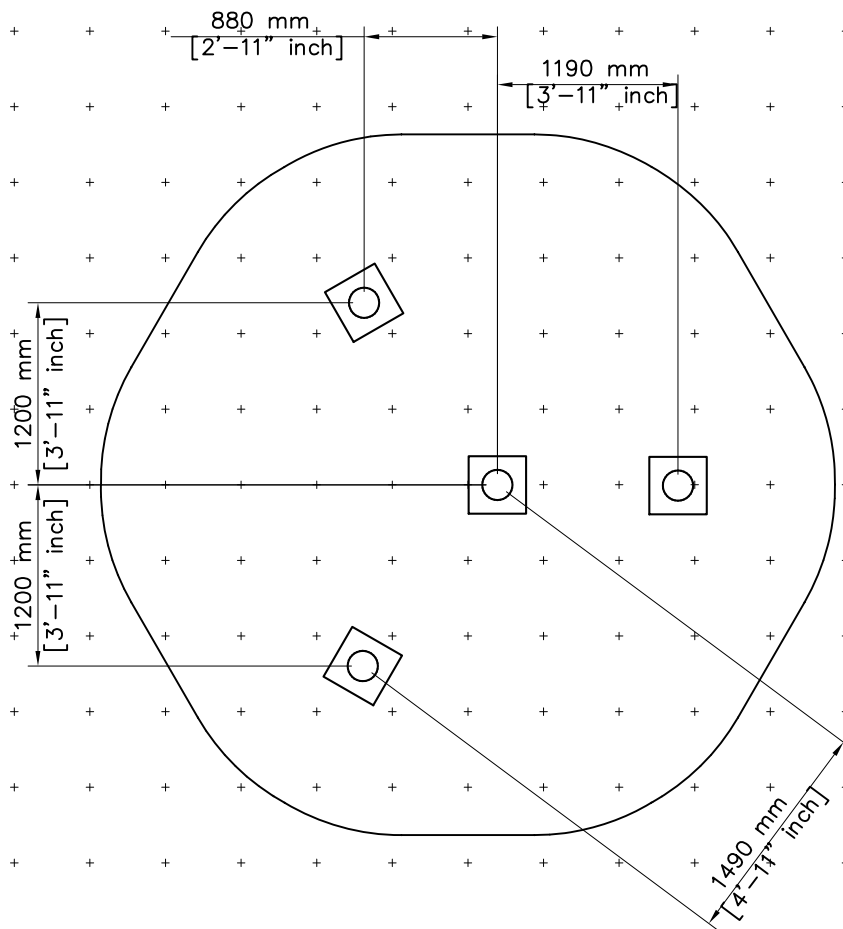



EN Impact Area 17.8 m² (192 sq ft)
Falling Space Area 17.8 m² (192 sq ft)
Max Falling Height 2190 mm (7'-2" in)

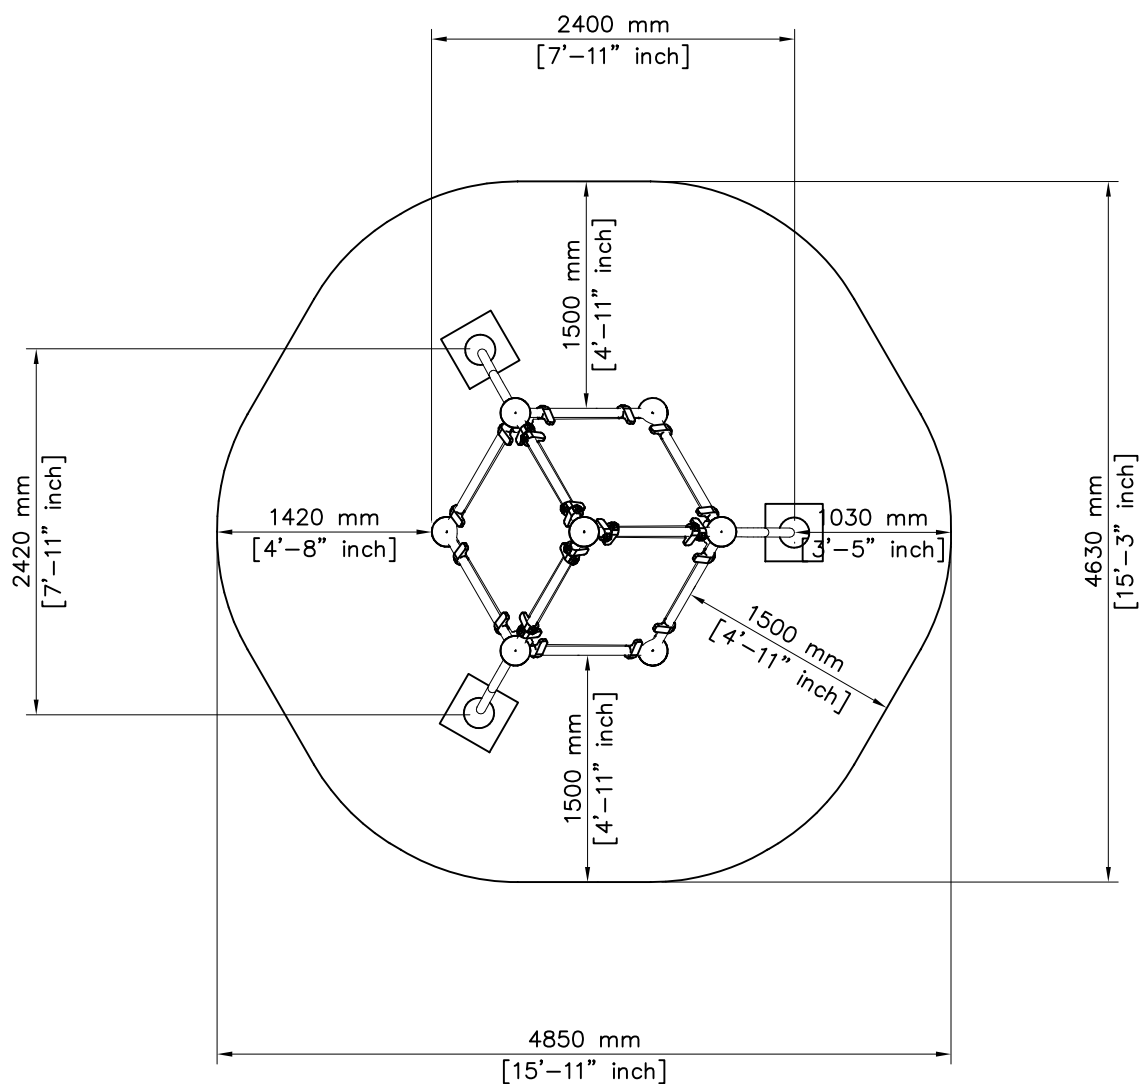




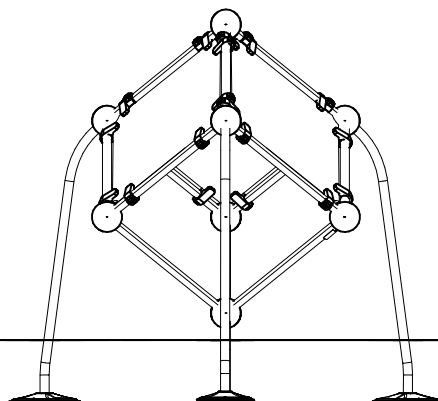
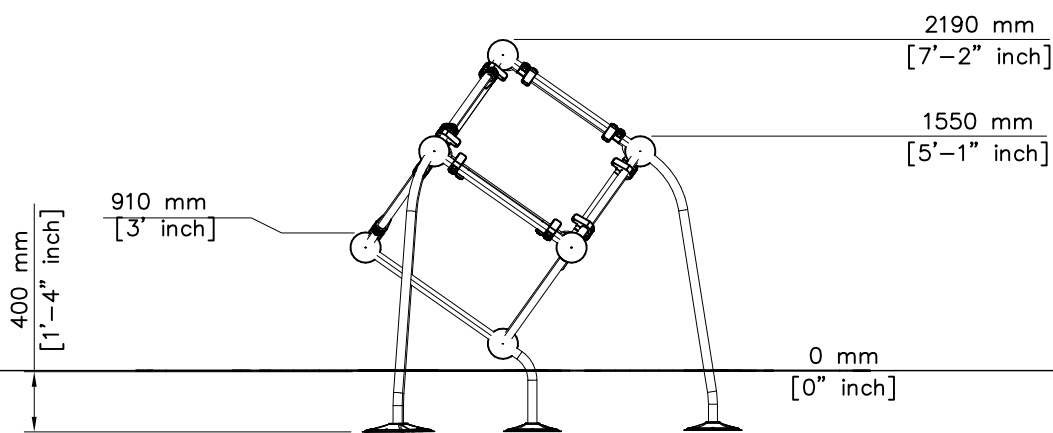





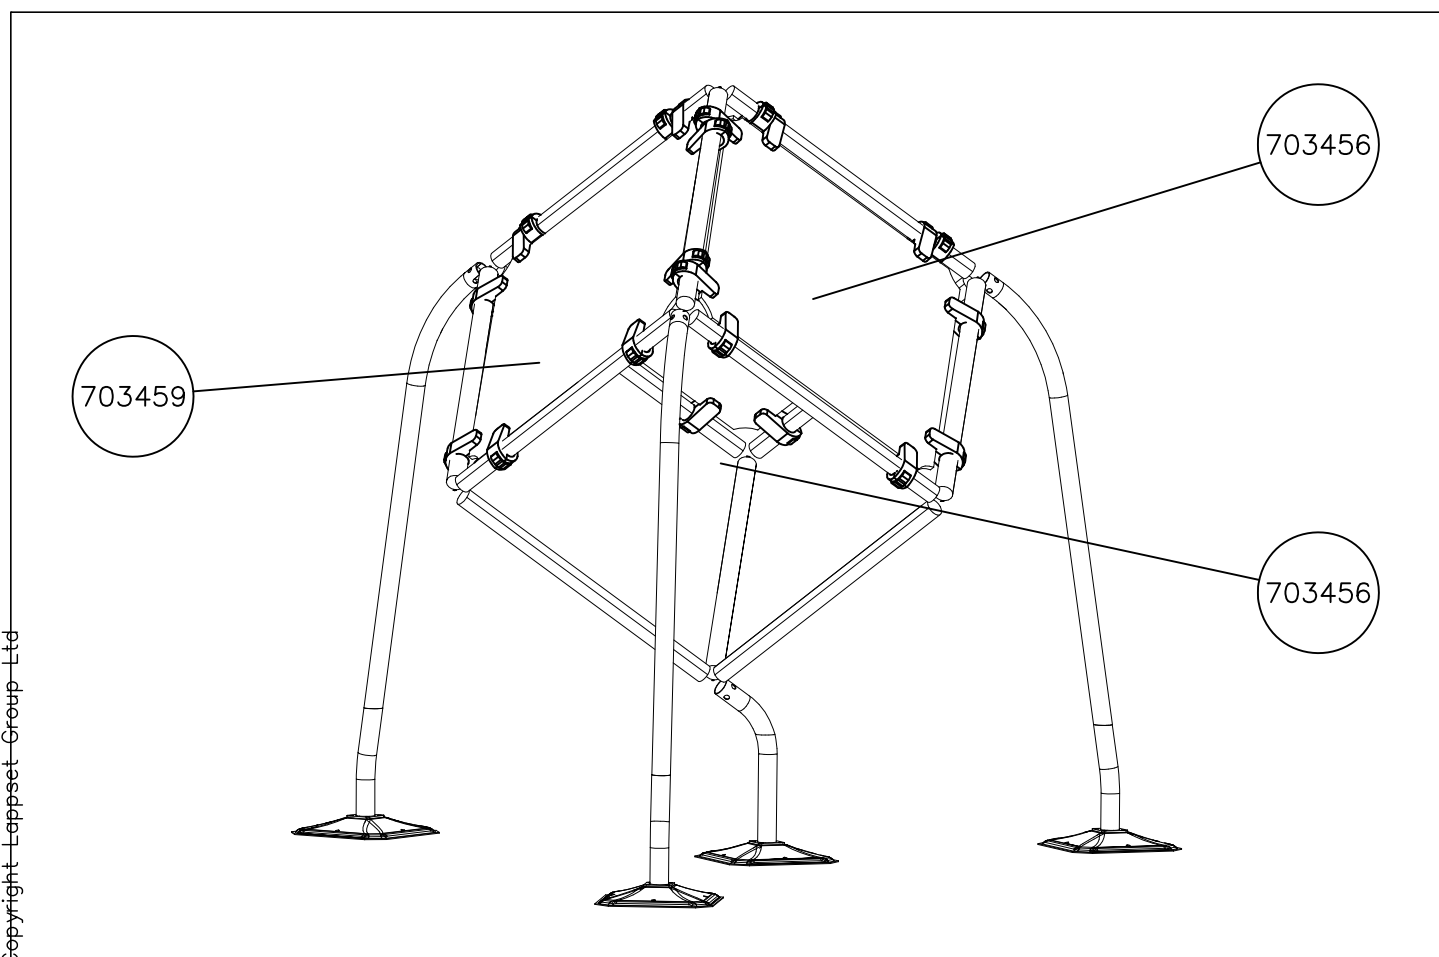
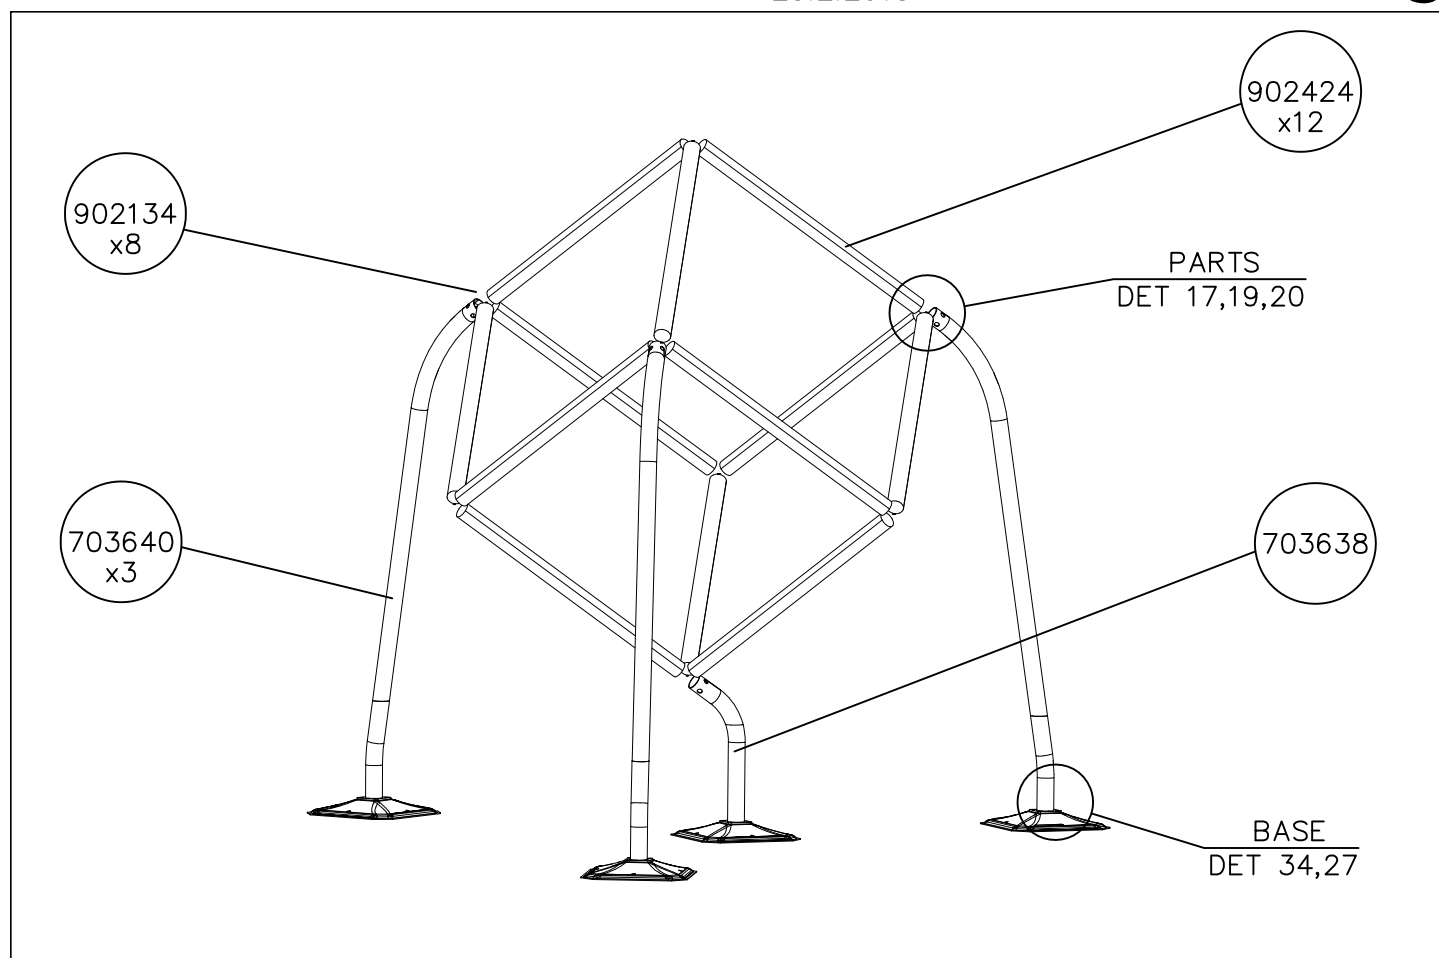


Max Falling Height 2190 mm

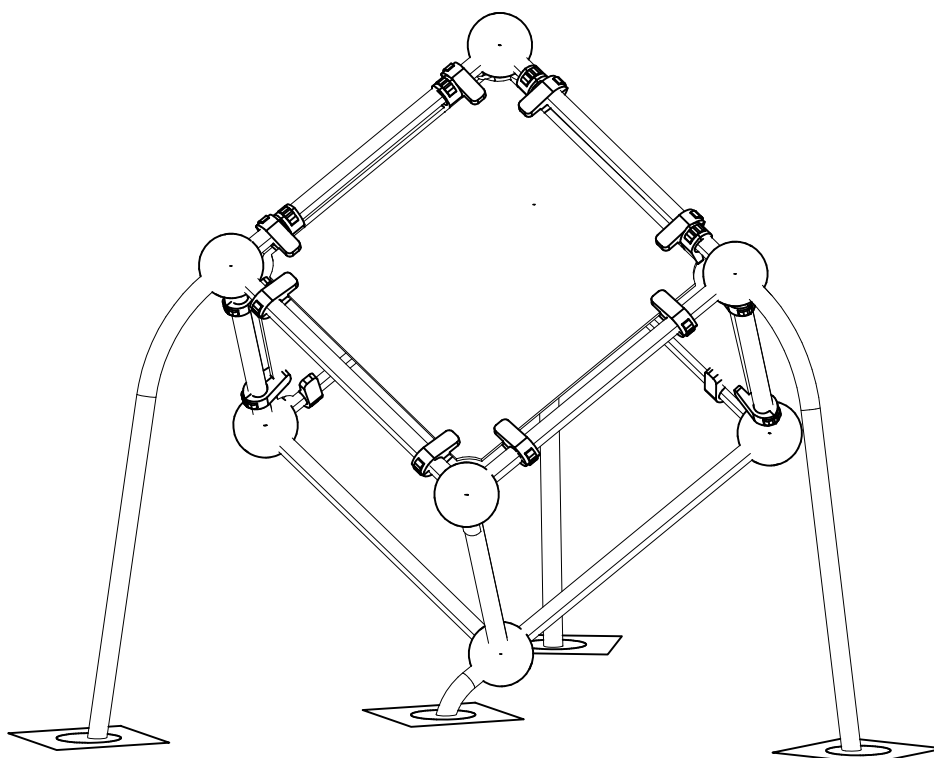
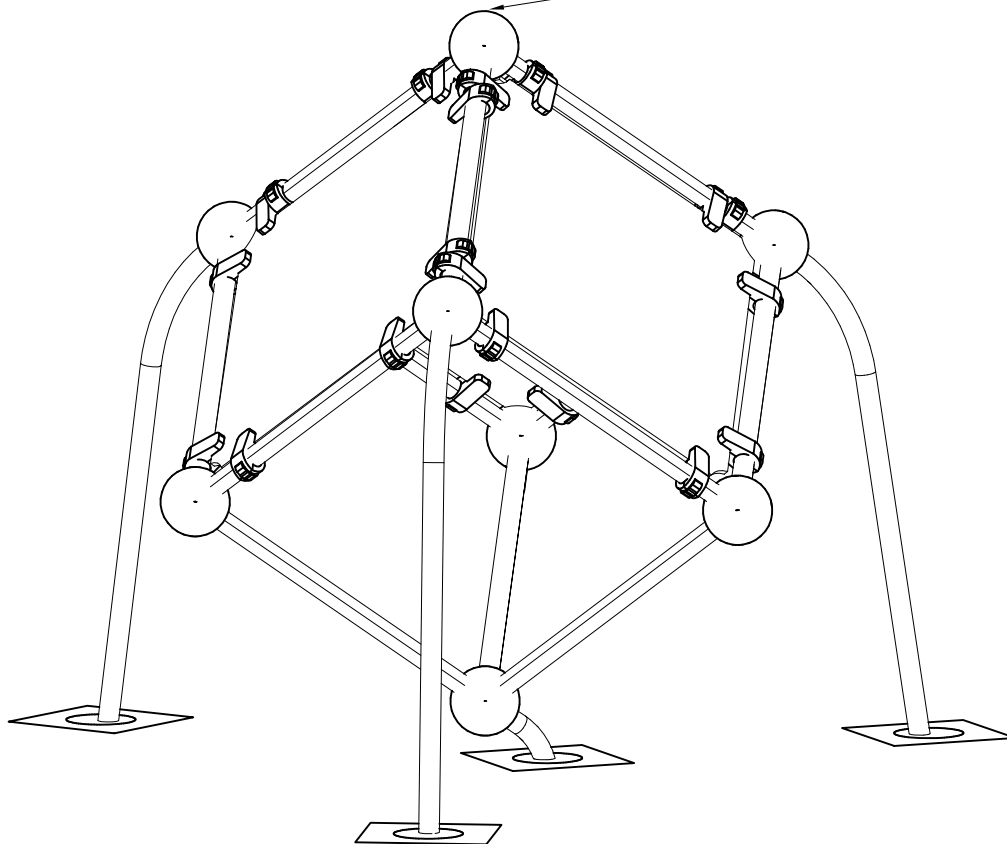


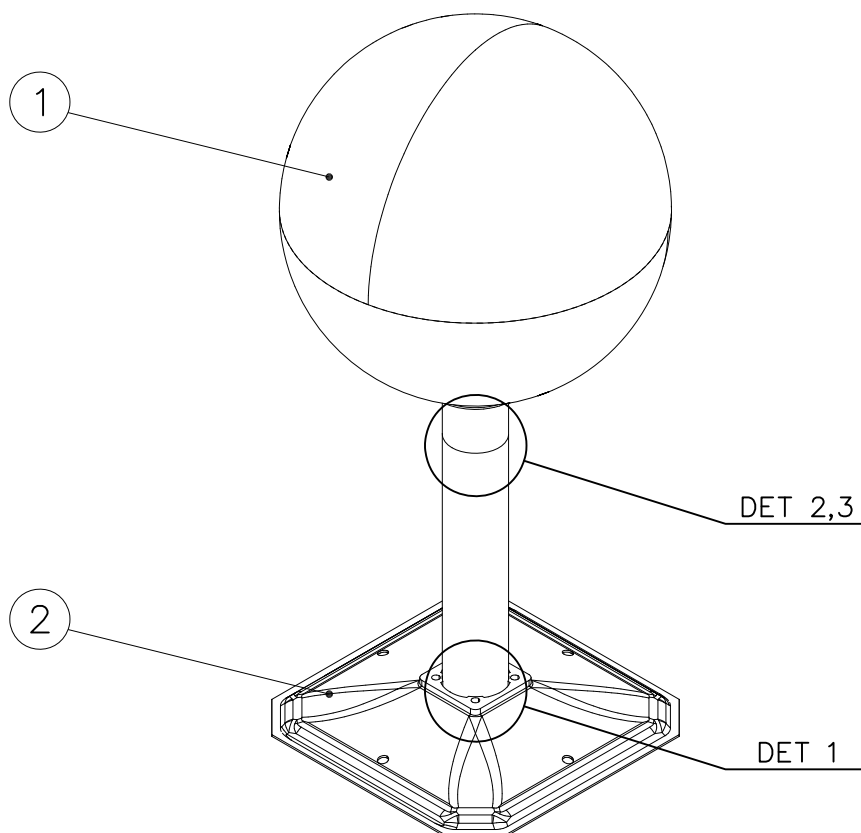





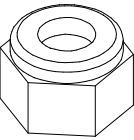
① 703644	PCS	② 909519	PCS
	1		1
		380x380	
③ 909638	PCS	④ 909639	PCS
	4		4
Ø20/10.5		M10x25	
⑤ 702341	PCS	⑥ 909637	PCS
	1		4
LARPIET Group Ltd 100710/14 19000 DEWENH FINLAND Rev: 0 123456 Issued by F56789 Date of release 1. June 2007 Material EN167-120004 TDV		M10	
	PCS		PCS
	PCS		PCS
	PCS		PCS

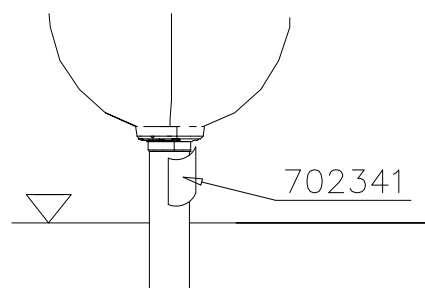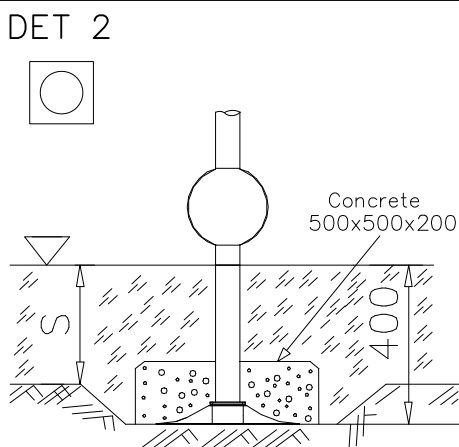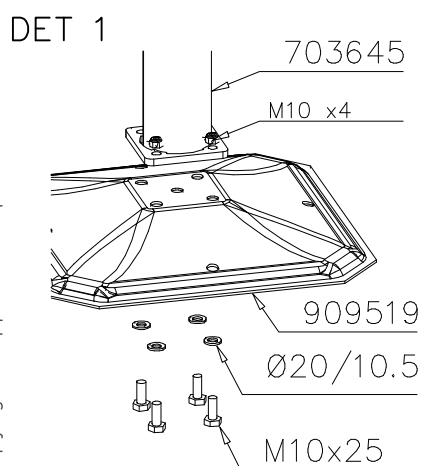
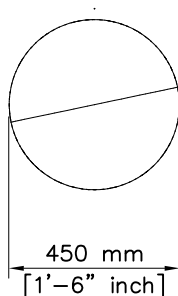
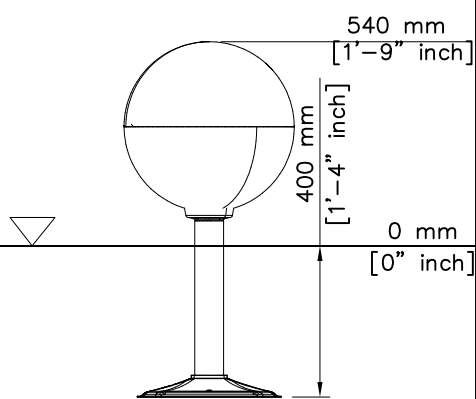


----- Falling Space 9.3 m2 (100 sq ft)
Max Falling Height 540 mm (1'-9" in)

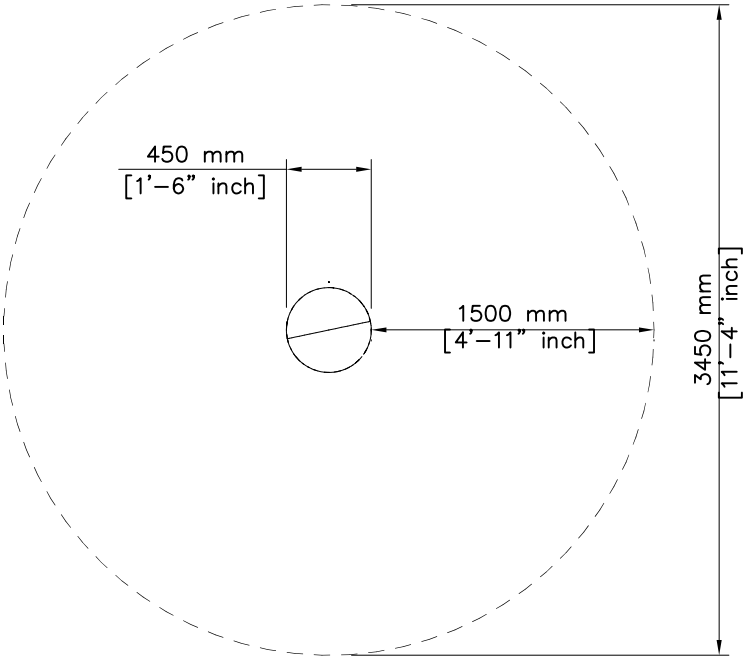



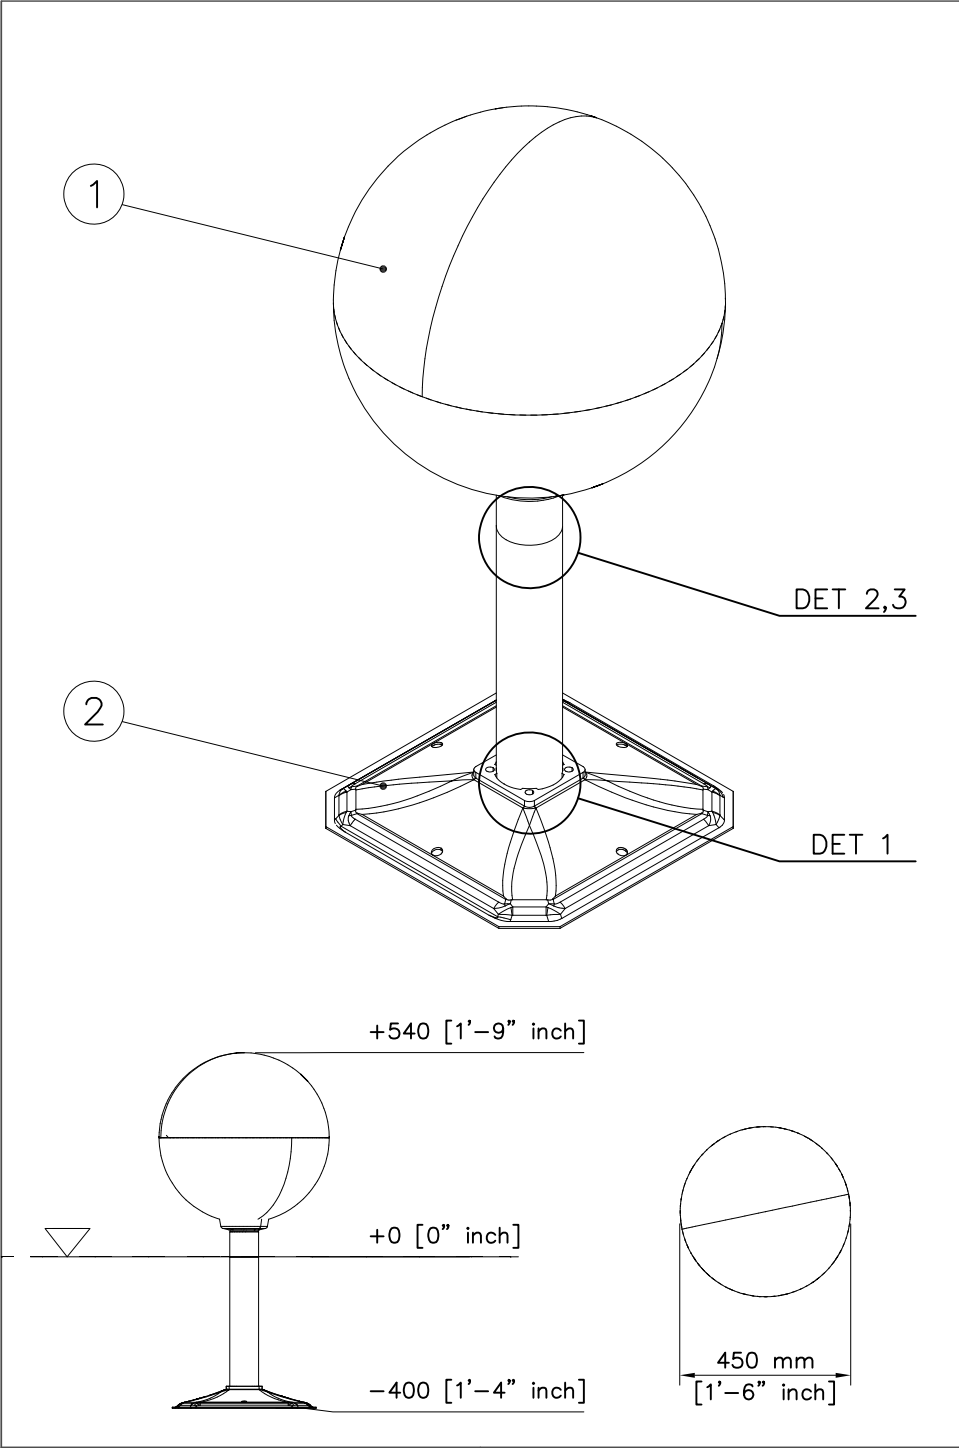

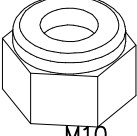① 703645	PCS	② 909519	PCS
	1		1
		380x380	
③ 909638	PCS	④ 909639	PCS
	4		4
Ø20/10.5		M10x25	
⑤ 702341	PCS	⑥ 909637	PCS
	1		4
		M10	
	PCS		PCS
	PCS		PCS
	PCS		PCS

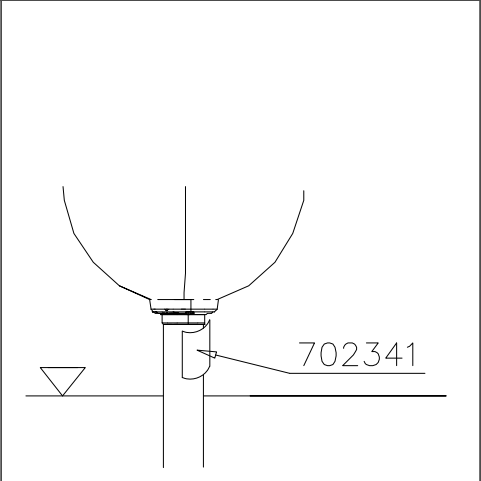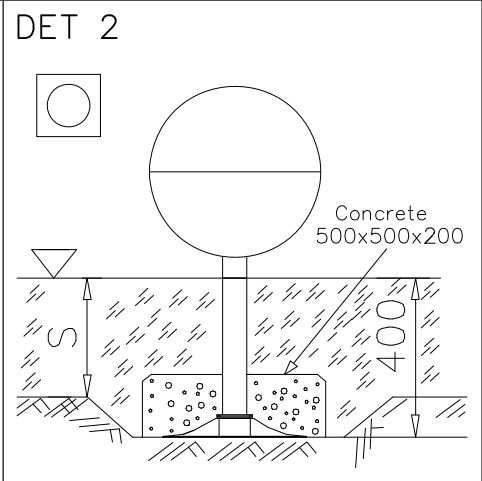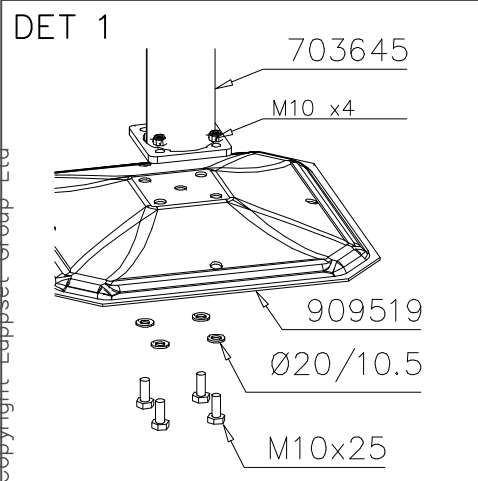

Falling Space 9.3 m2 (100 sq ft)
Max Falling Height 540 mm (1'-9" in)

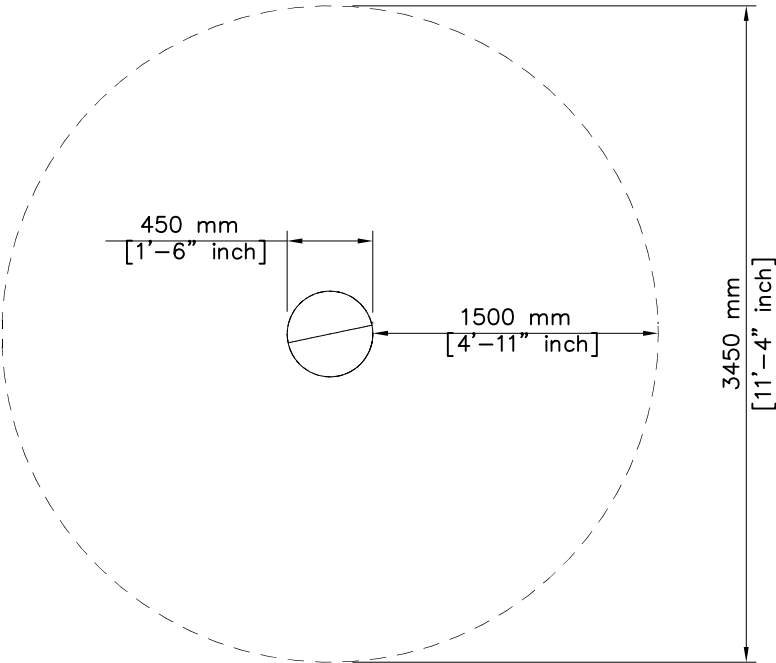


LAPPSET®

PARKOUR












ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 20.2.2015

220513

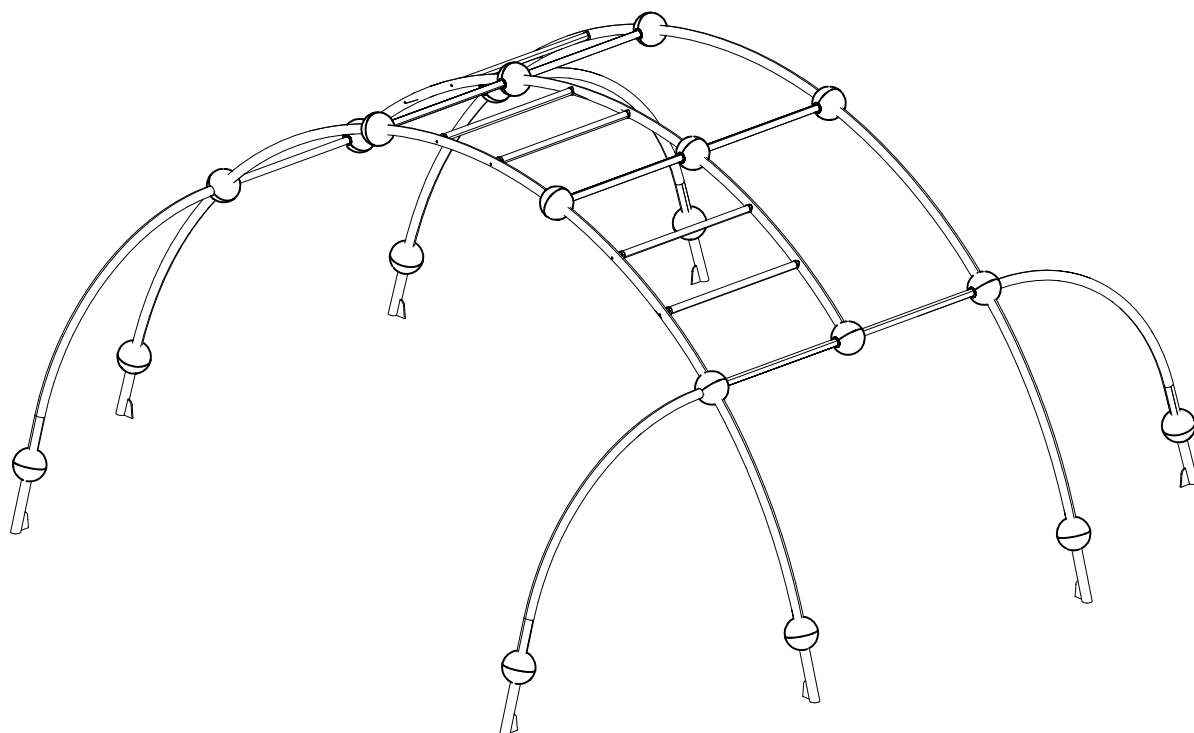


DATE: 20.2.2015

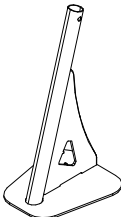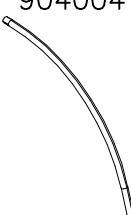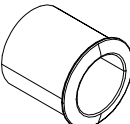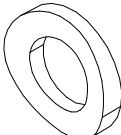
702341  90x50	PCS 1	904161 	PCS 8	902134  	PCS 20	904747  60x60x2	PCS 62	904004  60.3x2.5	PCS 4	904005  60.3x2.5	PCS 2
904007  60.3x2.5	PCS 1	904100  44.5-60.3	PCS 16	904102  Ø44.5x2148	PCS 4	904103  Ø44.5x1073	PCS 6	904124  60.3x2.5	PCS 4	904125  60.3x2.5	PCS 2
904133  M10x80	PCS 12	904158  Ø18/10.5	PCS 12	999561  10g	PCS 1		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

Copyright Lappset Group Ltd

EN/AS Impact Area 44.4 m² (478 sq ft)
Grid size = 1000 mm (40" in)




Note: page 4 (2/2)
Huom: sivu 4 (2/2)

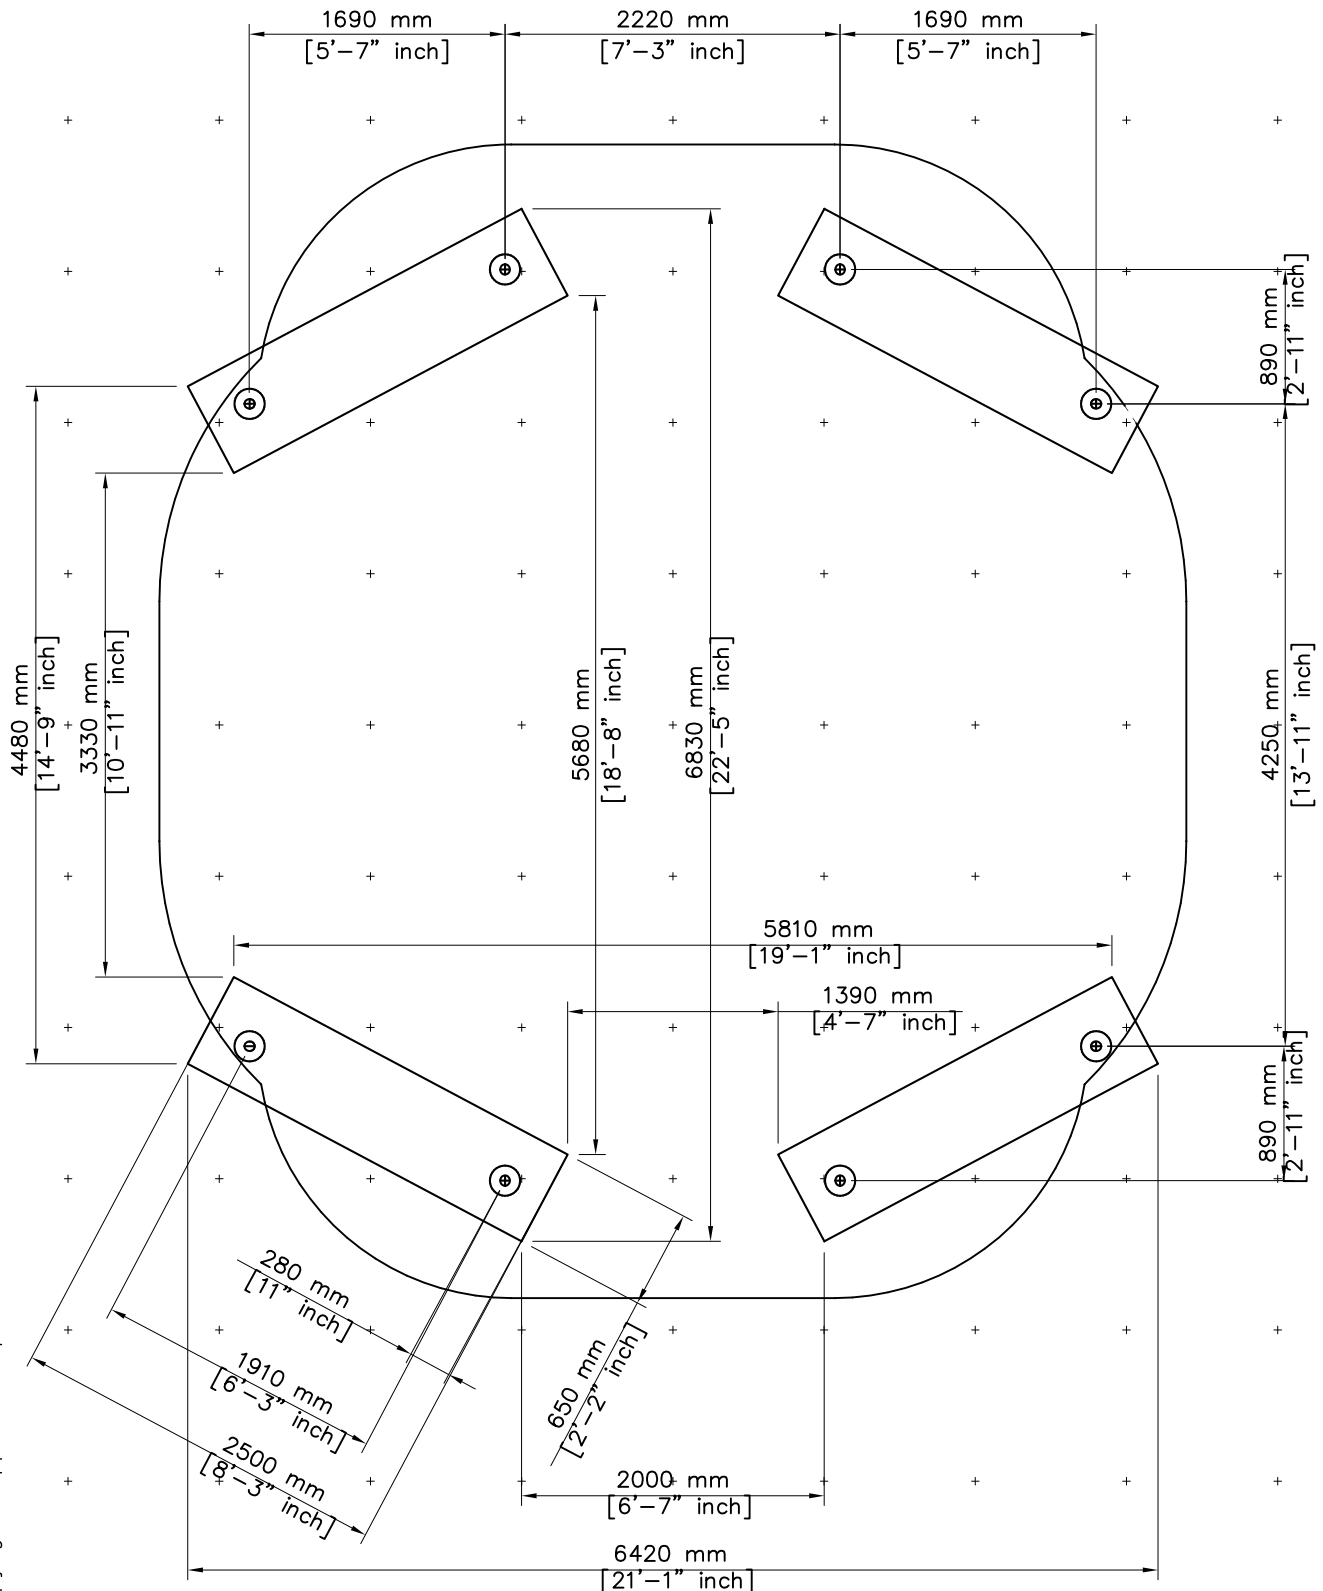

Page 5A

Sivu 5A

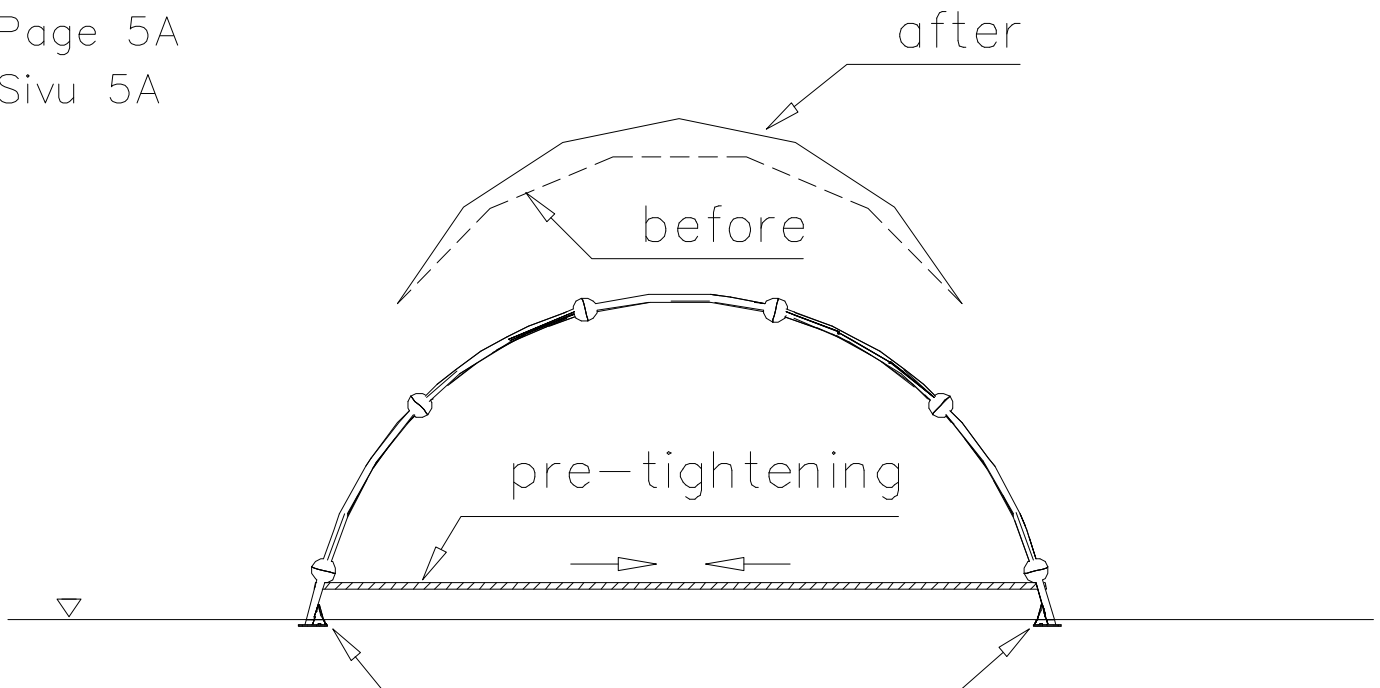


Before the concrete is poured, pre-tension the cage so that the shape of the product is round and even. The tensioning can be done using i.e. chain hoist or lashing straps. Remove the tensioners when concrete has dried enough to prevent the foot from moving.

Esijännitä tuote liinoilla tai taljoilla siten, että kaarevuus on tasainen ja symmetrinen. Kun haluttu muoto on saavutettu, valaa betoni. Poista kiristimet vasta kun betoni on kuivunut siten, että jalat eivät pääse liikkumaan.


Page 4, 5 Note: exact distances for the feet may vary depending on the pre-tensioning of the structure.

Sivu 4, 5 Huom: Jalkojen etäisyydet voivat erota jonkin verran kuvan mitoista. Tarkka mitoitus määräytyy rakenteen esijännityksen perusteella.

—— EN/AS Impact Area 44.4 m² (478 sq ft)
 ---- Falling Space 44,4 m² (478 sq ft)
 Max Falling Height 2650 mm (8' -9" in)




Note: page 4 (2/2)
 Huom: sivu 4 (2/2)

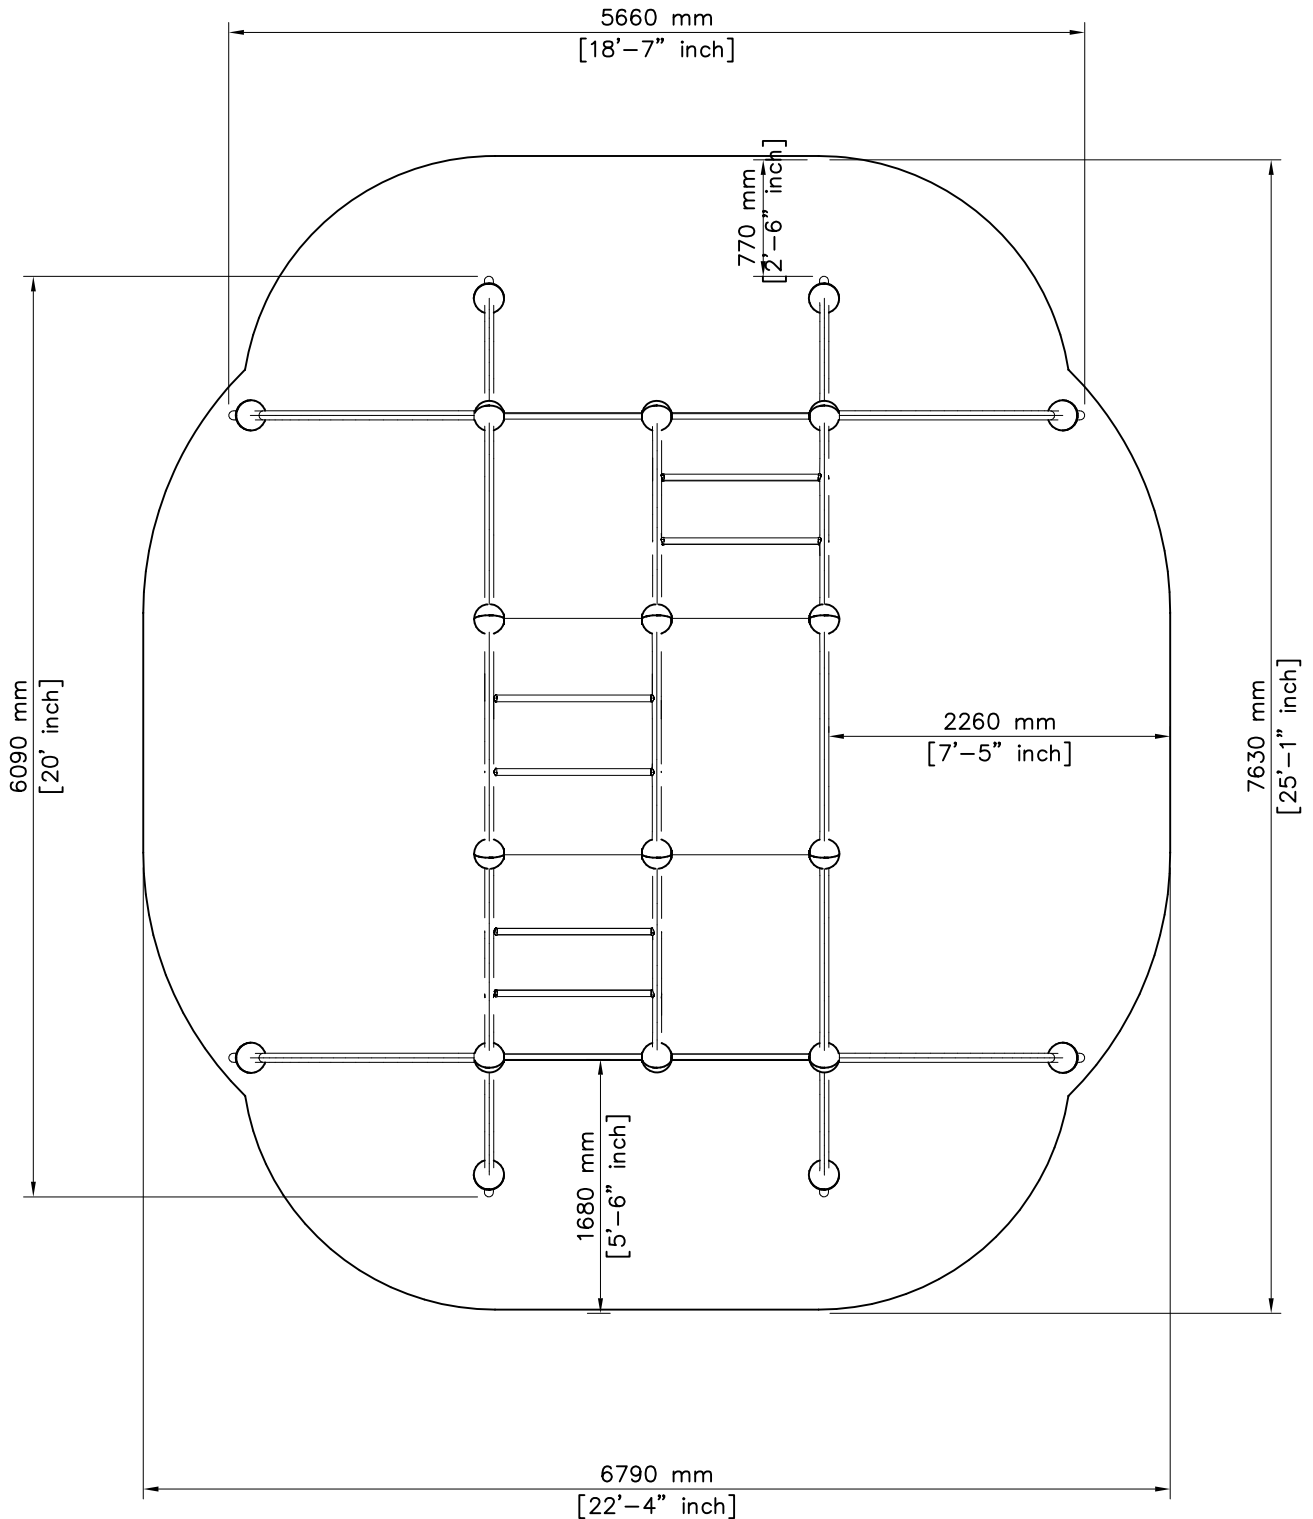


Note: page 4 (2/2) 5A.



Huom: sivu 4 (2/2) 5A.

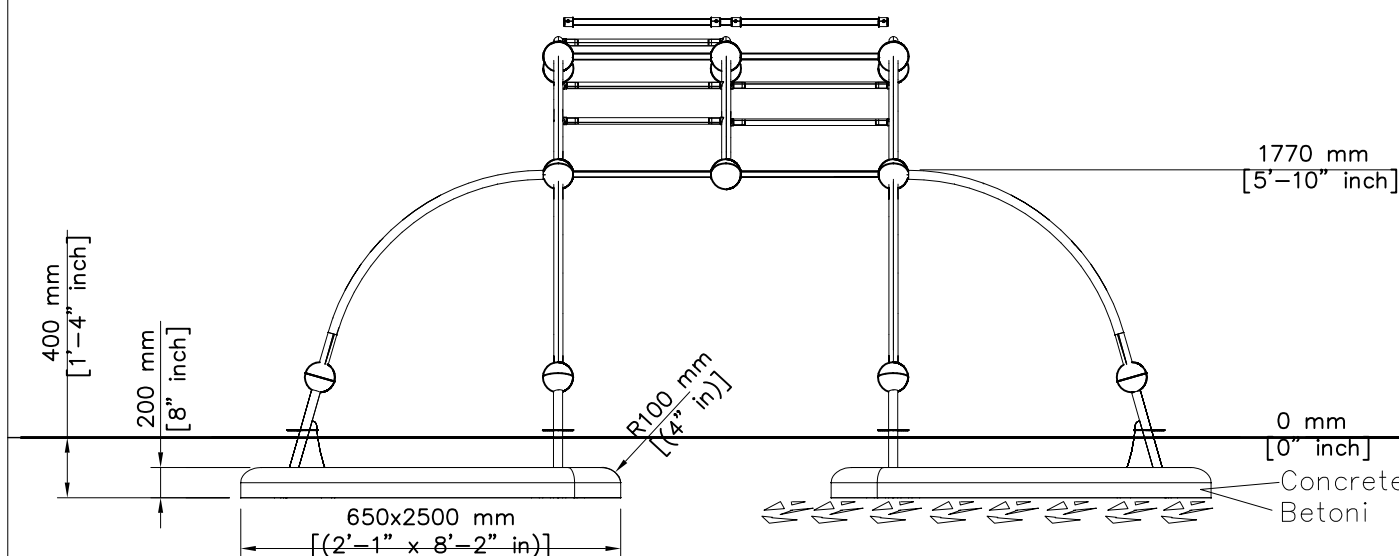

Note: page 4 (2/2) 5A.

Huom: sivu 4 (2/2) 5A.

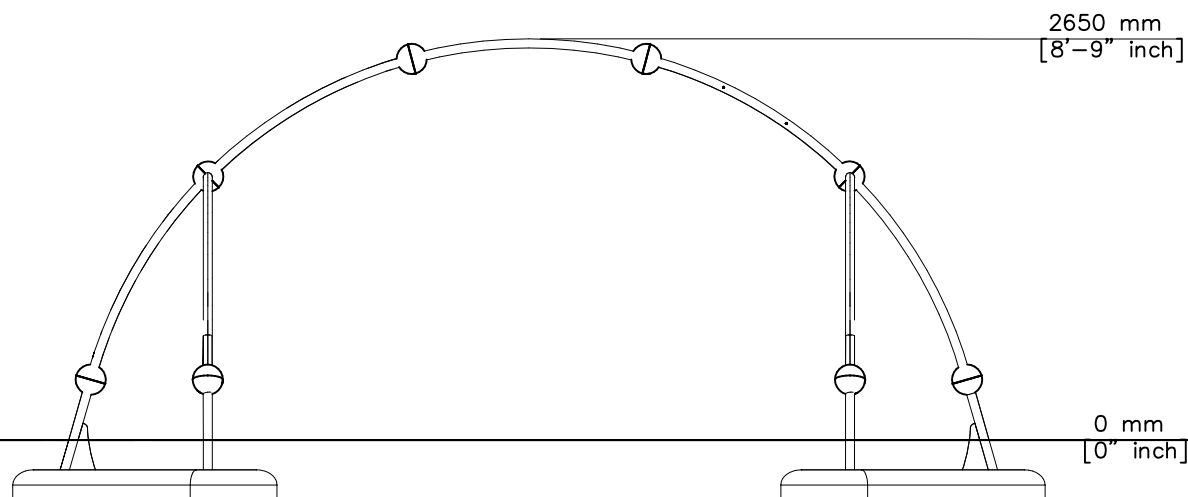


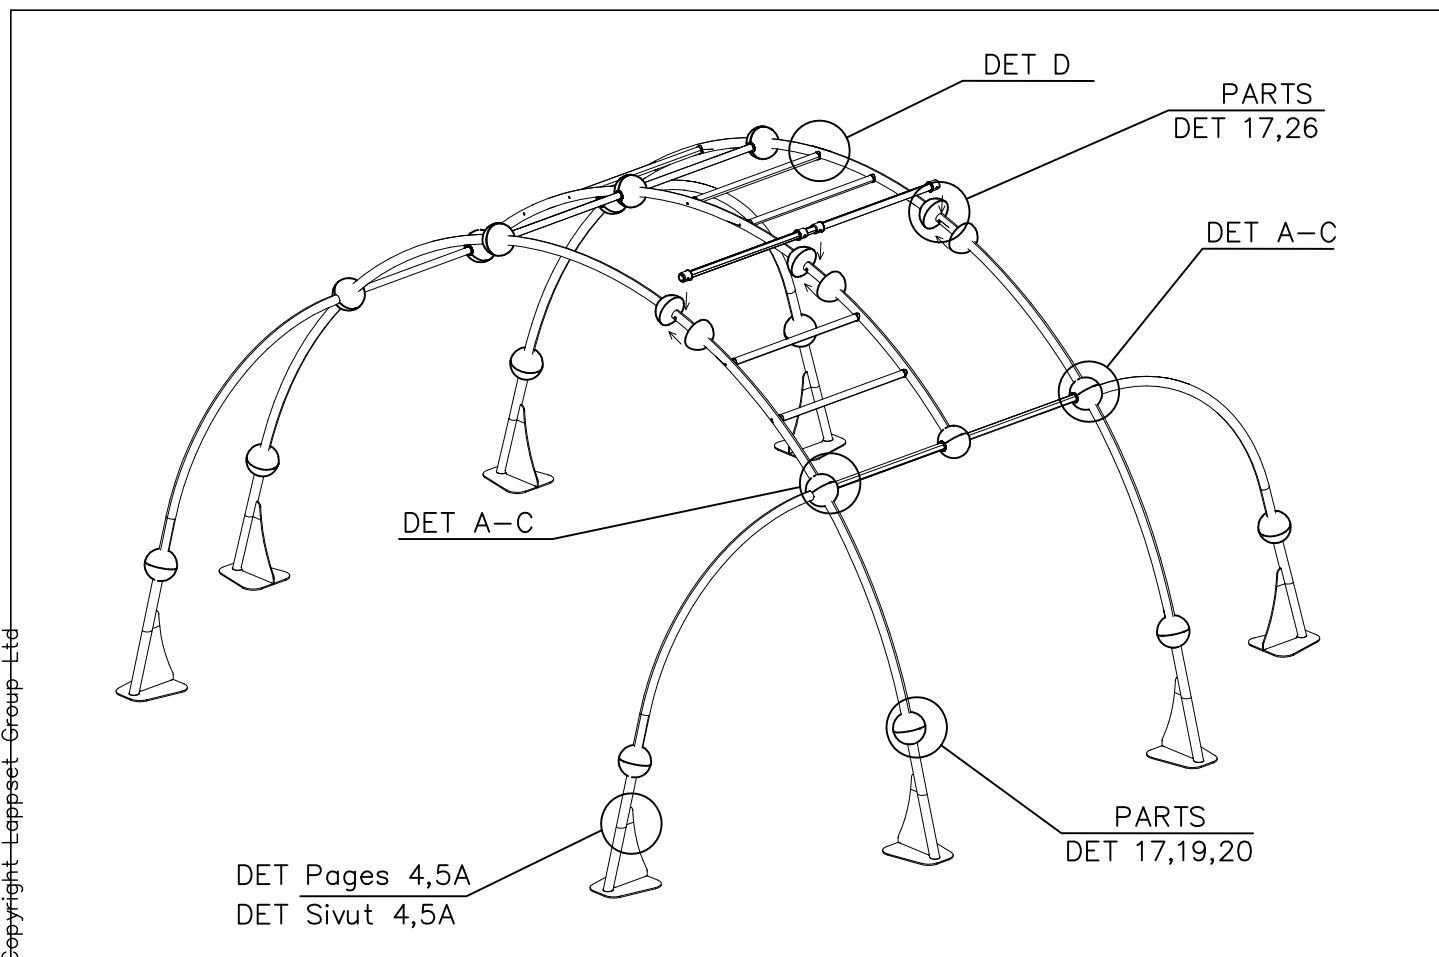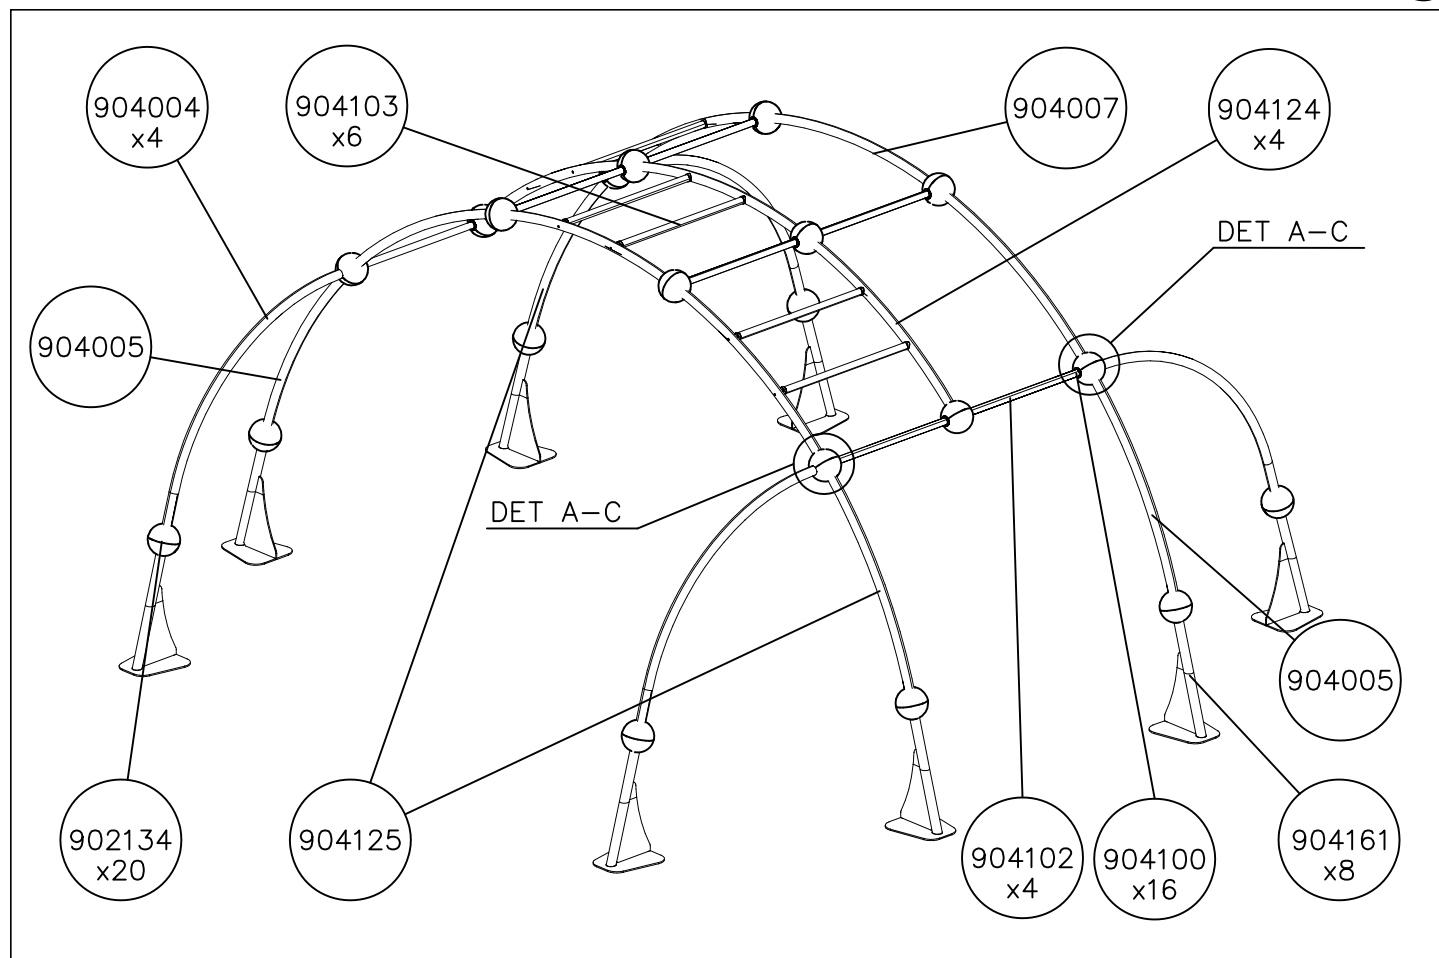


DET A

Asennuksen helpottamiseksi voidaan poistaa kyntettä.

For ease of installation, the crests shown below can be cutted or grinded down.

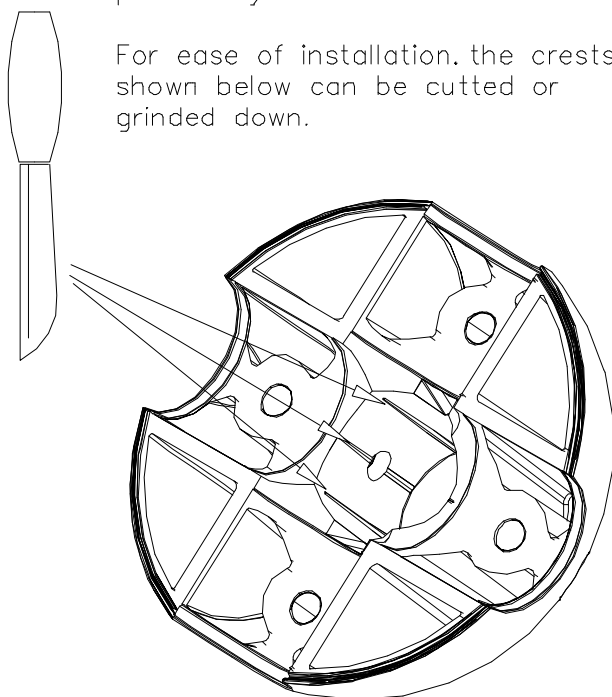


DET B

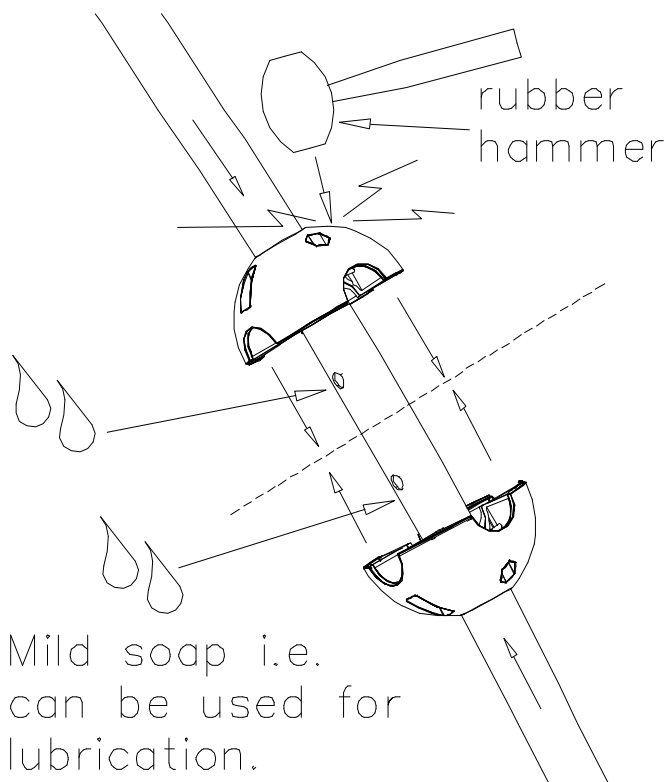


DET C

Asennuksen helpottamiseksi voidaan tuote esi-kasata syrjällään jo ennen pystytystä.



The product can be pre-assembled on it's side for easier assembly.

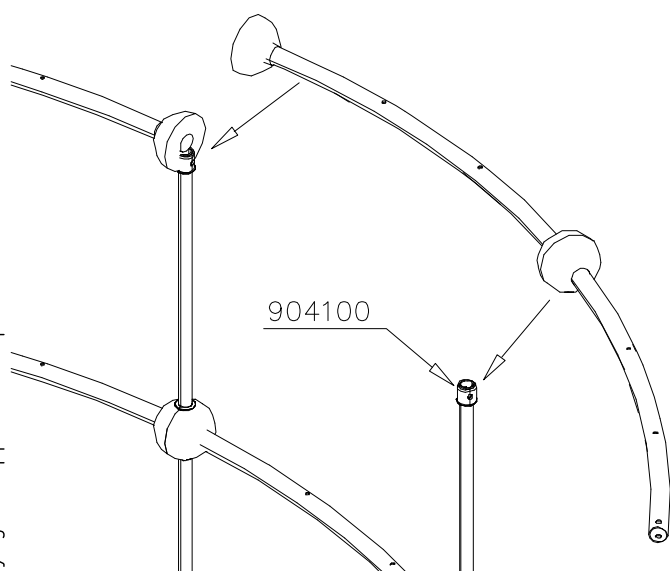







DET D

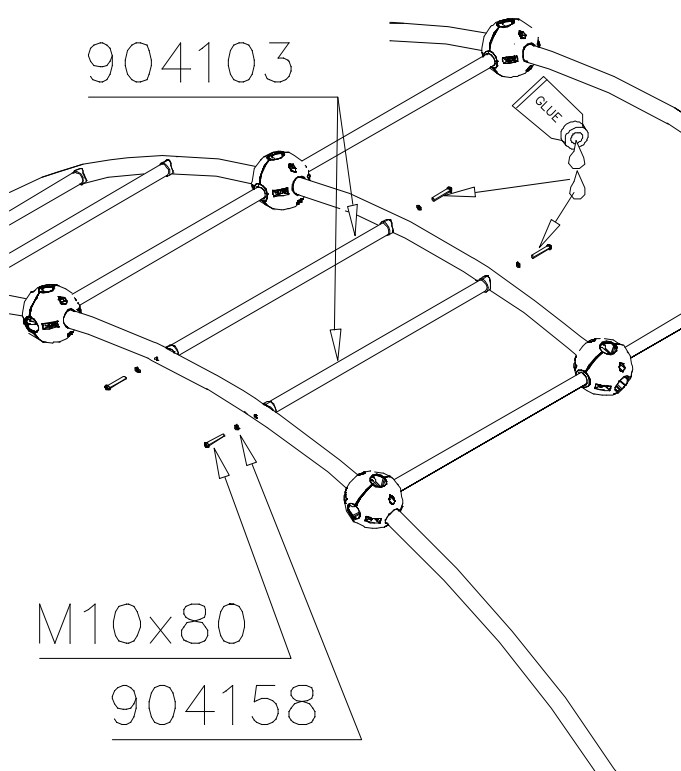

Max Falling Height 2650 mm

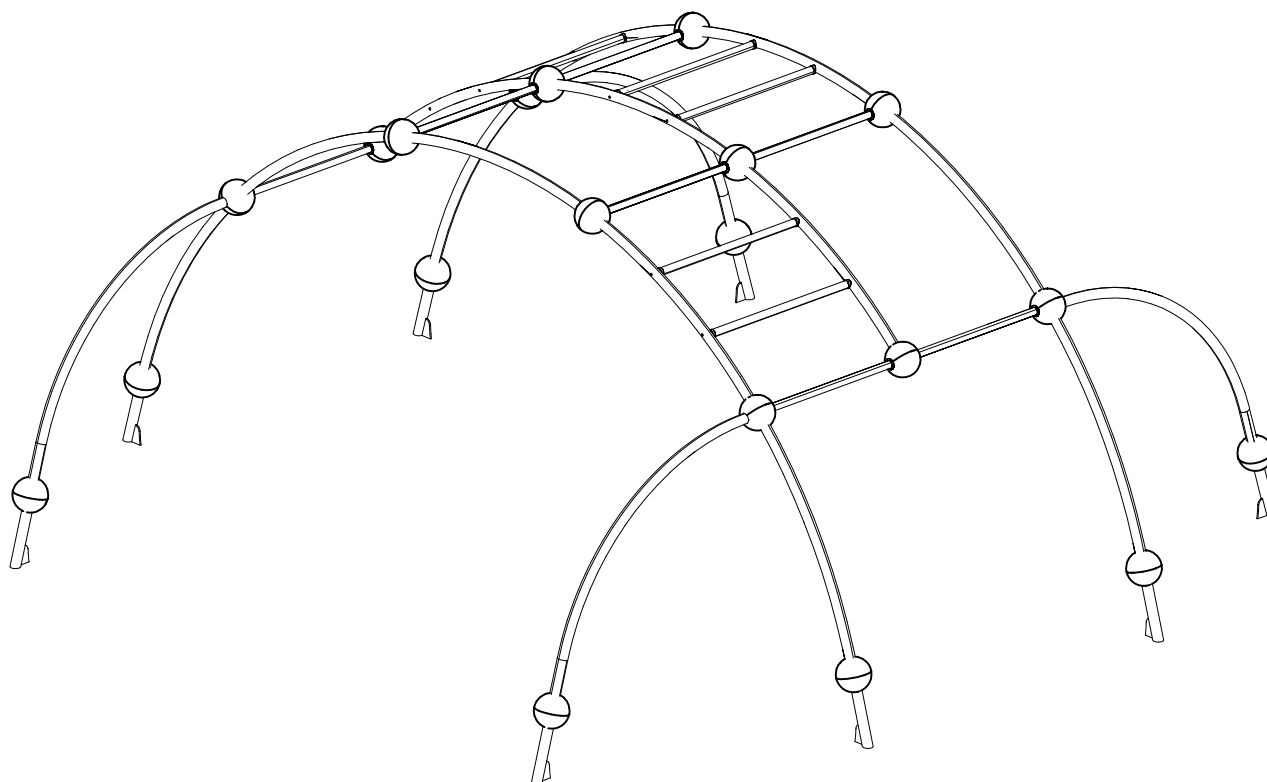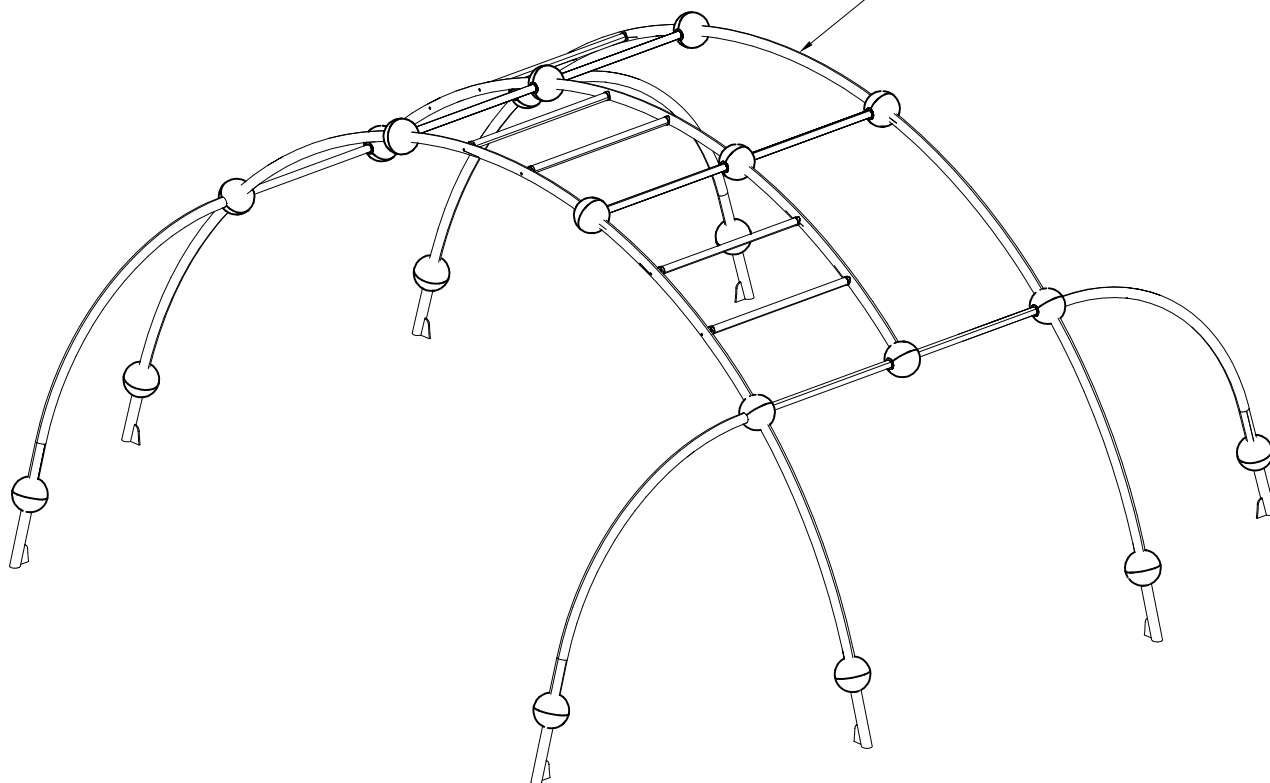


DATE: 17.7.2015

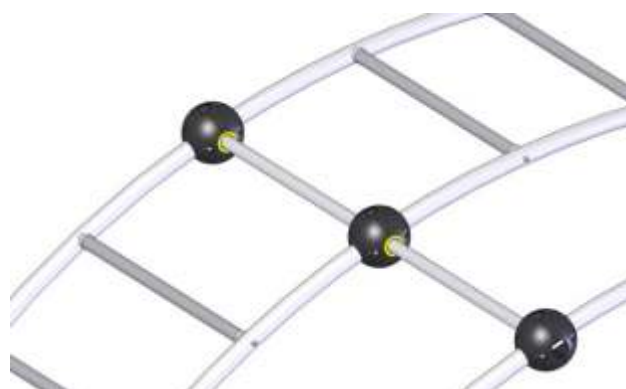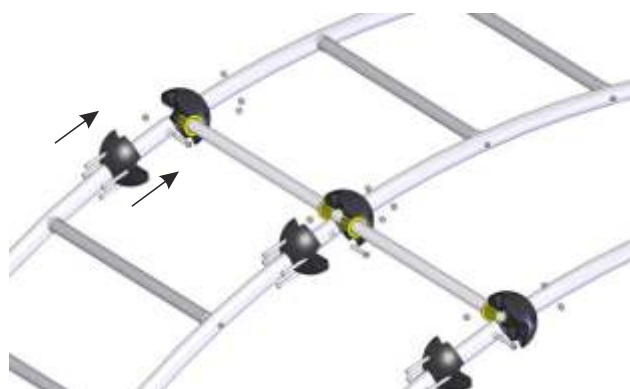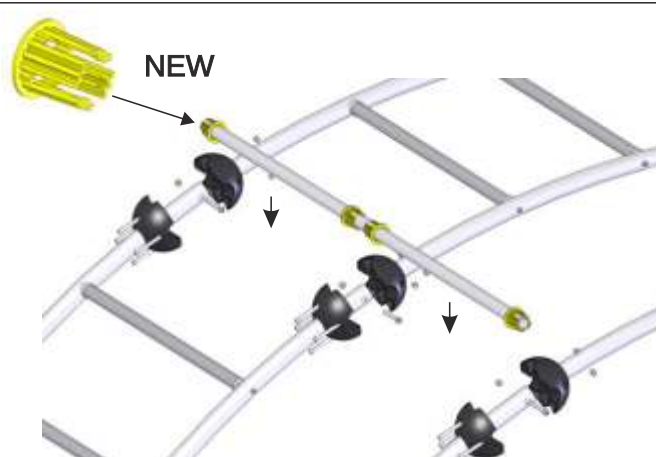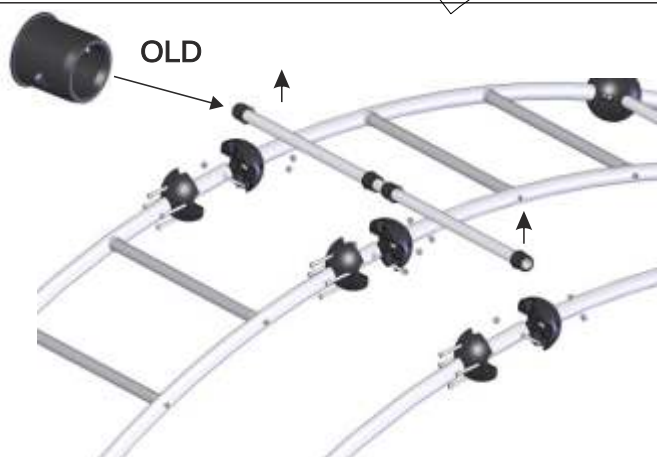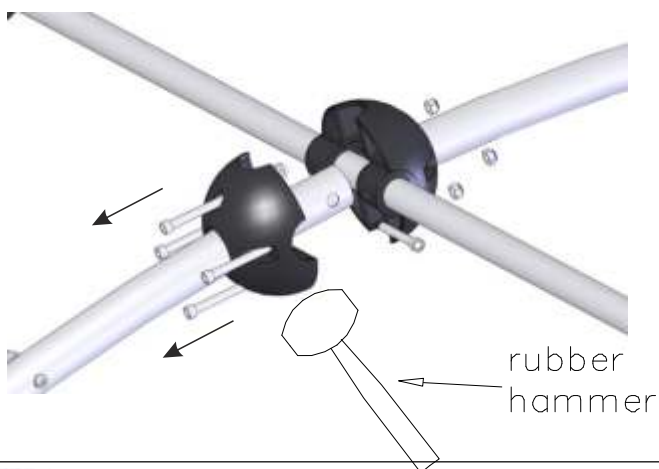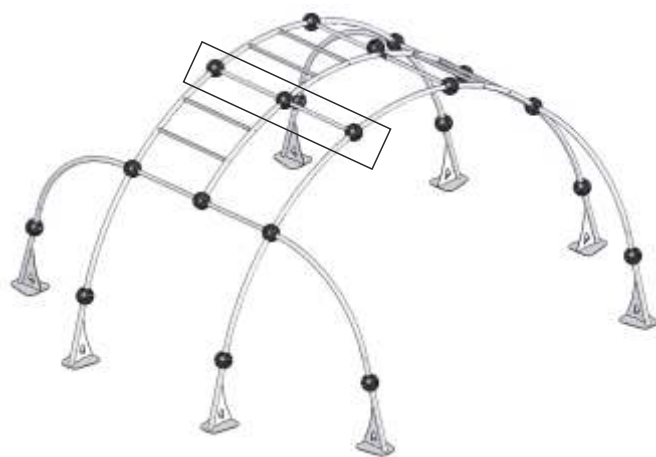


DATE: 18.8.2011

Syväperustus

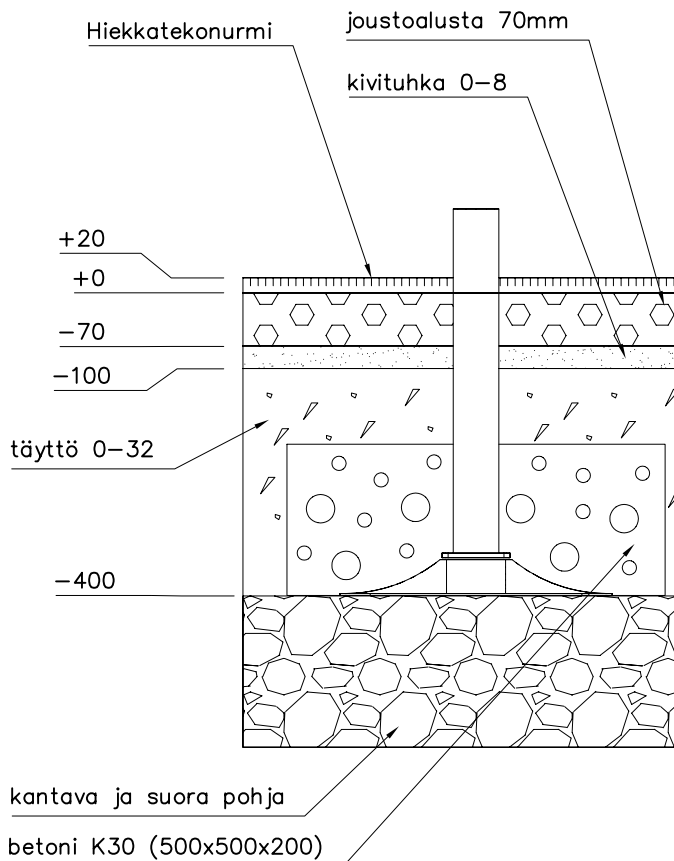

Pintaperustus

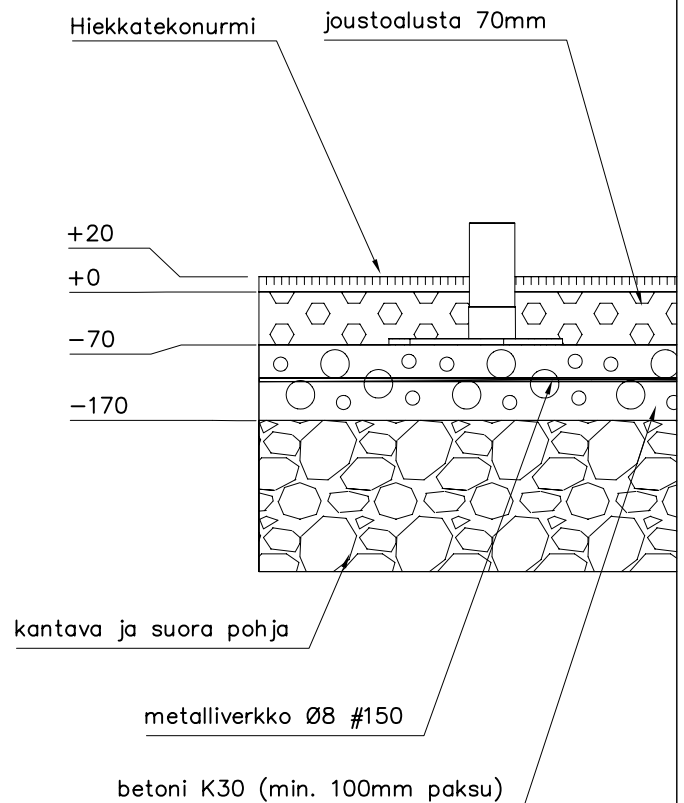


Syväperustus

1. Kaivetaan 400mm syvä kaivanto pinnan korosta. Jotkin välineet tarvitsevat syvemmän kaivannon (katso tuotteiden asennusohjeet).
Huom! Kantava ja suora perustusten pohja.
2. Asennetaan välineet.
3. Valetaan betonit. Jotkin välineet voivat vaatia isomman valun, katso yksittäisten tuotteiden asennusohjeet.
4. Täytetään 0-32 oikeaan korkoon.
5. Tiivistetään täyttö.
6. Täytetään kivituhkalla (0-8) n.30mm kerros jonka jälkeen tasoitetaan ja tiivistetään hyvin.(+/-10mm/4m oikolauta)
7. Tämän jälkeen asennetaan nurmi (katso asennusohje).

Pintaperustus

1. Kaivetaan 170mm syvä kaivanto pinnan korosta.
Huom! Kantava ja suora perustusten pohja.
2. Valetaan betonilaatta (min. 100mm paksu). Koko riippuu kentän koosta (S,M,L).
3. Asennetaan välineet.
4. Asennetaan joustopalat ohjeen mukaisesti (katso asennusohje).
5. Tämän jälkeen asennetaan nurmi (katso asennusohje).

DATE: 18.8.2011

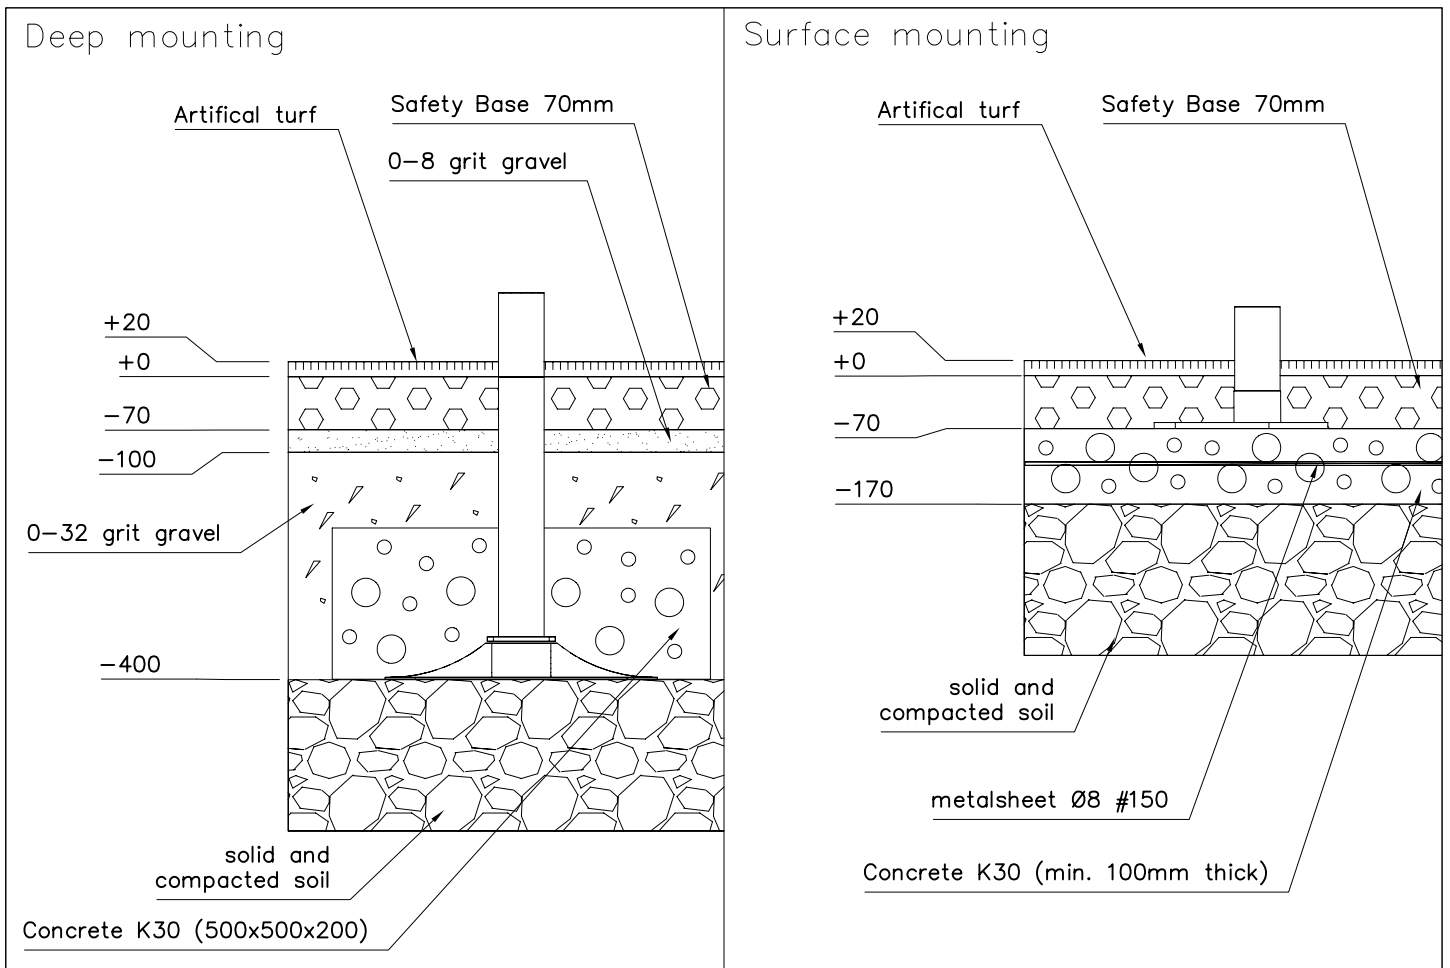



Deep mounting

1. Start by digging 400 mm deep excavation. Some equipment may need more depth, see assembly instructions for individual equipment.
2. Assemble the equipment according to assembly instructions.
3. Make concrete blocks. Some equipment may need bigger block, see assembly instructions.
4. Fill with 0-32 grit to correct level.
5. Compact the layer.
6. Spread 30 mm thick layer using grit 0-8 gravel. Compact and level it thoroughly. (+/-10mm/4m)
7. Assemble the safety base according to assembly instructions.
8. Assemble the turf according to assembly instructions.


NOTE: Also the soil below the starting level (-400) needs to be solid and compact.




Surface mounting

1. Start by digging 170 mm deep excavation.
2. Make concrete plate, see illustration (min. 100mm thick). Size depends on the size of the Parkour field (S,M,L).
3. Assemble the equipment according to assembly instructions.
4. Assemble the safety base according to assembly instructions.
5. Assemble the turf according to assembly instructions.

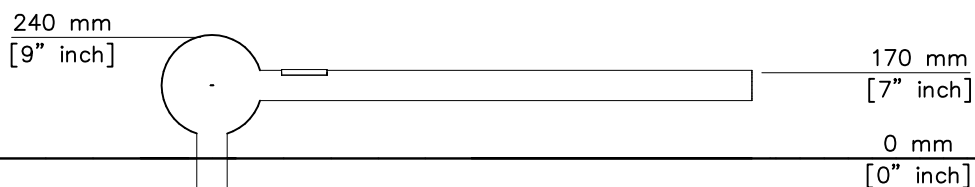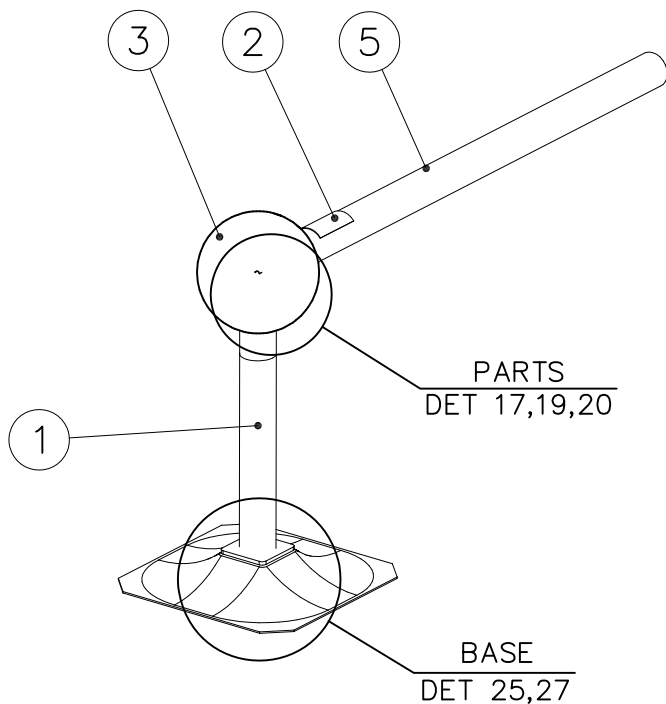

----- Falling Space 10.6 m² (114 sq ft)
Max Falling Height 170 mm (7" in)

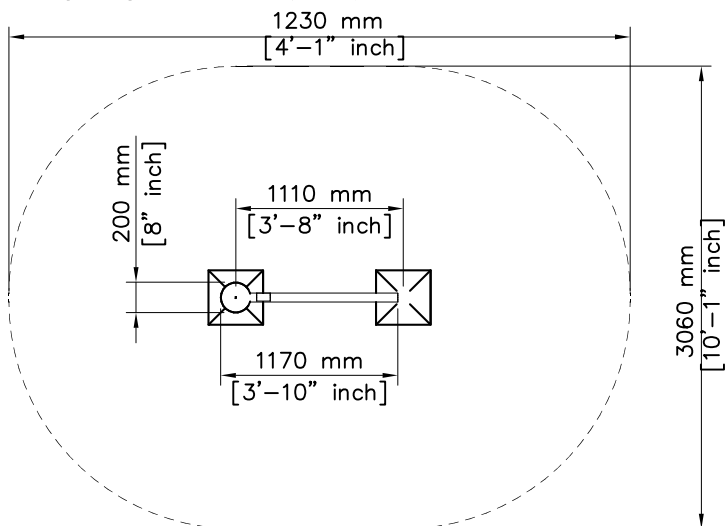


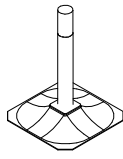
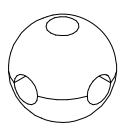

① 701985	PCS	② 702341	PCS
	1		1
		90x50	
③ 902134	PCS	④ 902157	PCS
	1		4
		60x60x2	
⑤ 902424	PCS		PCS
	1		
L 1034			
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS










1x frame mod. 600
2x anchors
1x screw sachet no. 6


CUSTOMER		DRAWING N°		© copyright by ORIGINAL euroform  ® euroform K. Winkler s.r.l. I-39032 Campo Tures (BZ) T +39 0474 061120 F +39 0474 061121 mail: info@euroform-w.it web: www.euroform-w.com	
		Parts list - bench 600			
		SCALE		DATE	
		02.02.2012			
PROJECT		NAME			
		Untergasser S.			

AS Impact Area 21.3 m2 (229 sq ft)
Max falling height 2005 mm. (6'-7 1/4" in)

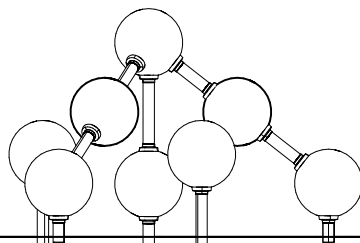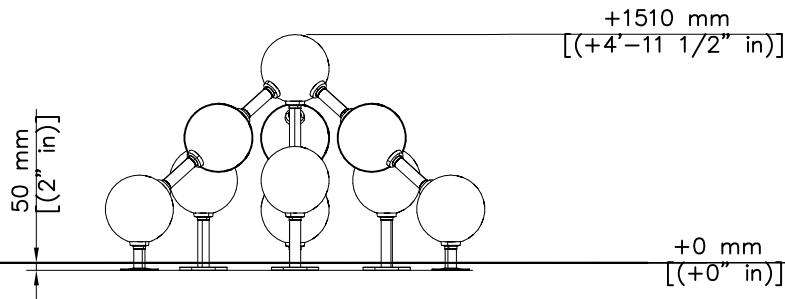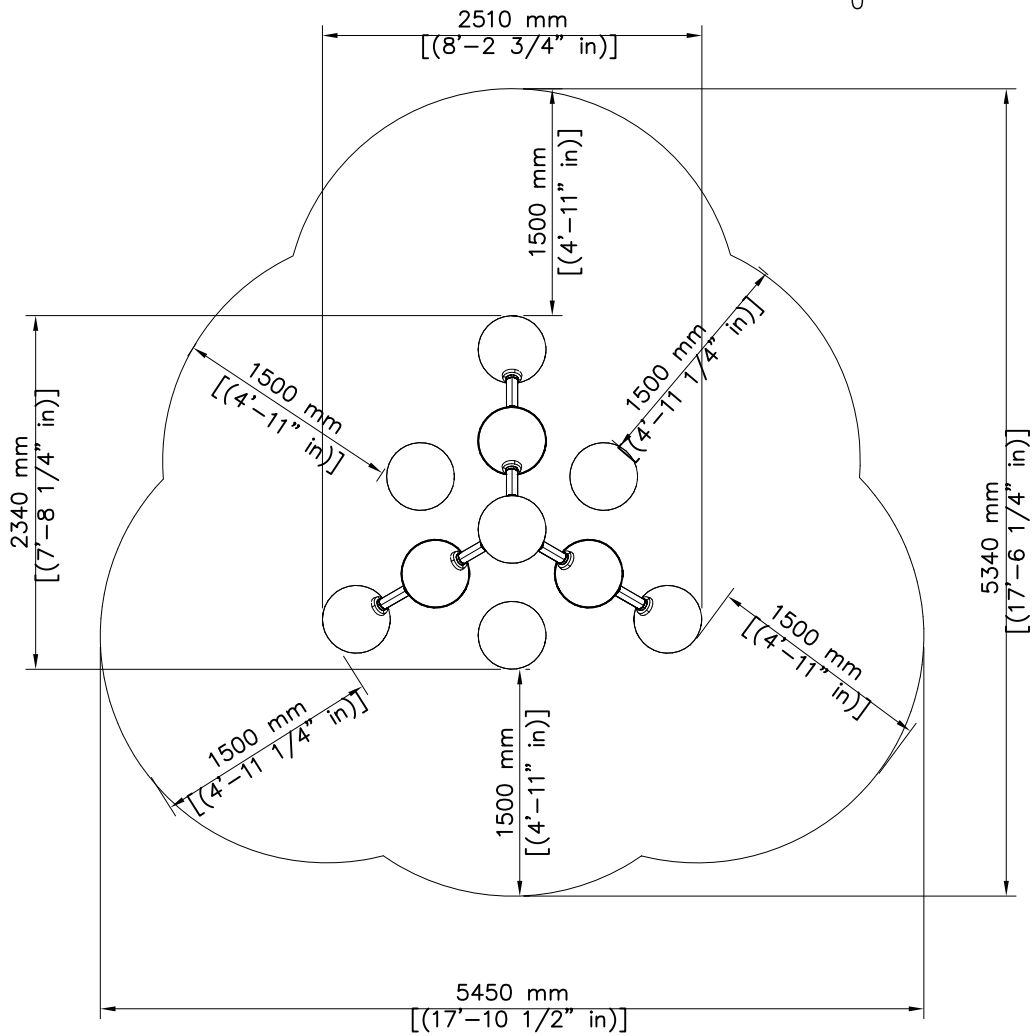


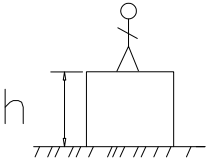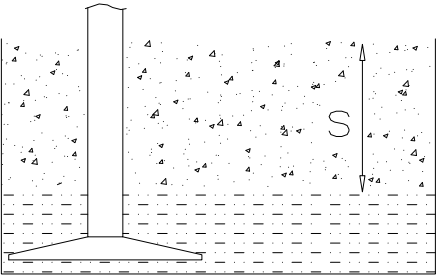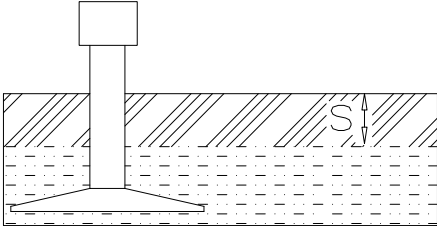		
h < 600 Without movement and therefore without Impact Area	Totally hard surfaces.	E.g. concrete or asphalt 
h < 600 With movement e.g. rocking	Materials with very limited impact attenuating properties.	E.g. wood 
h < 1000	Materials with significant impact attenuating properties.	fine gravel 0–8 mm  grass  unsorted sand 
h < 3000	Loose fill material E.g. sand/gravel 0,25...8 mm D60/D10<3,0 Woodchips 5...30 mm bark 20...80 mm	 <u>S</u> 30 cm <u>h</u> 40 cm < 2,0 m < 3,0 m
	Syntethic granulates <u>S</u> 40 mm ~> <u>h</u> 50 mm ~> 1,2...1,3 m 60 mm ~> 1,5...1,7 m 70 mm ~> 1,8...2,0 m 2,1...2,5 m Note. For accurate values, see manufacturer's instructions.	

REMOVE SAFETY SURFACE/SAND/GRAVEL
TO CHECK FOUNDATION

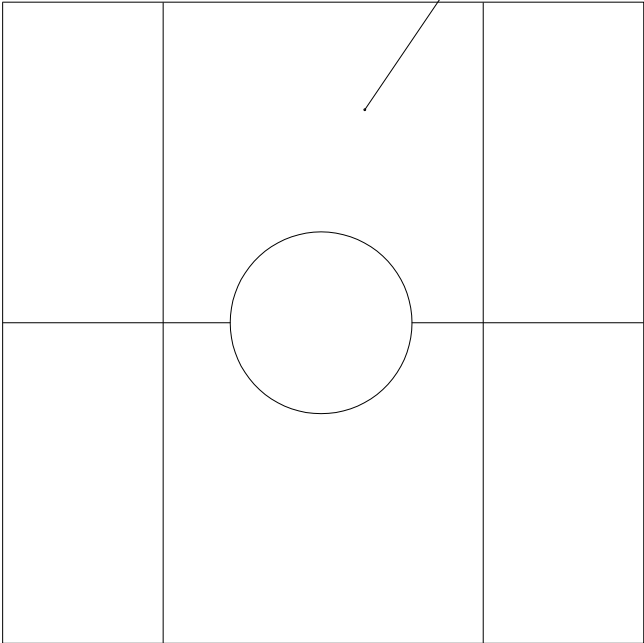

REMOVE SAFETY SURFACE/SAND/GRAVEL
TO CHECK FOUNDATION

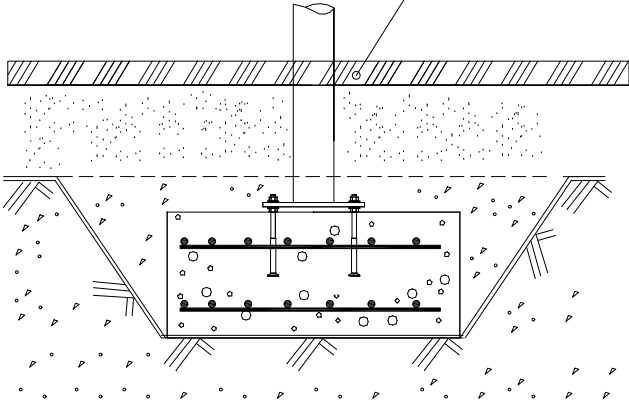

PRODUCT SPECIFIC INSTALLATION FOR GIBBONSWING (220513 AND 220513) MID-CONNECTORS

1. Slide the bushings to tube as shown in picture below



2. Lay the tube with bushings on bottom half of spherical connector. Minimize the gap between bushing sleeve and spherical connector.





3. Lay the top half on the bottom half and tighten both M10 bolts in turns. The bushings may slide out 1...2mm but not more.




4. The third tube (middle arch) will be installed on another of the “closed holes” i.e. the holes which cannot be splitted. This installation can take place even after the halves are fully tightened.




DET A

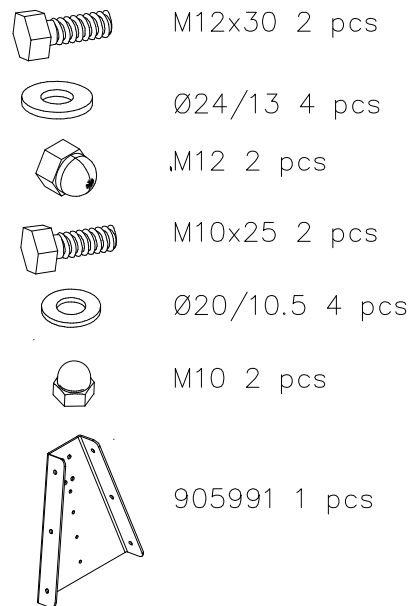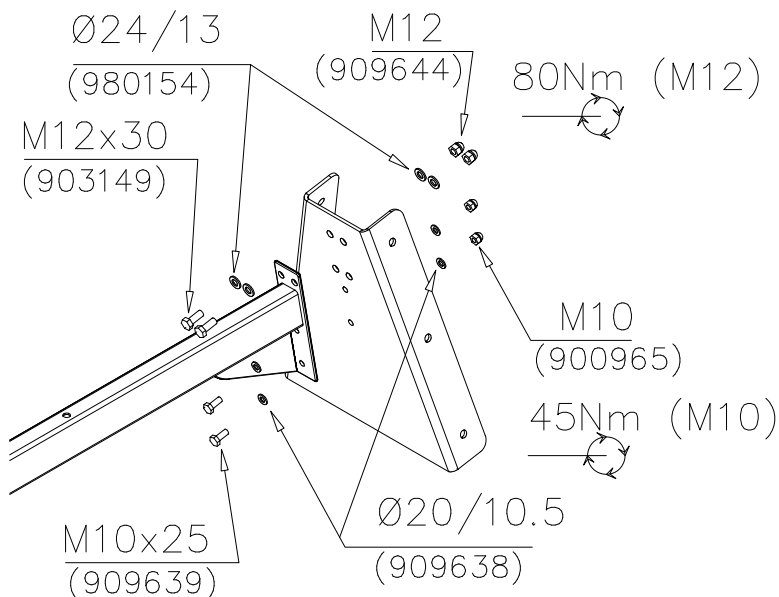



DET A1

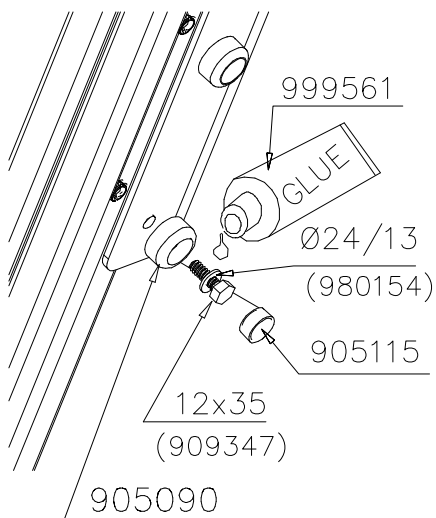

DET B

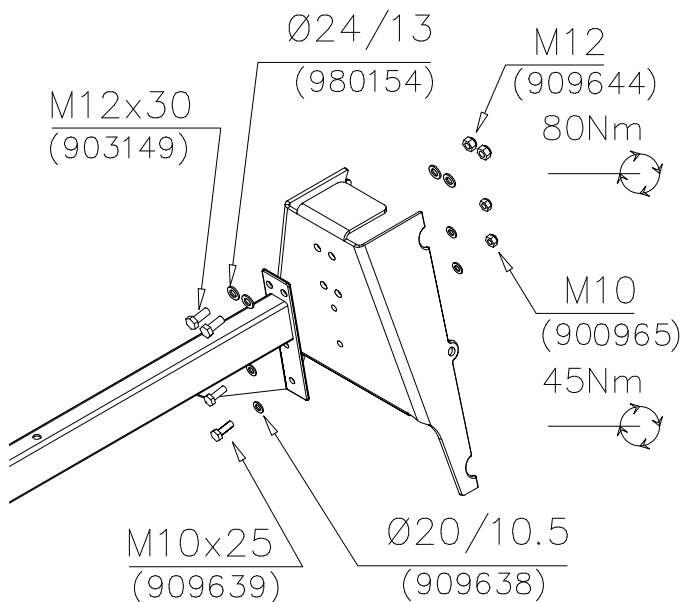


DET B

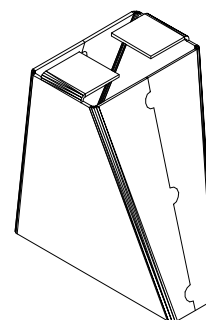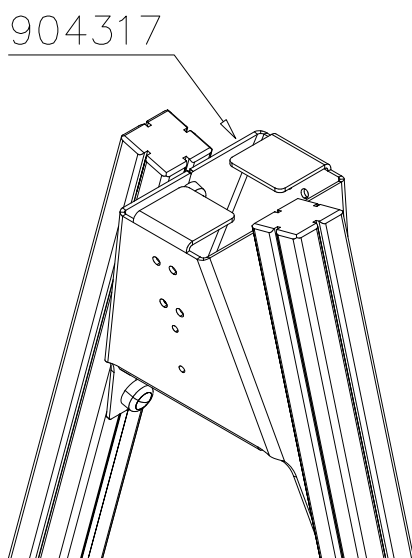

904317


DET B1

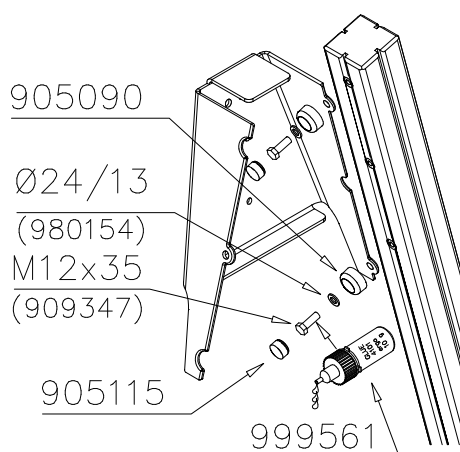

M12x35 6 pcs



Ø24/13 6 pcs

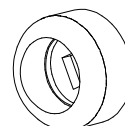

Ø45 6 pcs





Ø30 6 pcs











GLUE



DET C

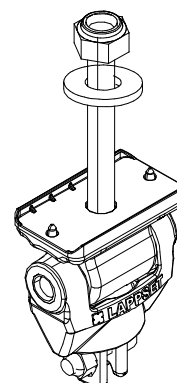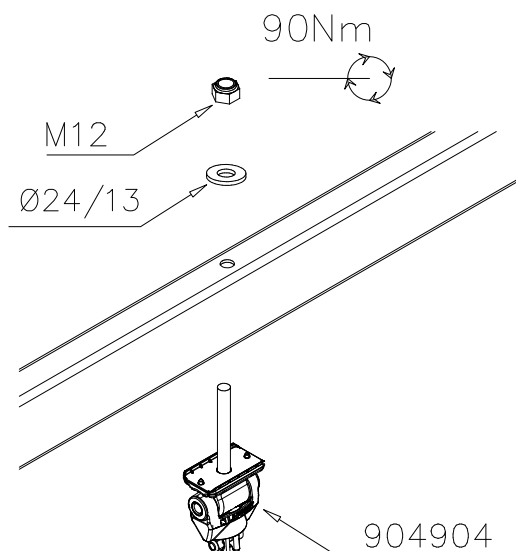

904904

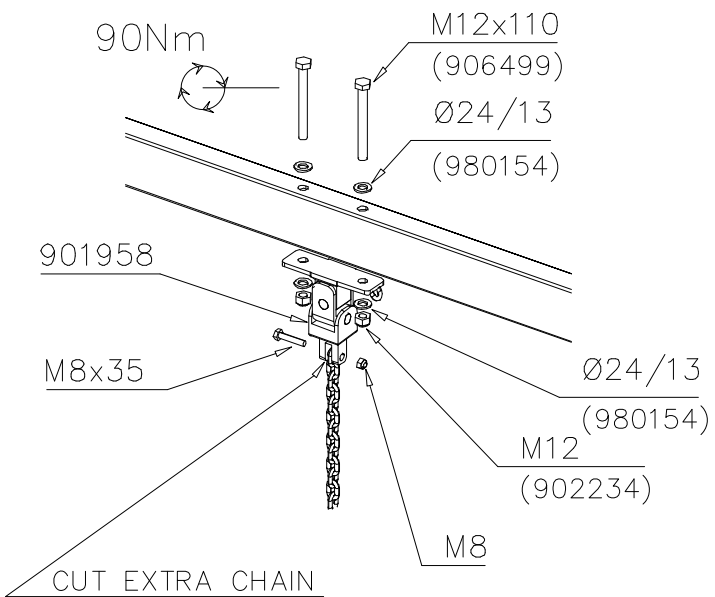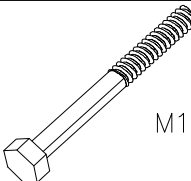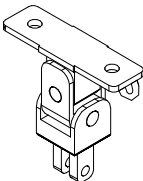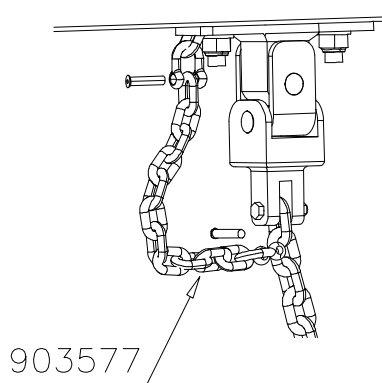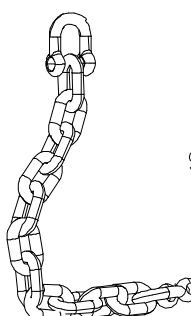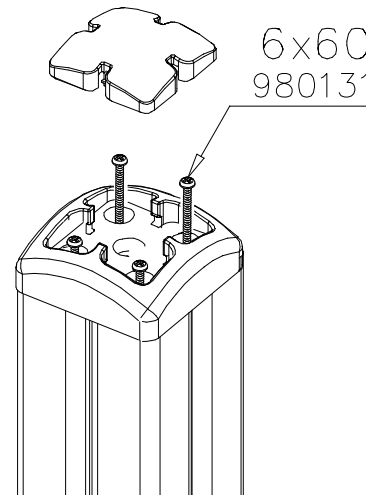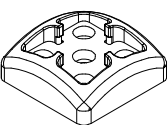DET D  90Nm M12x110 (906499) Ø24/13 (980154) 901958 M8x35 Ø24/13 (980154) M12 (902234) M8 CUT EXTRA CHAIN	 M12x110 2 pcs  Ø24/13 4 pcs  M12 2 pcs  901958 1 pcs
DET D  903577	 903577 1 pcs
DET E  6x60 980131	 980131 4 pcs  905138 1 pcs  905196 1 pcs

DET F

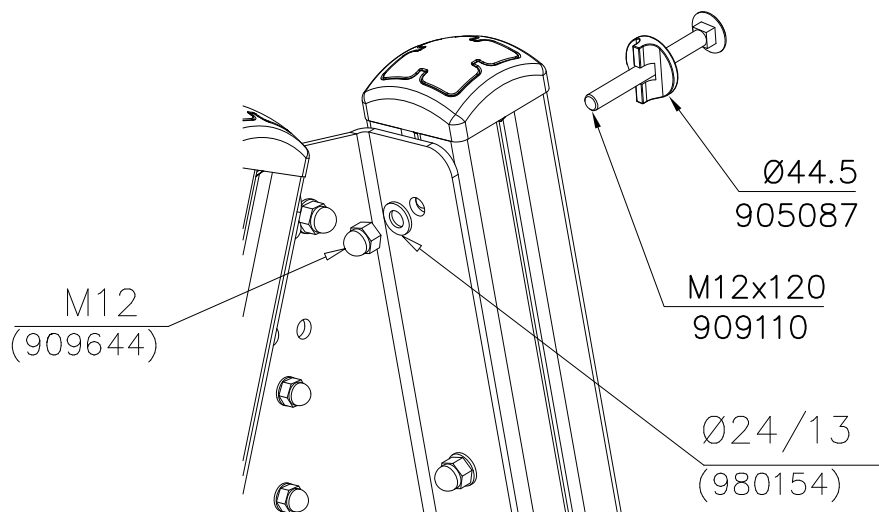

M12x120 6 pcs



Ø24/13 6 pcs





Ø44.5 6 pcs



M12 6 pcs

DET G

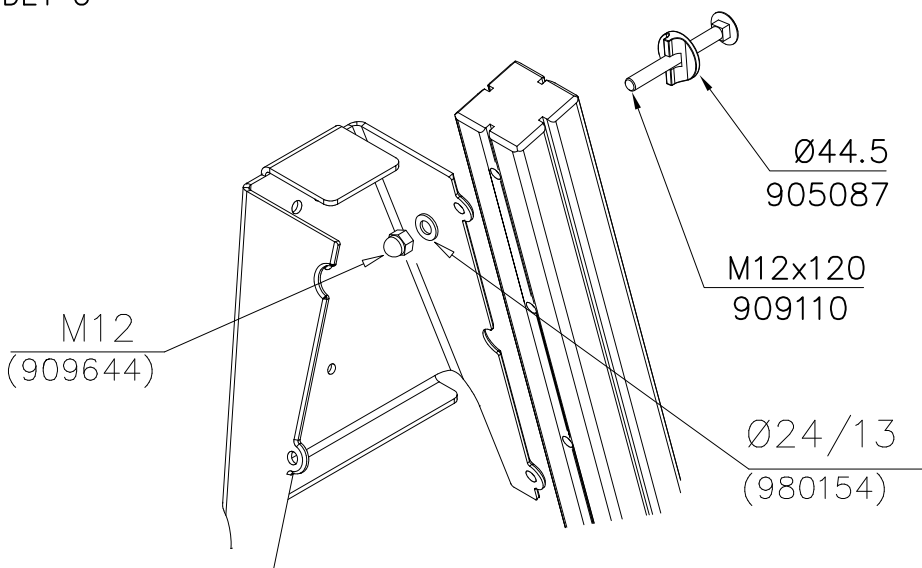

M12x120 6 pcs




Ø24/13 6 pcs



Ø44.5 6 pcs





M12 6 pcs


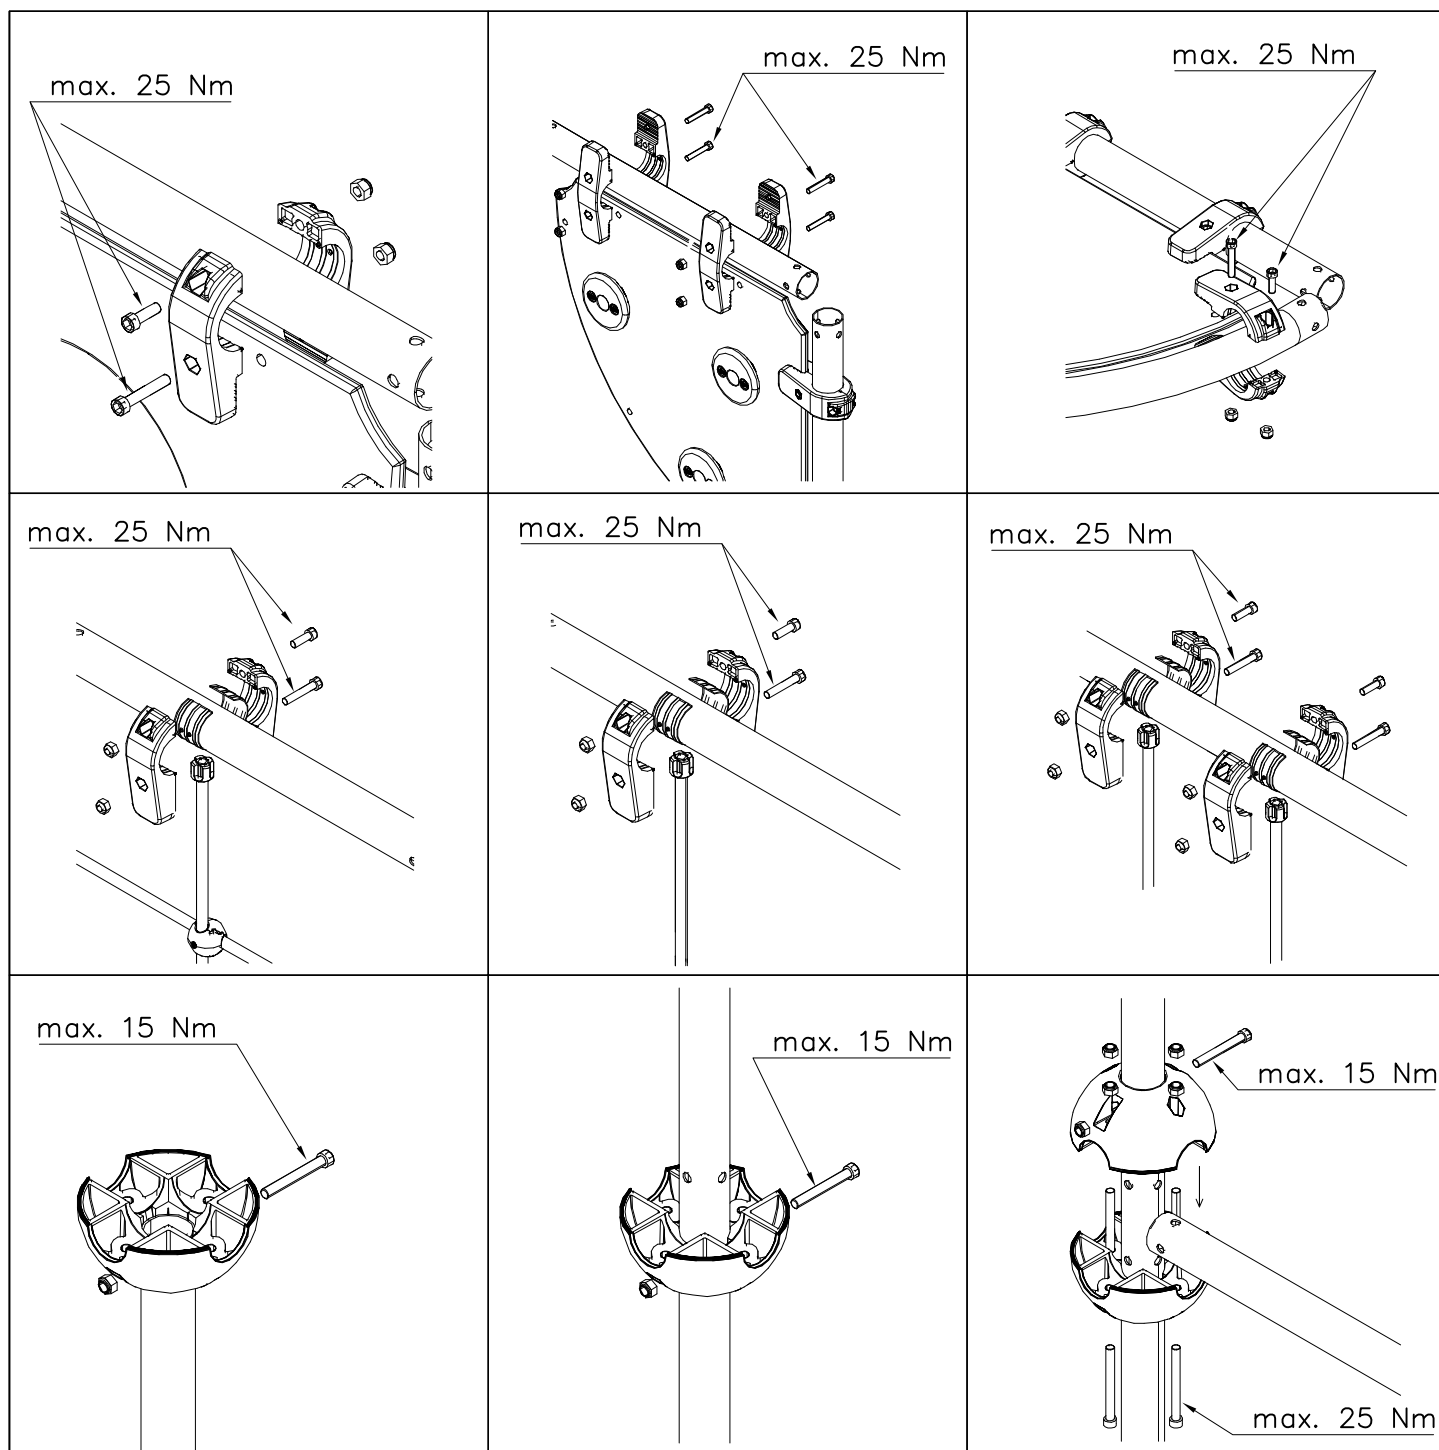


Security plugs
are included
only for
selected
products.

Hoi!
Pultit on kiristettävä lopulliseen kireyteen,
ennen turvapinnien asennusta.


Note!
Tighten bolts properly,
before installing security plugs.

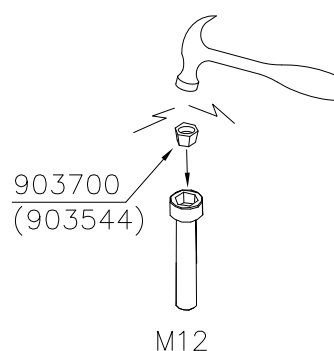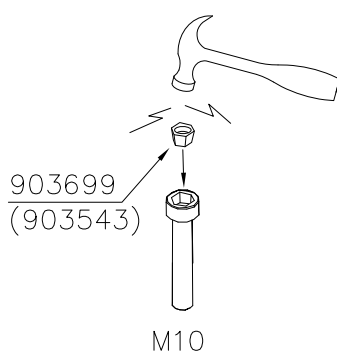

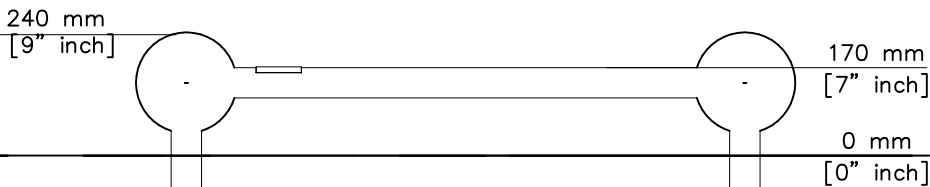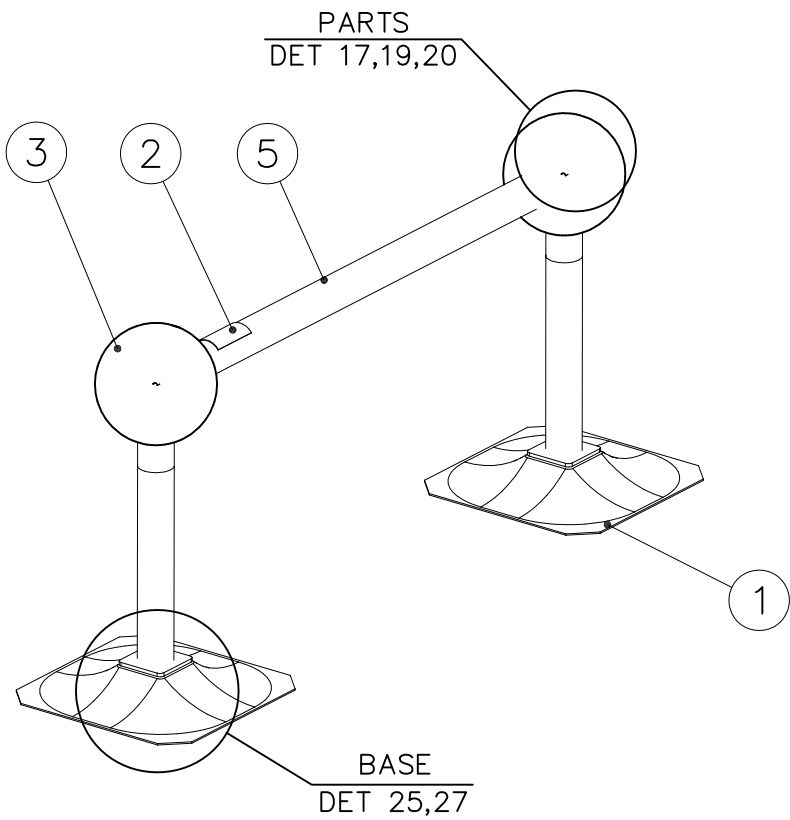


400 mm
[1'-4" inch]

Falling Space 10.6 m2 (114.1 sq ft)
Max Falling Height 170mm (7" in)

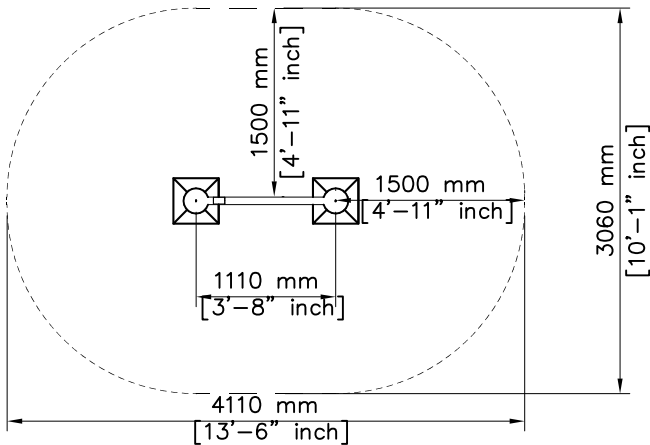


① 701985	PCS	② 702341	PCS
	2		1
902134	PCS	902157	PCS
	2		8
902424	PCS		PCS
	1		
L 1034			
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS

DET 1

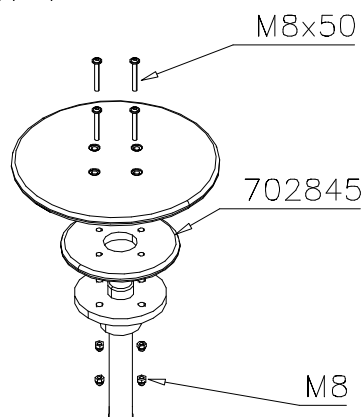


DET 2

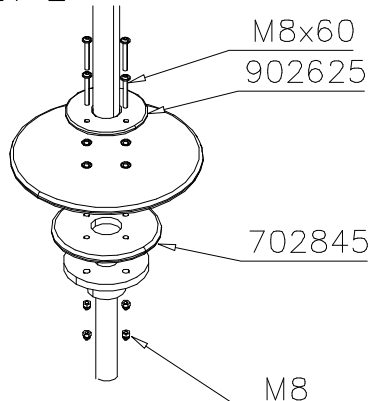


DET 3


DET 4

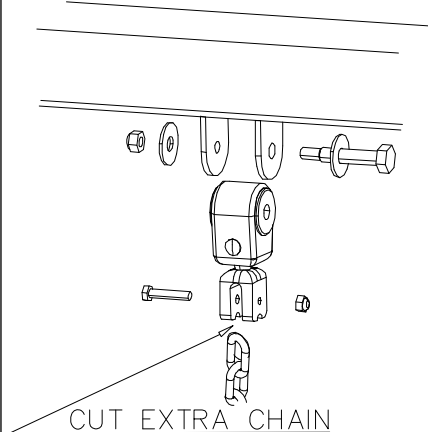


DET 5

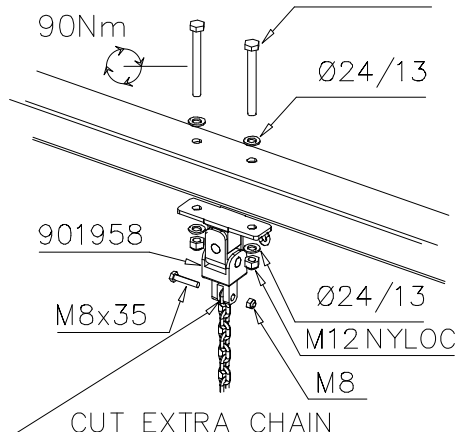


DET 6

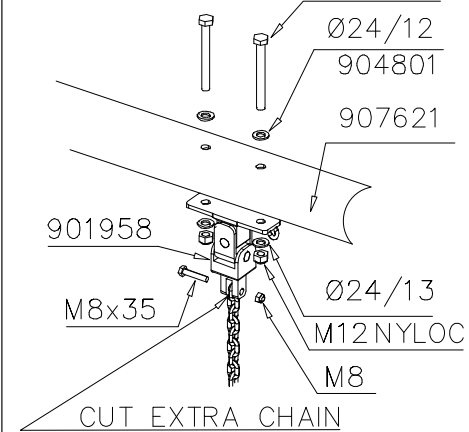


DET 7

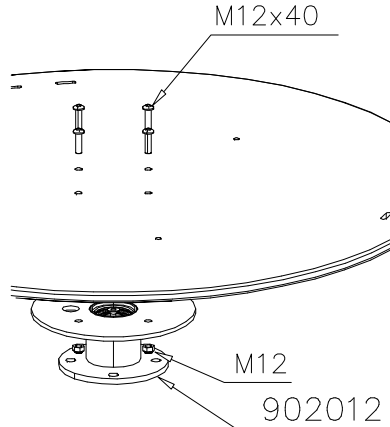


DET 8

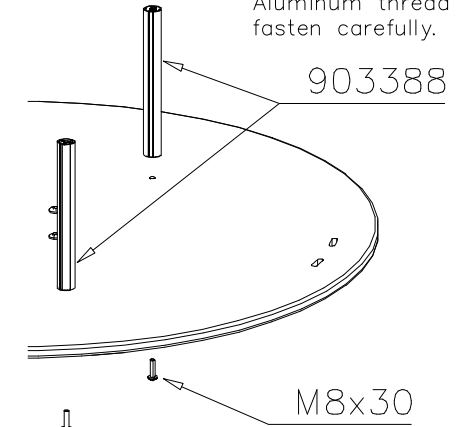


DET 9

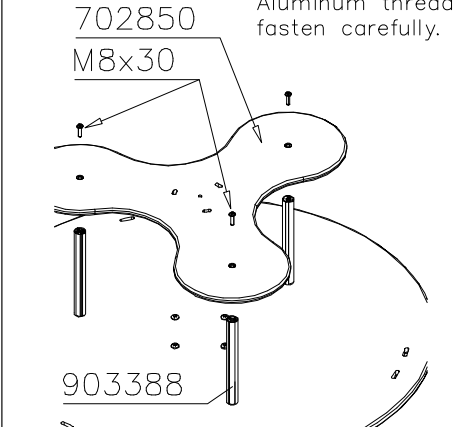


DET 10

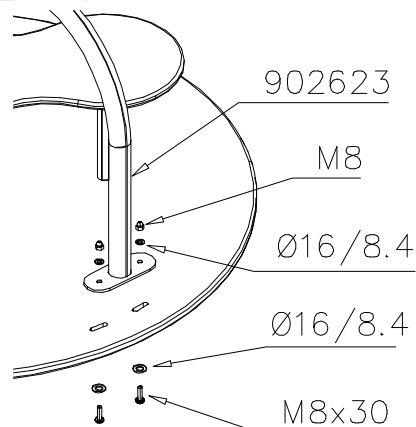


DET 11

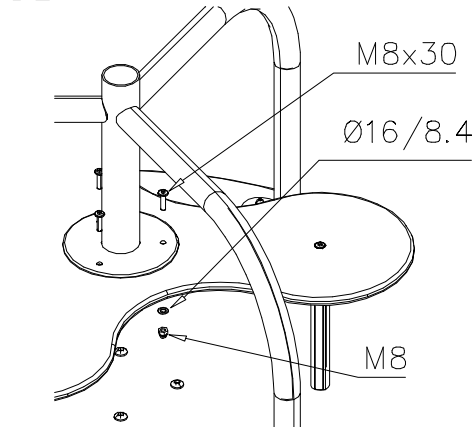


DET 12

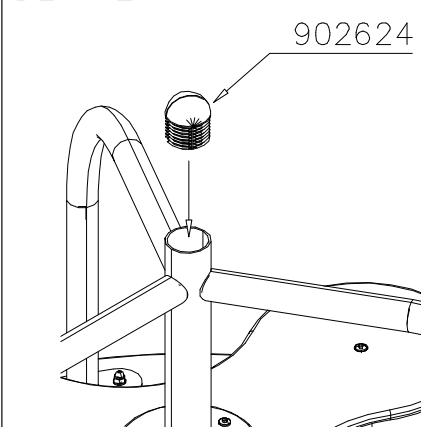


DET 13

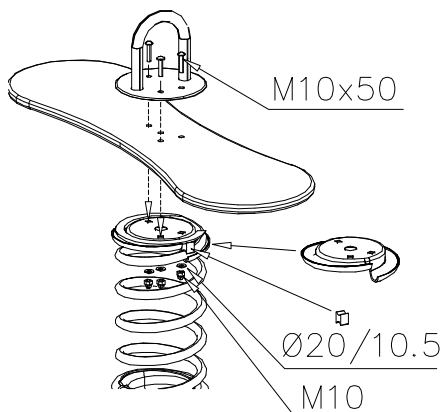


DET 14

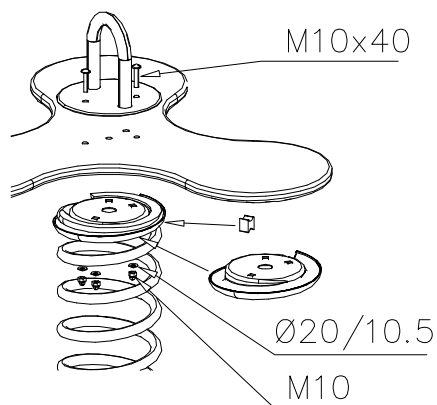


DET 15

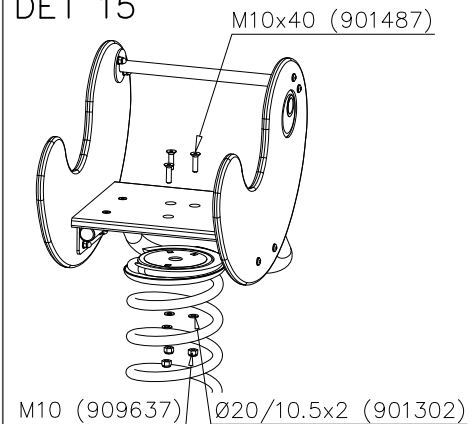


DET 16

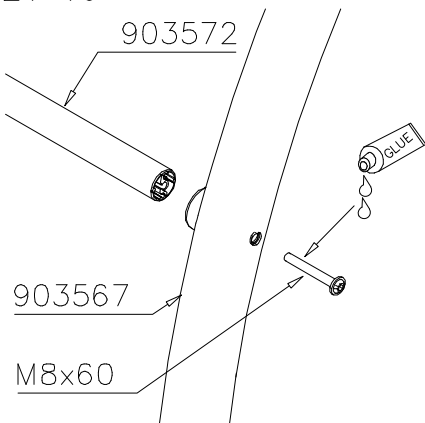


DET 17

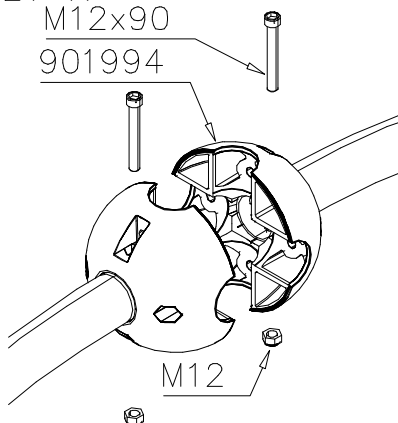


DET 18

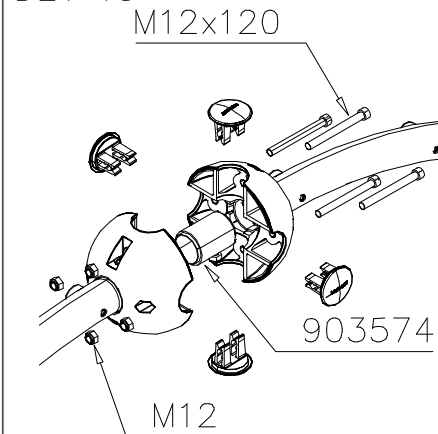


DET 19

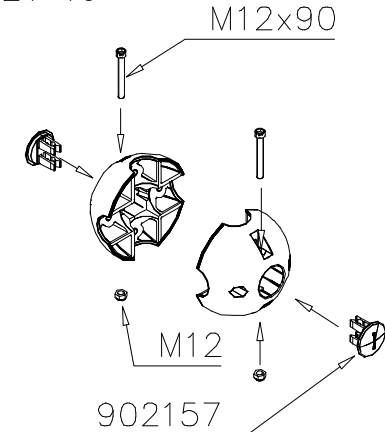


DET 20

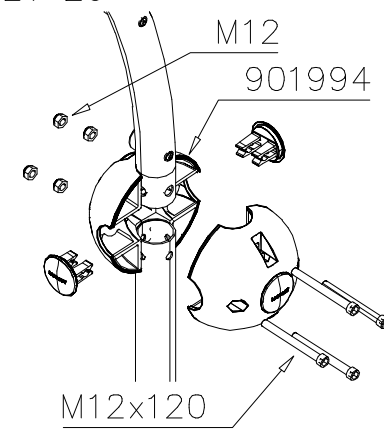

DET 21

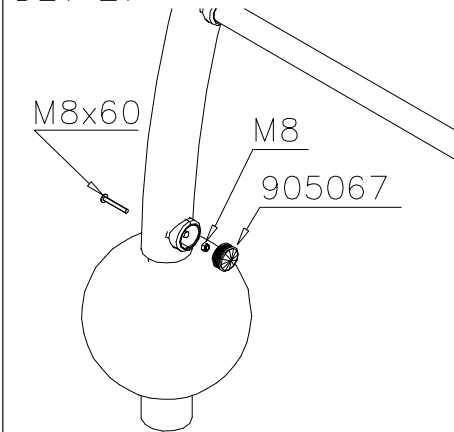


DET 22

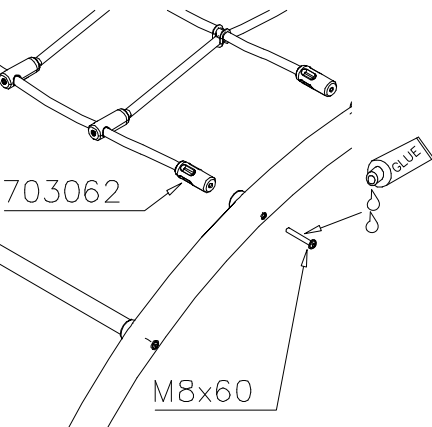

DET 23



DET 24

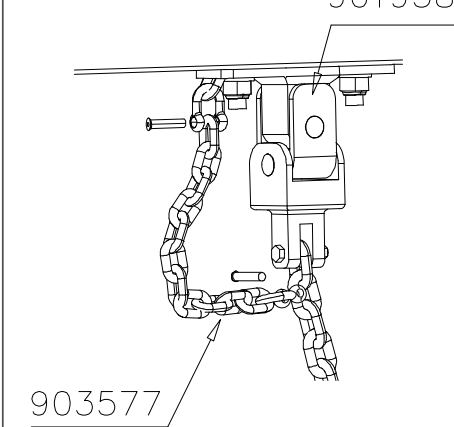

DET 25-26

M12x120

904100


904015

904102

Kun putken pää osuu adapterin kynsiin, adapteri tiukentuu paikoilleen.

Asennusjärjestys:

- 1) Pallo kiinni
- 2) Adapteri sisään
- 3) putki sisään ja lopuksi pallon lopullinen kiristys.

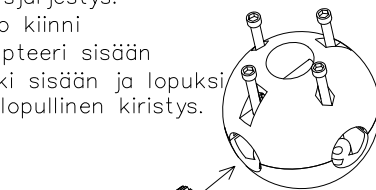

Installation order:


- 1) Close the ball
- 2) Insert adapter
- 3) Insert tube and tighten screws.

DET 27

904103

Ø18/10

M10x80

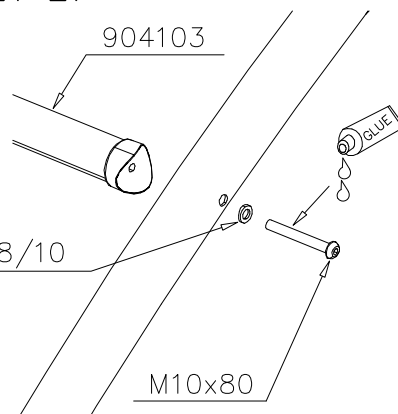

DET 28

906621

M12x35
(909347)


M12

906620

Ø24/13

M12x30
(903149)

M12 → 60 Nm

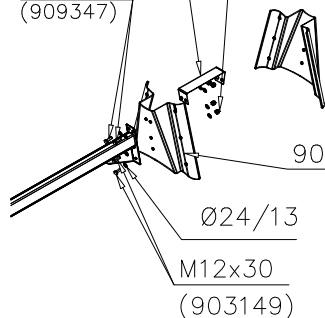

DET 29




M10x50 (905140)

Ø20/10.5x2 (901302)

M10 (909637)

DET 30

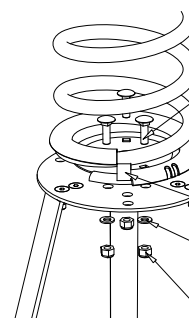

M10x35 (902252)

19x21x25 (903193)

Ø20/10.5x2 (901302)

M10 (909637)

DET 31

M12 → 60 Nm


M12x30

Ø24/13

M10 → 45 Nm

M12

904422

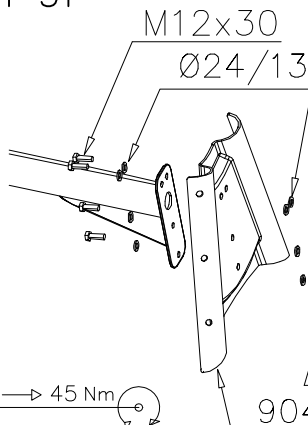

DET 32


M12 → 60 Nm

M12x100

Ø24/13

M12

904422

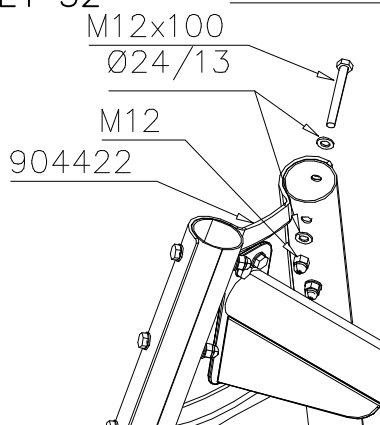

DET 33


M12

904801

904428


904430

904904

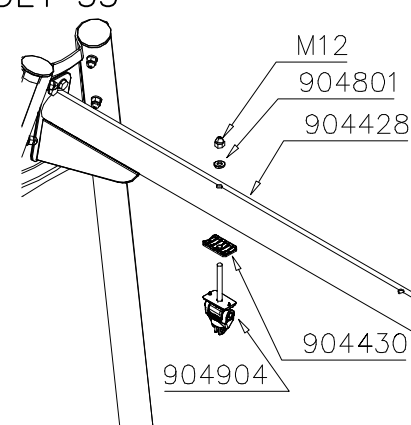


DET 34

904800

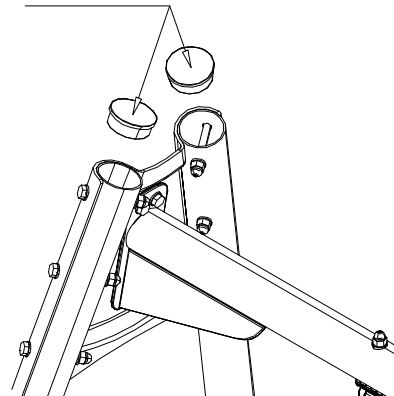

DET 35

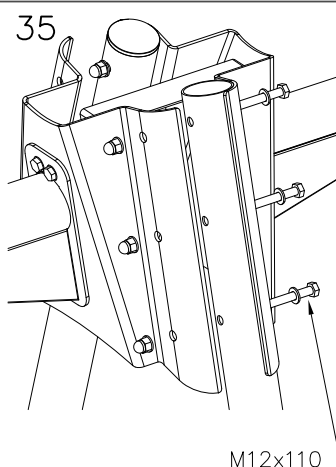


M12x110

DET 36

DET 1 Ø8 ↓ 90 (4x) Concrete / Betoni	DET 2 Ø10x100 Ø24/13	DET 3 S 260
DET 4 Betoni / Concrete Harjateräs / Ribbed bar (A500HW (2x))	DET 5 S 420 500	DET 6
DET 7 S 420	DET 8	DET 9
DET 10 Concrete 600x600x250 S 550	DET 11 M10 Ø20/10.5 M10x25	DET 12 Ø25 105 32 85 53


DET 13

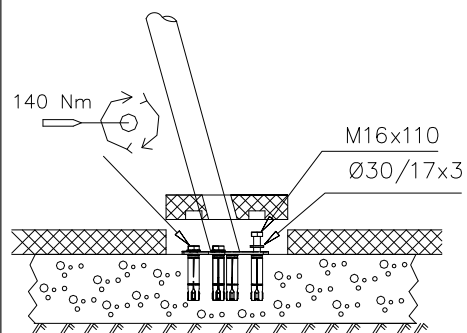


DET 14




DET 15




DET 16

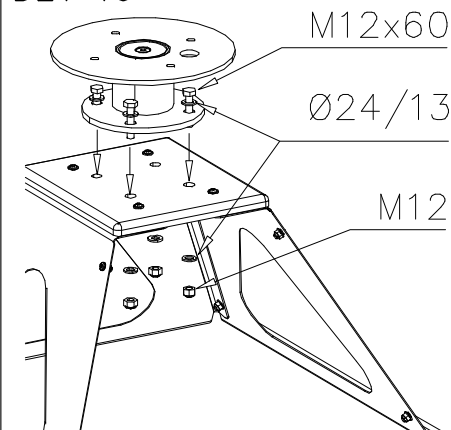


DET 17

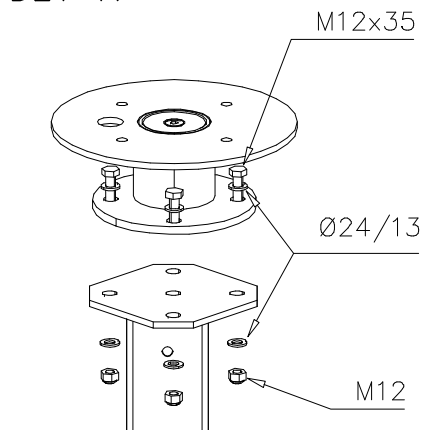


DET 18

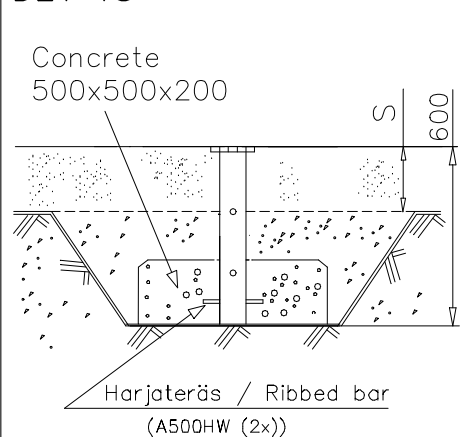


DET 19

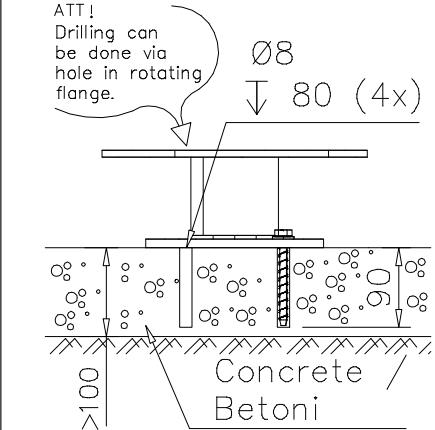


DET 20

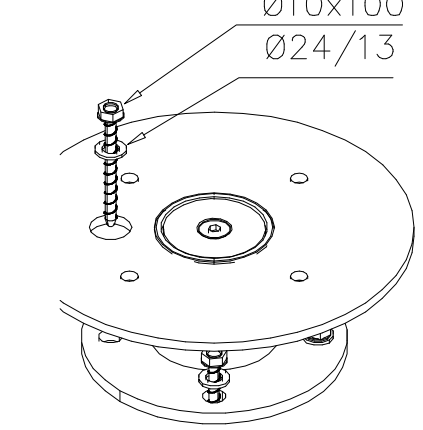


DET 21

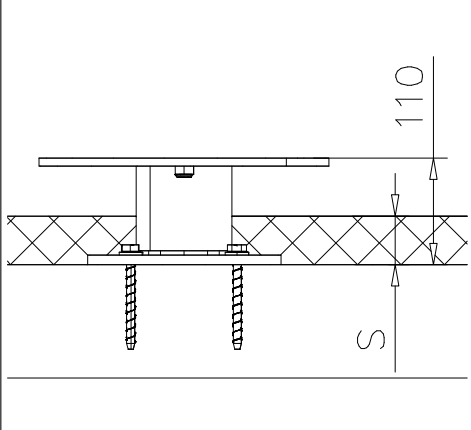


DET 22

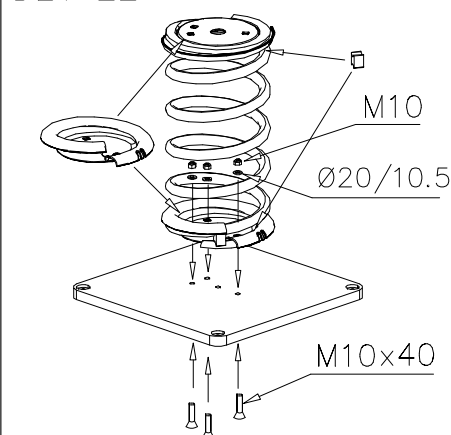

DET 23

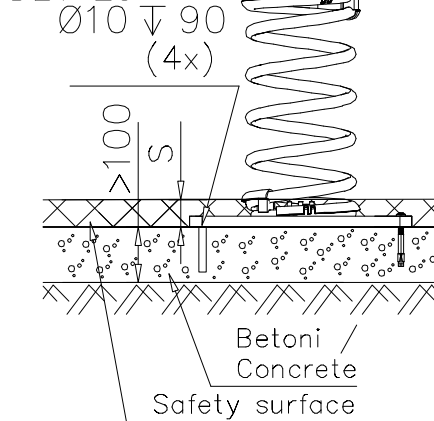

DET 24

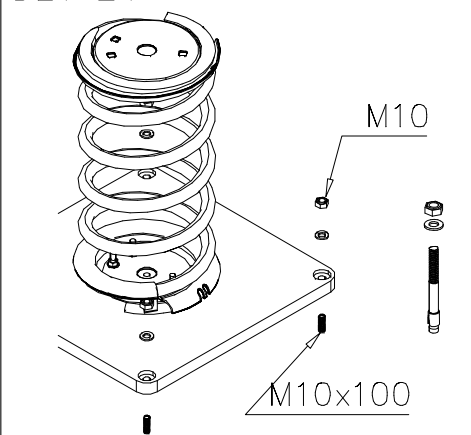

DET 25 M10x25 909519 Ø20/10.5 M10	DET 26 Concrete 500x500x200 R100 400	DET 27 Concrete 500x500x200 R100 400
DET 28 Ø10 x 90 (3x) Ø233 202 58	DET 29 M10x100 902256 902277 904074 904087 Concrete 100	DET 30 902134 902256
DET 31 Ø10 x 90 (4x) 904031 150 240 66	DET 32 M10x100 904010 904031 Concrete 100	DET 33 Ø10 x 90 (3x) 904010 202 175
DET 34 703645 909519 Ø20/10.5 M10x25	DET 35 Concrete 600	DET 36