


LAPPSET®




PANNA

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION









REF: 080905
DATE: 23.5.2017


080905

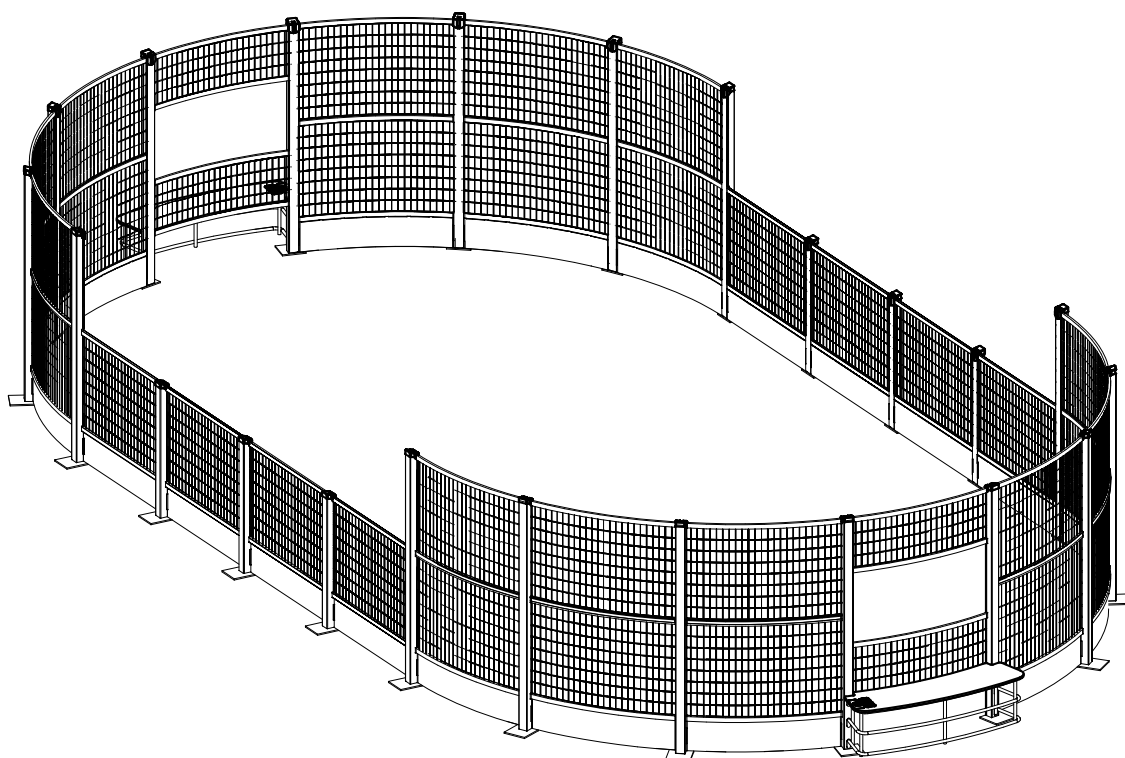

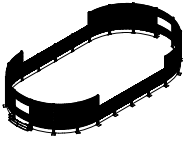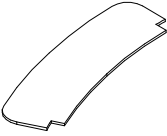906398	PCS	704229	PCS	705228	PCS		PCS		PCS		PCS
	1		2		1						
		20x530x1562									
	PCS		PCS		PCS		PCS		PCS		PCS

906398 =

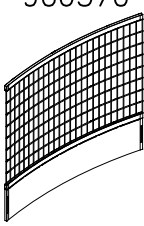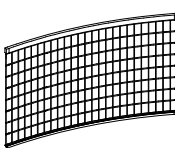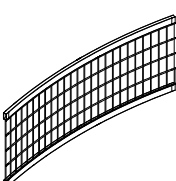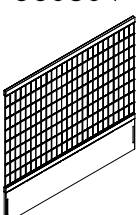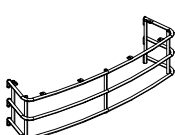904980	PCS	904982	PCS	904978	PCS	904986	PCS	904975	PCS	904974	PCS
	2		2		12		16		2		2
LEFT		RIGHT						LEFT		RIGHT	
904973	PCS	906370	PCS	904672	PCS	904680	PCS	904953	PCS	904958	PCS
	8		12		12		4		6		6
904957	PCS	906364	PCS	904686	PCS	906400	PCS	906399	PCS		PCS
	6		8		2		2		2		
				GOAL		LEFT		RIGHT			
	PCS		PCS		PCS		PCS		PCS		PCS

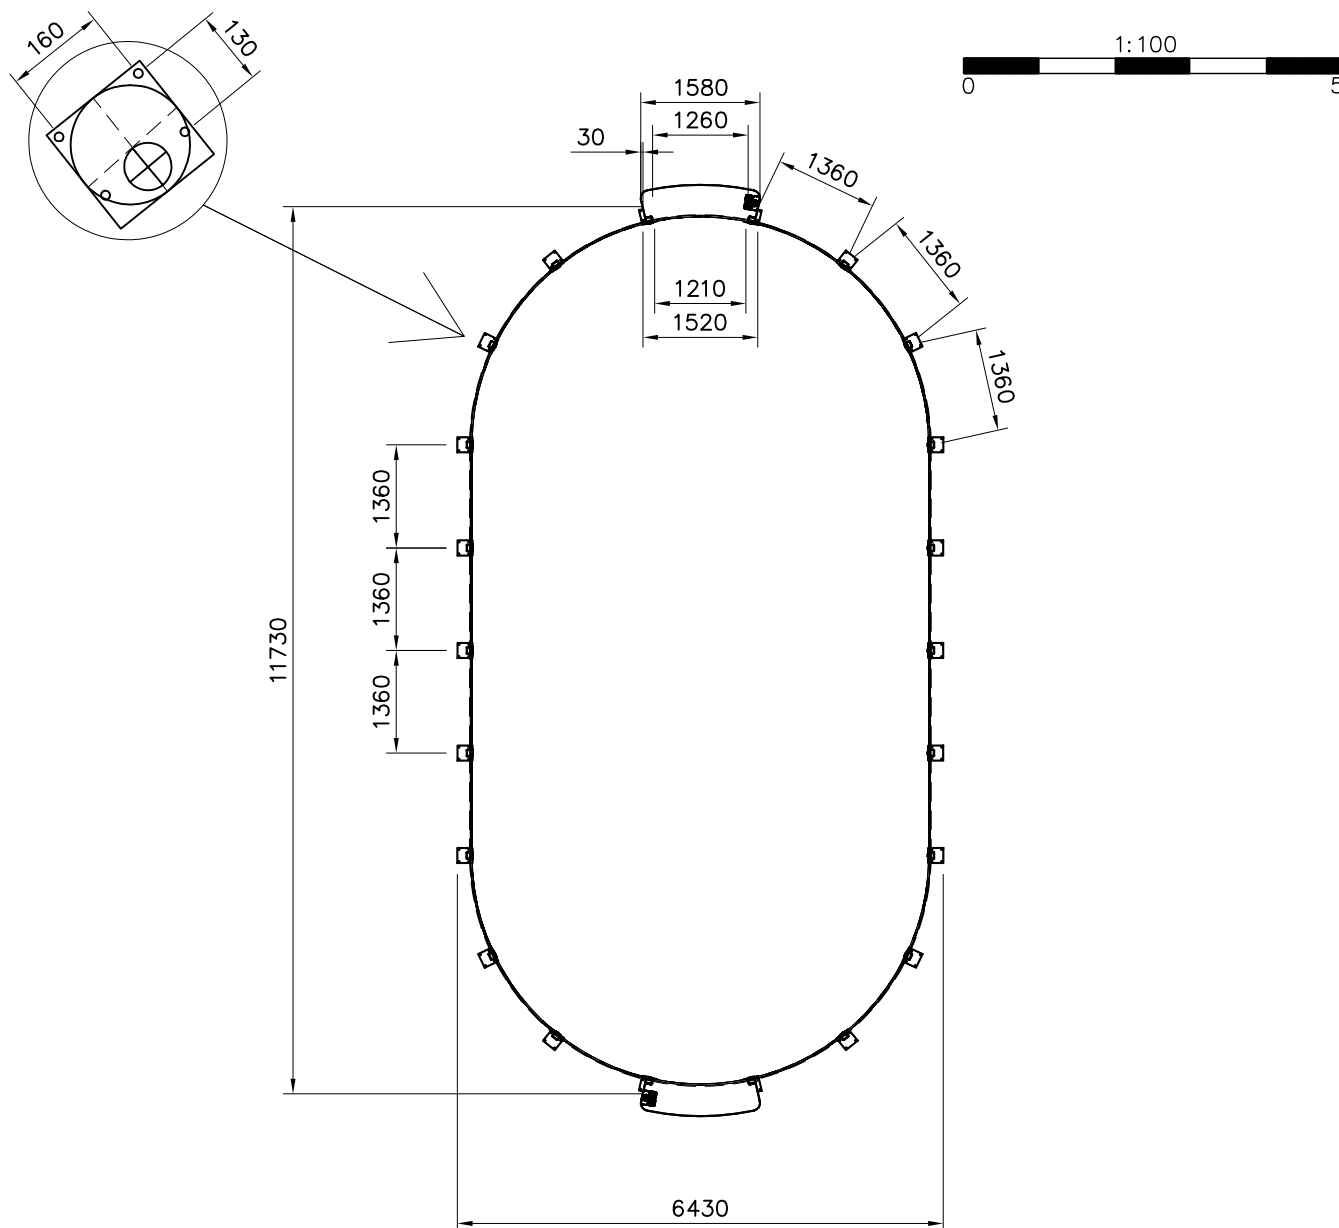


Kun käytetään keinonurmea


- 1) Ensin kannattaa liimata tekonurmen palaset yhteen. Lisätietoja Saltex asennusohjeessa.
- 2) Kun liima on hyvin kuivunut niin rakennetaan Panna nurmen ympärille.




When using artificial grass



- 1) Install and glue the artificial grass (see the Saltex installation instructions)
- 2) Build Panna 080905 on the artificial grass (Panna 080905 assembling instructions)

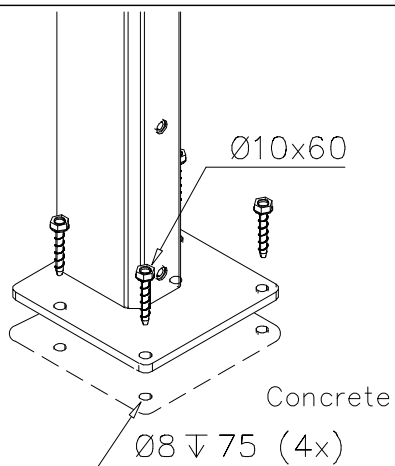


If the product is not installed on one large concrete platform, Option 1.

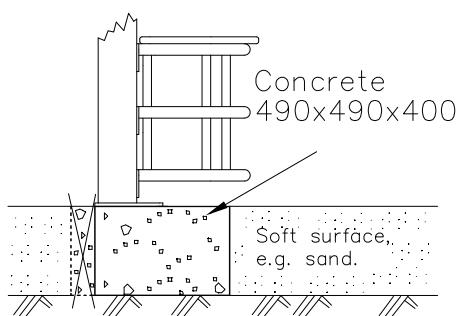

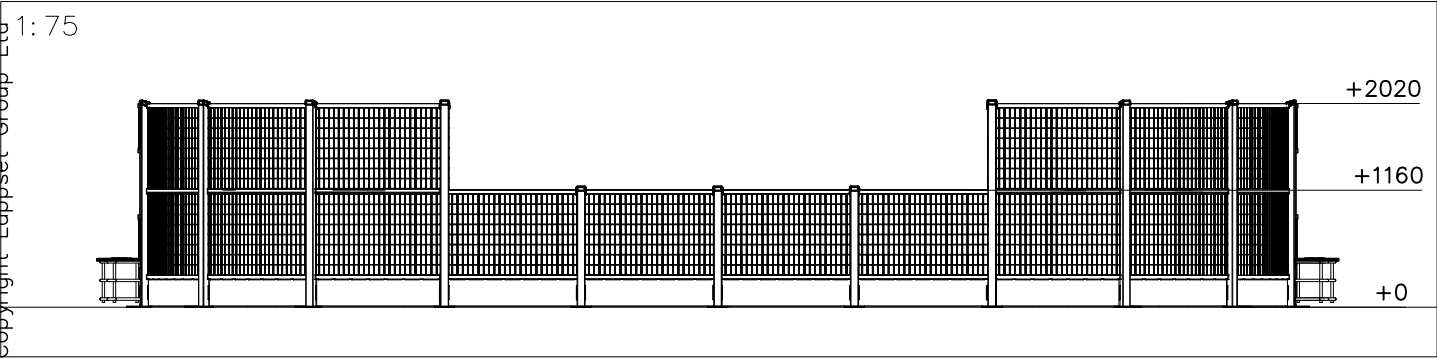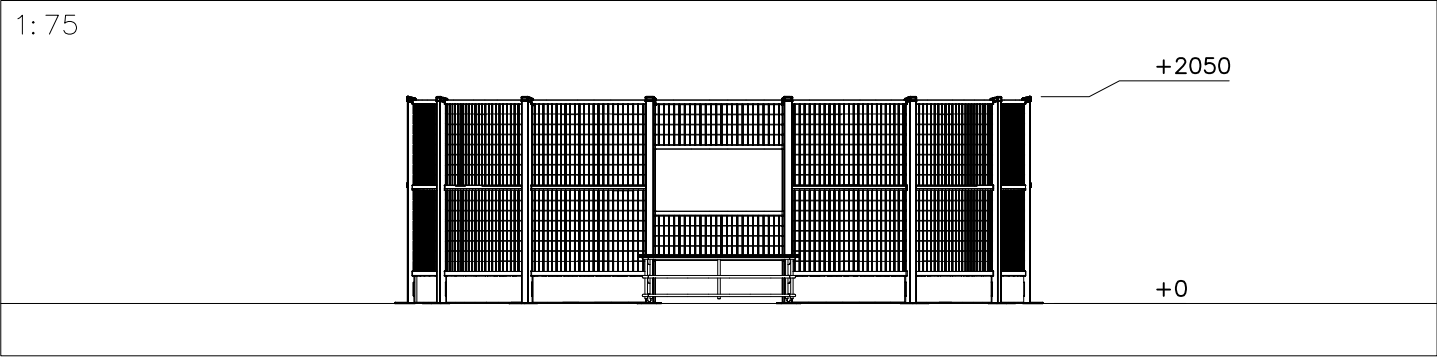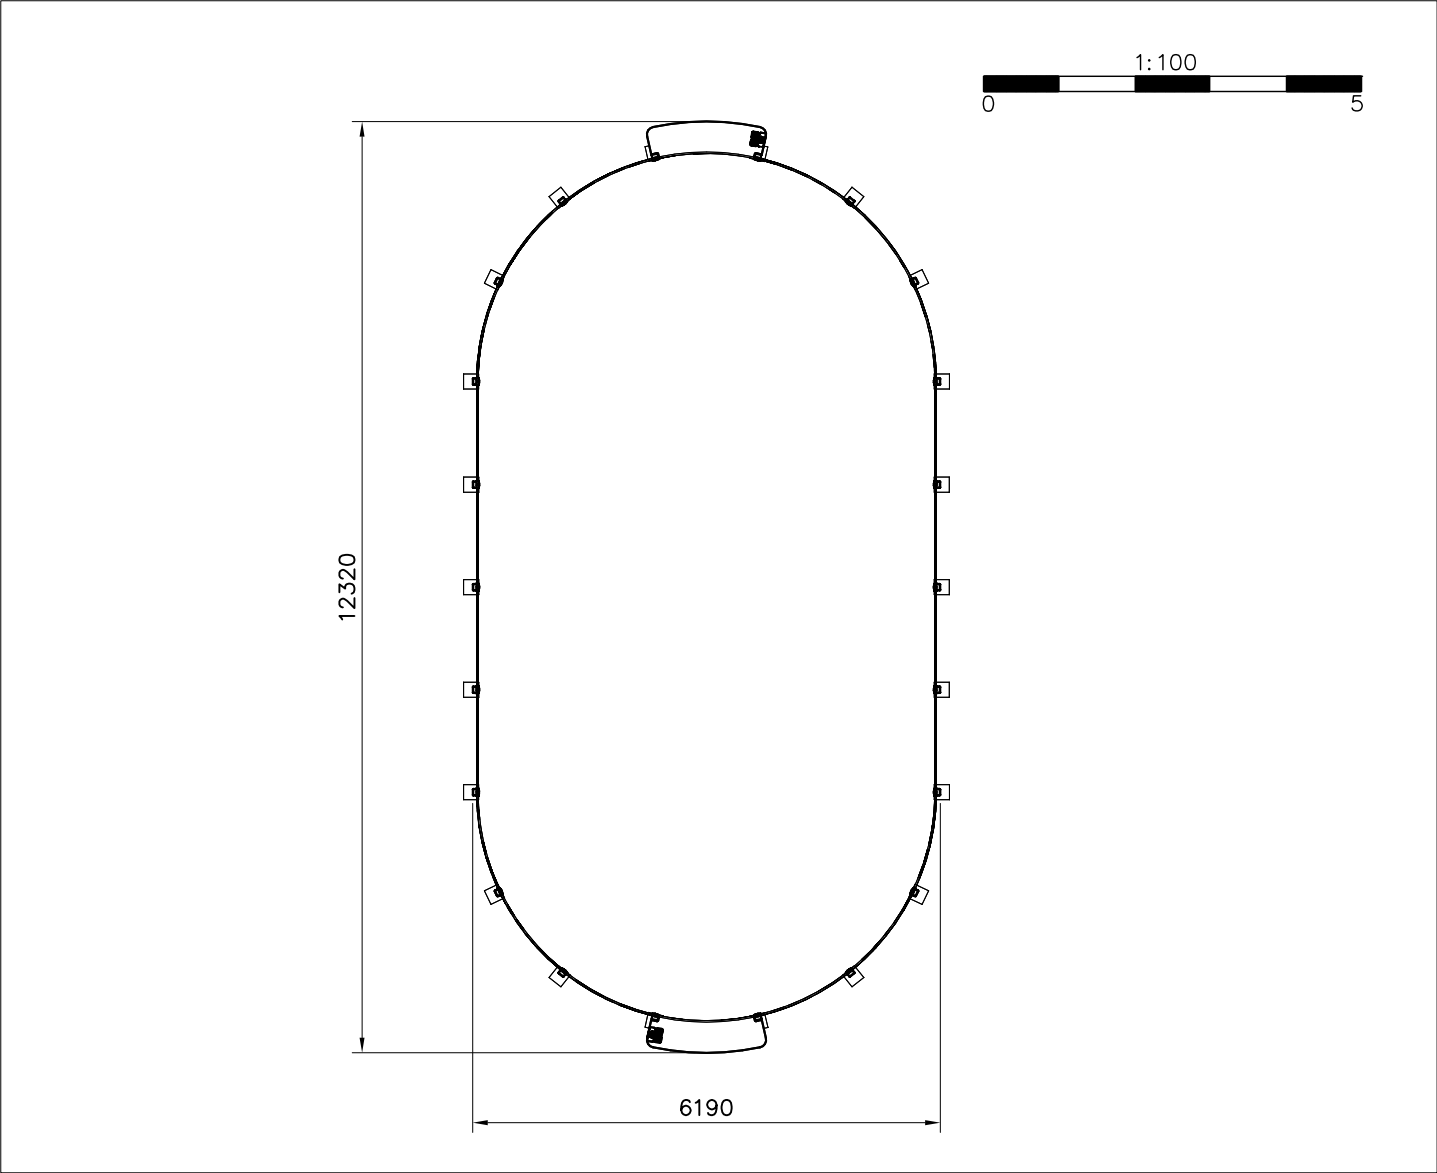


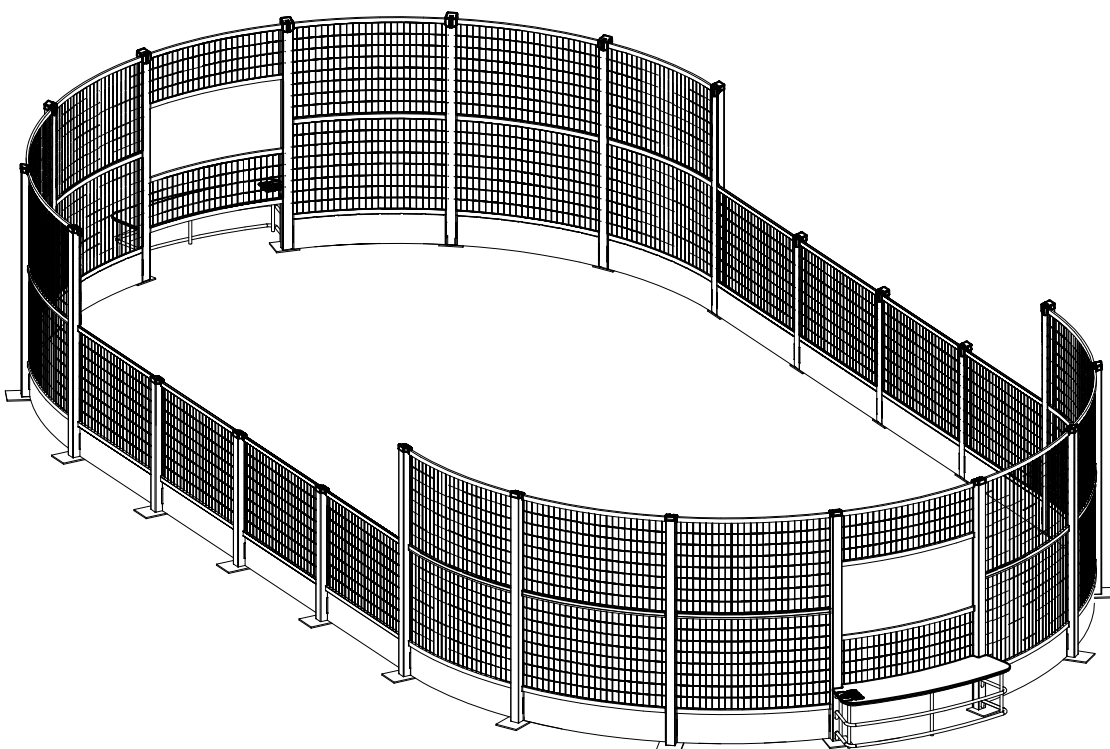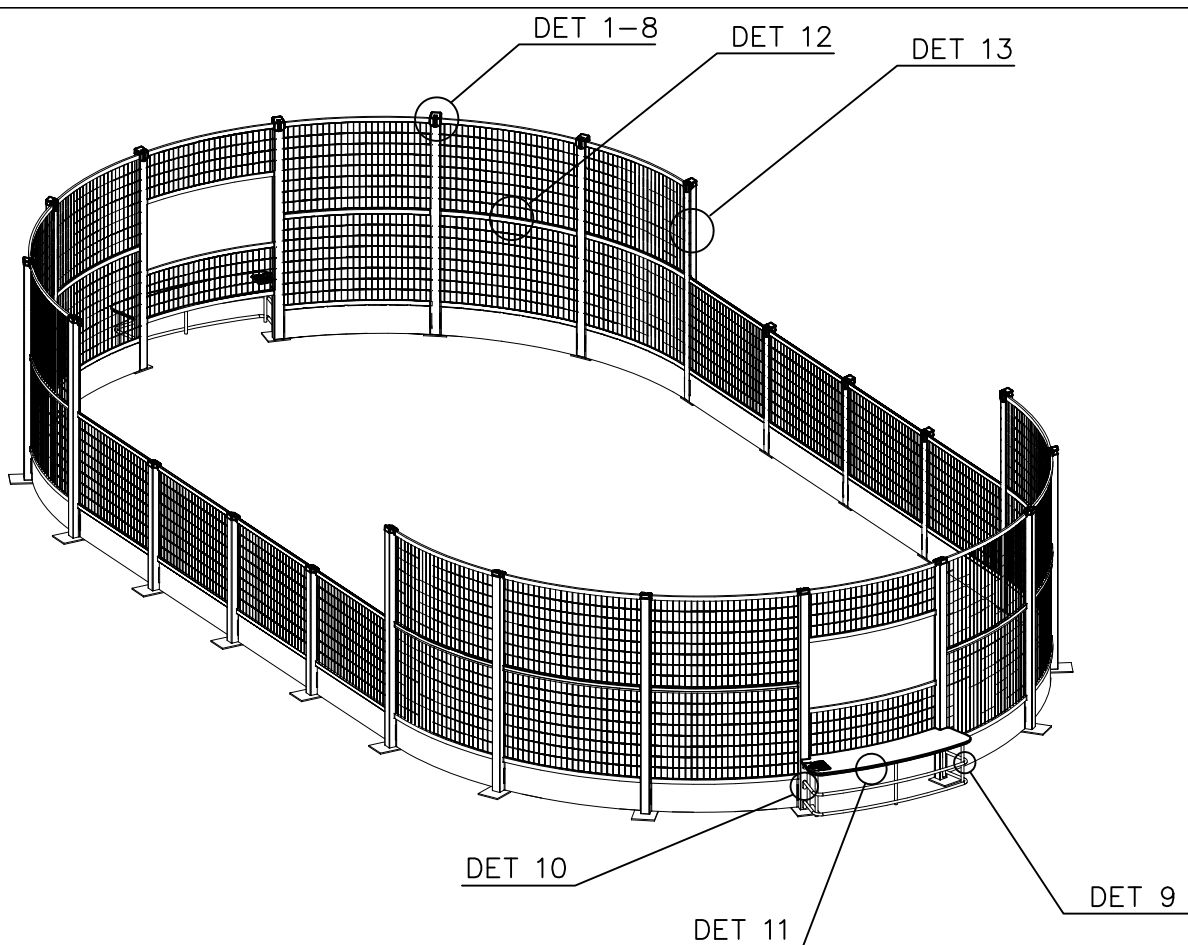


DET 1

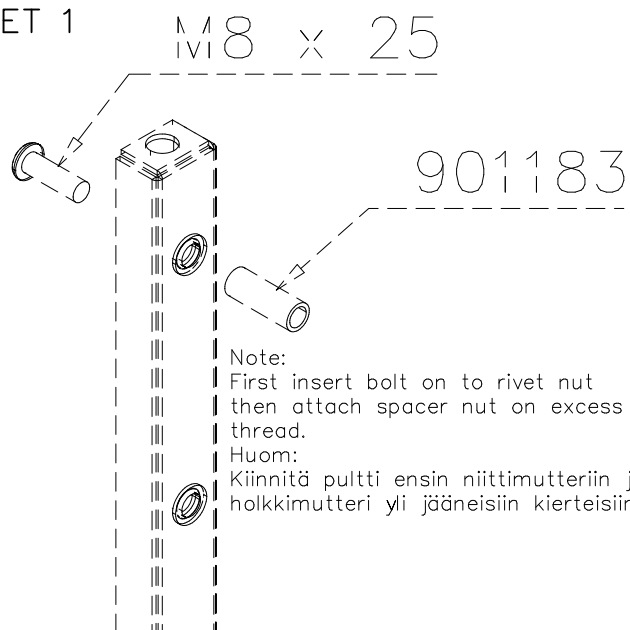


DET 2

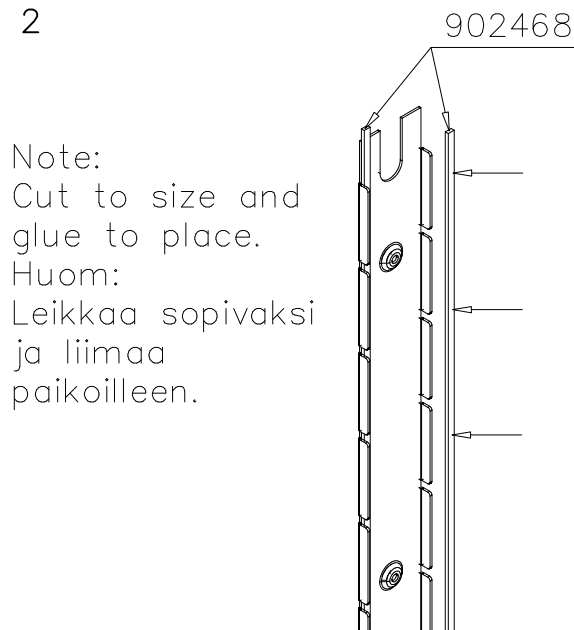


DET 3

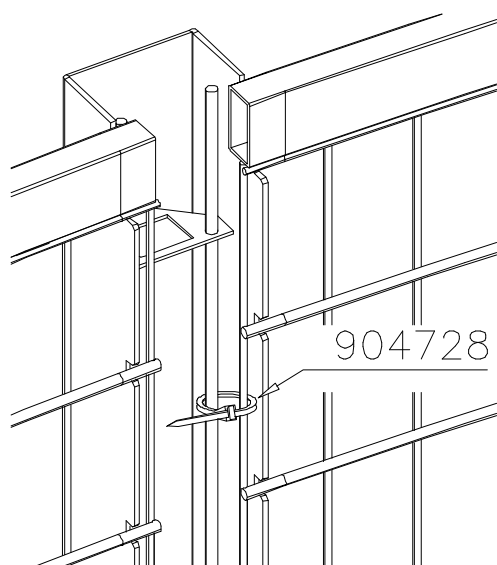


DET 4

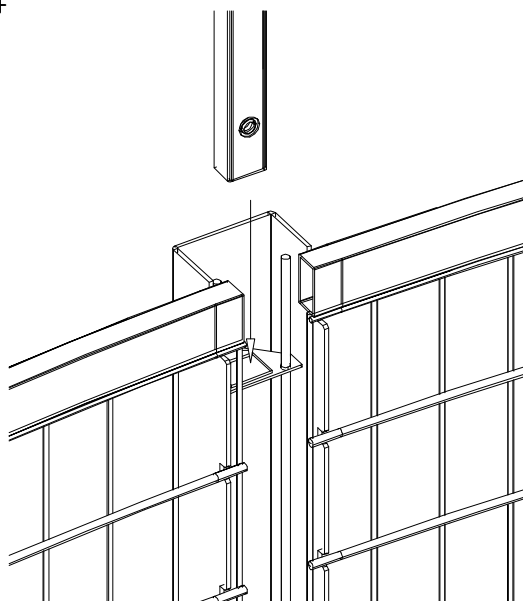


DET 5

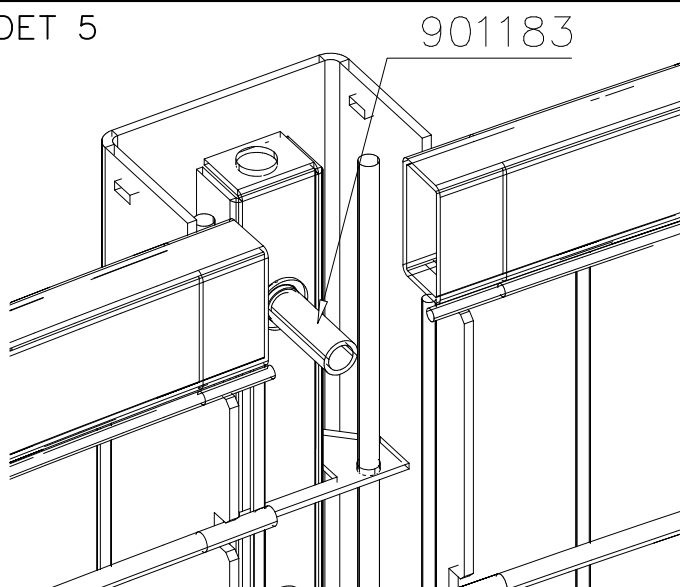

DET 6

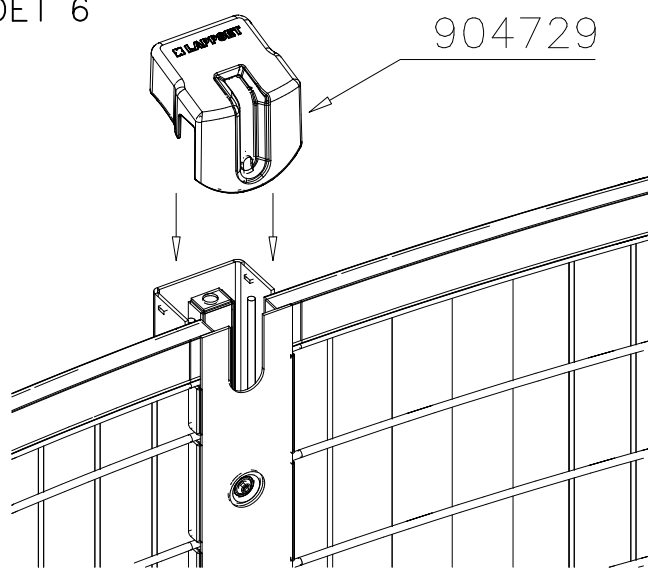

DET 7 M8x20 (905827) M8x60 (909866) 904729 Note: Lubricate thread well and turn in very slowly. Huom: Voitele kierre huolellisesti ja kierrä kiinni erittäin hitaasti.	DET 8 Pop Rivet 4,8x28 (905390) 904729 Note: Drill 5mm hole for the pop rivet. Huom: Pora 5mm reikä pop- niitille. ~33 mm 8-9mm
DET 9 PEITETULPPA / PLUG 905123	DET 10 904686 M10x30 (902233) Ø30/10.5 (909255)
DET 11 704229 M8x25 (909256) Ø16/8.4 (909256) M8 (909633) 904686	DET 12 909213 M8x30 Note: Hammer carriage bolt to hole and tighten the nut. Huom: Lyö lukkoruuvi reikään ja kiristä mutteri. 909256 Ø16/8.4 909633 M8

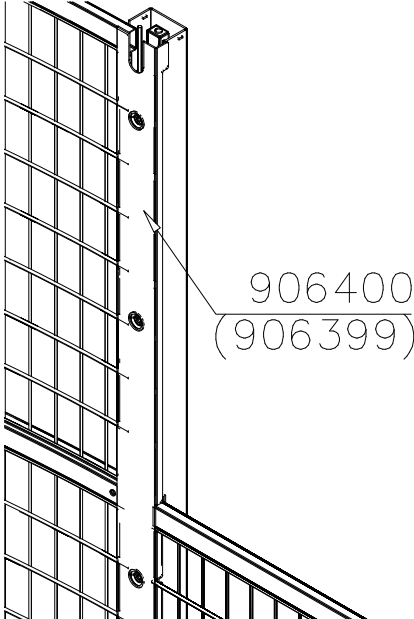DET 13 	DET 14
DET 15	DET 16
DET 17	DET 18

