
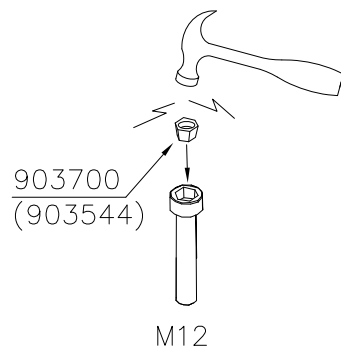


Security plugs are included only for selected products.


Hox!
Pultit on kiristettävä lopulliseen kireyteen, ennen turvapinnien asennusta.

Note!
Tighten bolts properly, before installing security plugs.

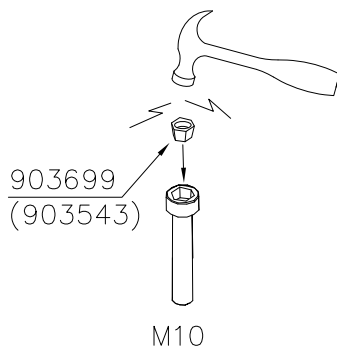


	<p>① 902256 PCS</p> <p>② 909628 PCS</p>	<p>1</p> <p>3</p>
	<p>Ø60*150</p>	<p>M10x100</p>
	<p>PCS</p>	<p>PCS</p>
	<p>PCS</p>	<p>PCS</p>
	<p>PCS</p>	<p>PCS</p>
	<p>PCS</p>	<p>PCS</p>
	<p>PCS</p>	<p>PCS</p>
<p>+180</p> <p>+0</p>	<p>PCS</p>	<p>PCS</p>


DET 1

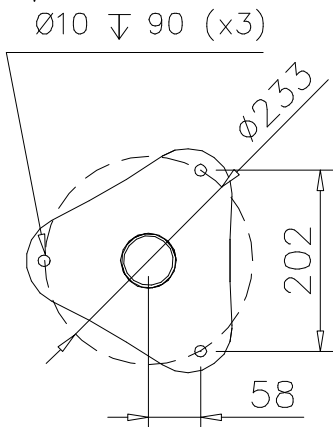


DET 2

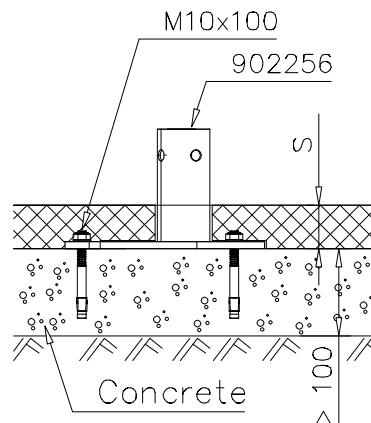

DET 3

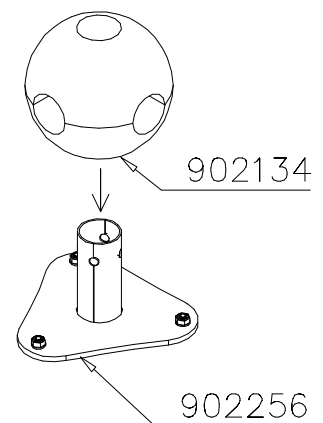


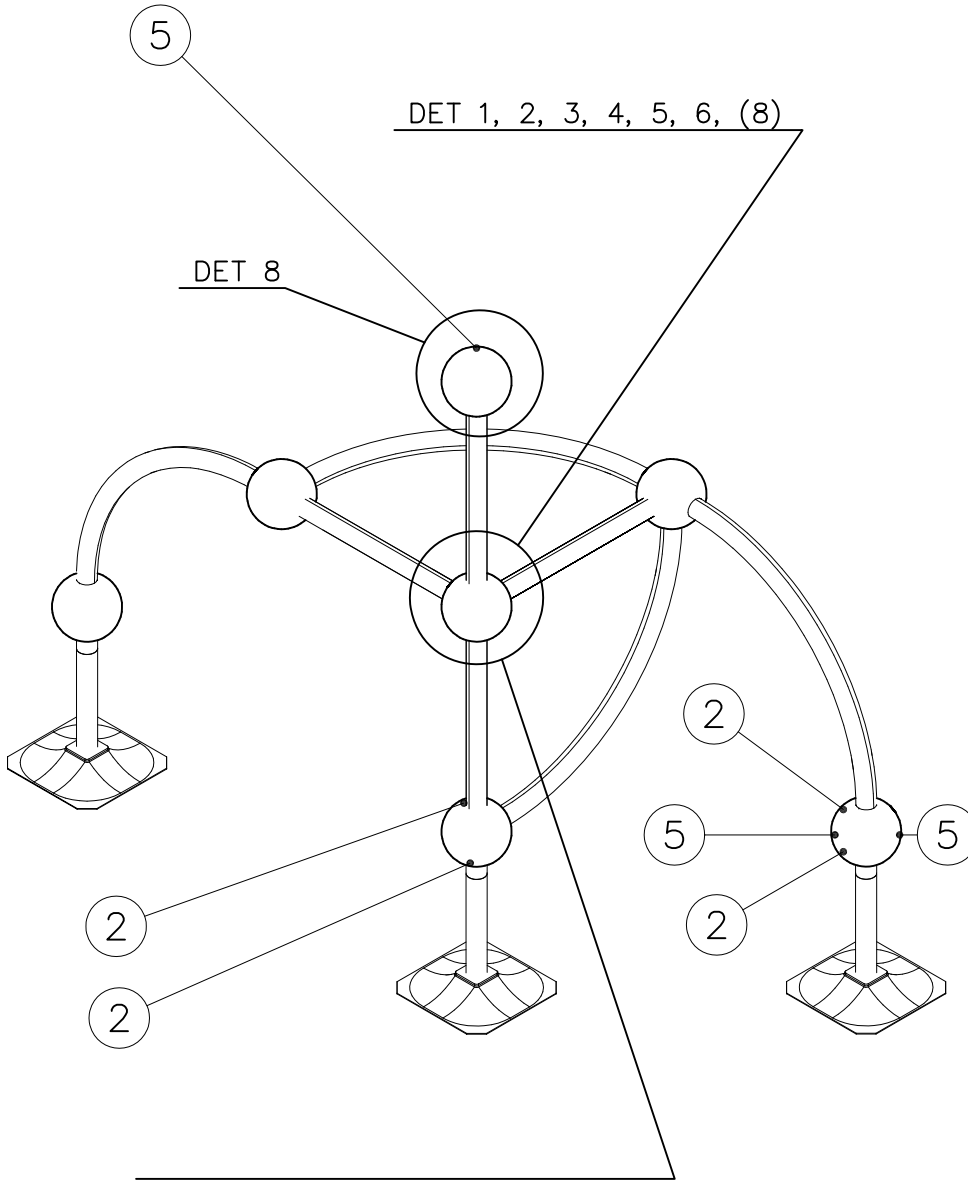


DO NOT TIGHTEN THE JOINTS UNTIL THE STRUCTURE IS COMPLETE.

① 901803	PCS	② 901994	PCS
	2		2
M12x90		Ø190	
③ 902096	PCS	④ 902234	PCS
	4		6
M12x120		M12	
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS
	PCS		PCS

DET 1

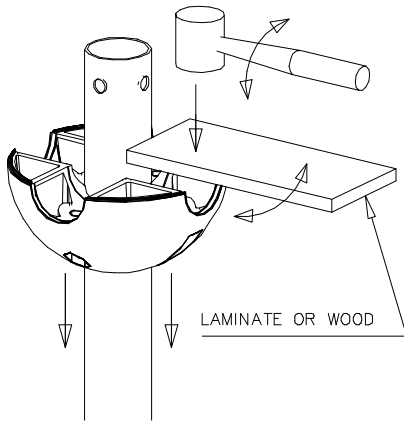


DET 2

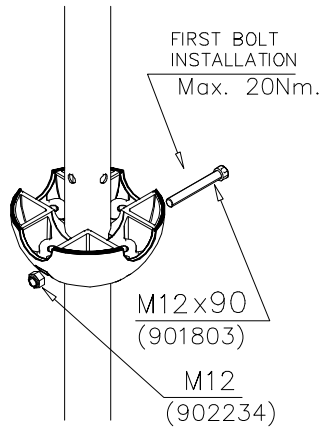


DET 3




DET 4

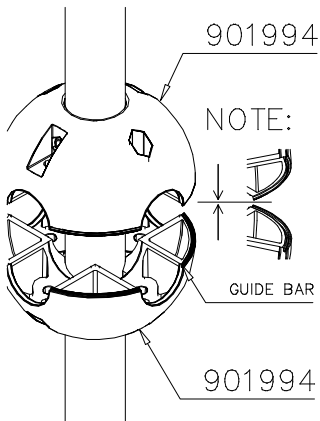

DET 5

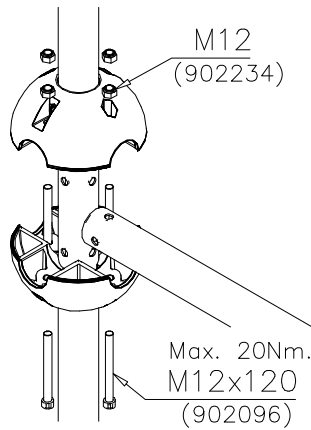


DET 6

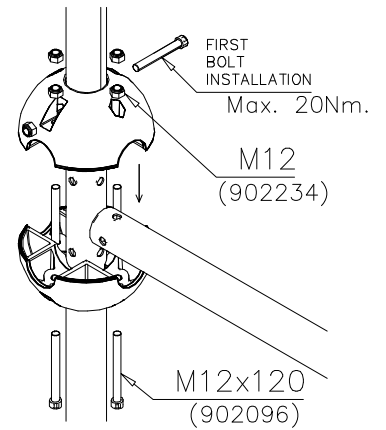

REMEMBER
FINAL
TIGHTENING

DET 7

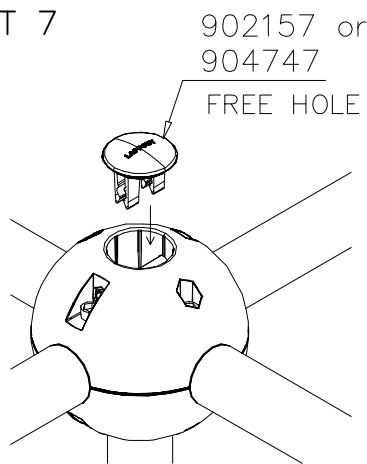

DET 8

