





PANNA

A SENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION





REF: 080902
DATE: 25.8.2025


080902M

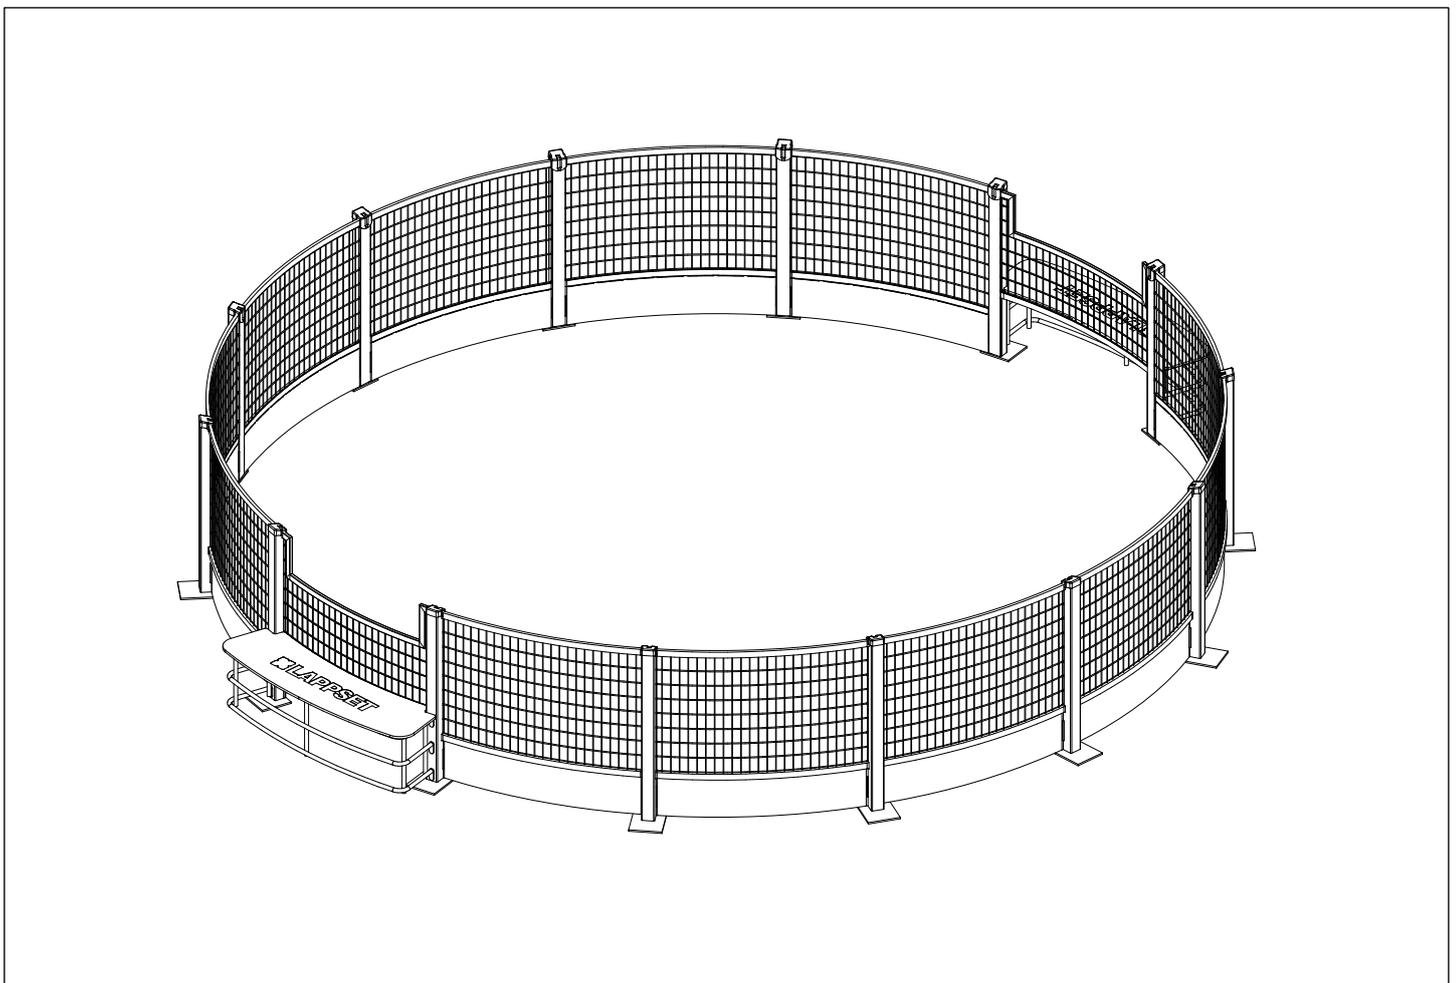

709146	PCS	705191	PCS		PCS		PCS		PCS		PCS
	2		1								
											
20x530x1562											

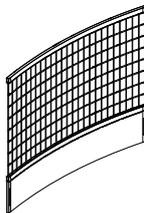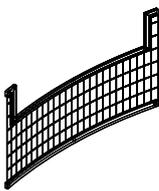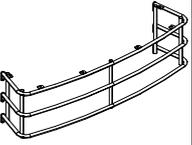

910751	PCS	910752	PCS	910753	PCS	904671	PCS	908042	PCS	904958	PCS
	2		2		10		12		2		14
											
LEFT		RIGHT									
904686	PCS	904963	PCS	904964	PCS	904957	PCS		PCS		PCS
	2		2		2		10				
											
GOAL		LEFT		RIGHT							
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

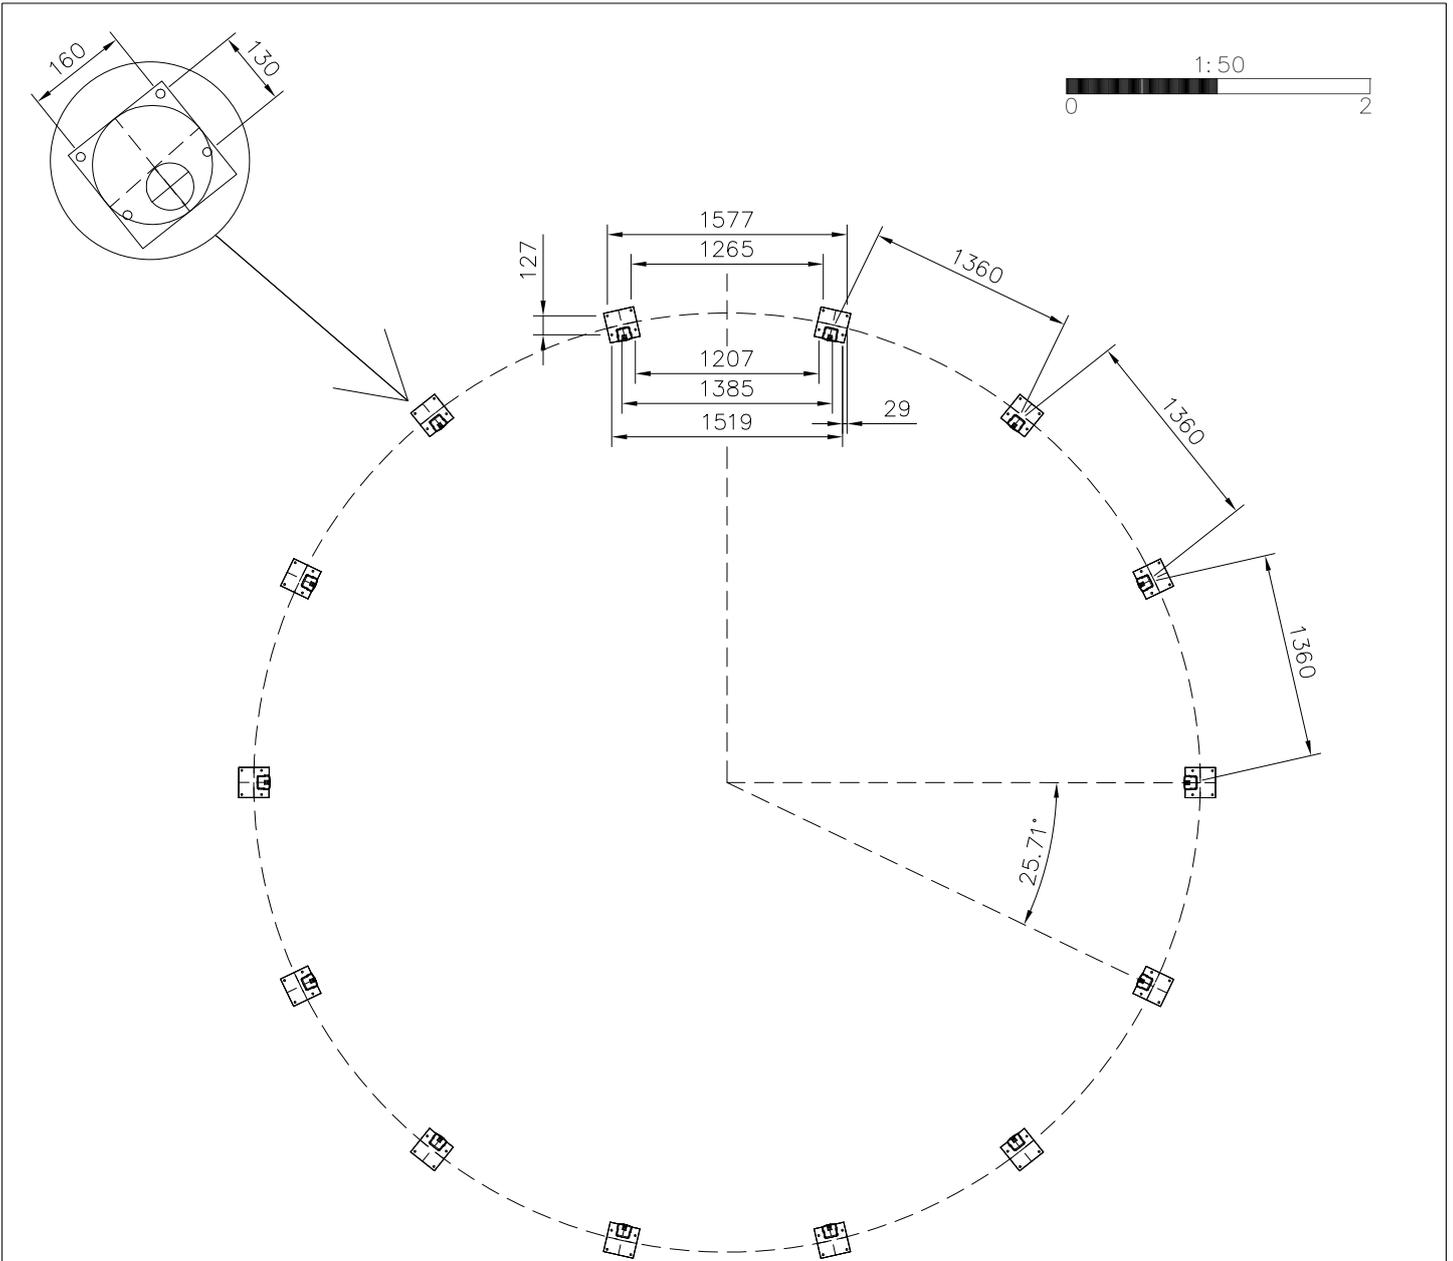


Kun käytetään keinonurmea


- 1) Ensinnäkin kannattaa liimata tekonurmen palaset yhteen (kaksi puolipallo mallista).
- 2) Kun liima on hyvin kuivunut niin rakennetaan Panna nurmen ympärille.

When using artificial grass


- 1) Install and glue the artificial grass
- 2) Build Panna 080902 on the artificial grass (Panna 080902 assembling instructions)



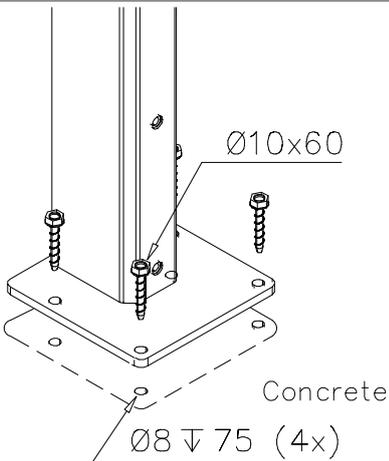




If the product is not installed on one large concrete platform, Option 1.






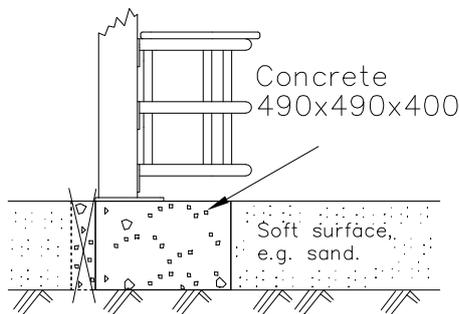








If the product is not installed on one large concrete platform, Option 2.


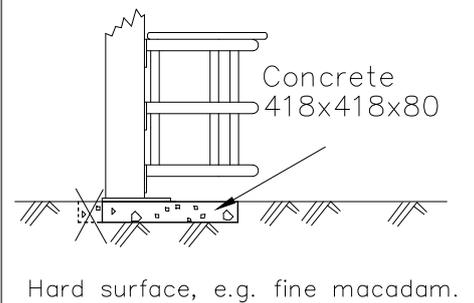


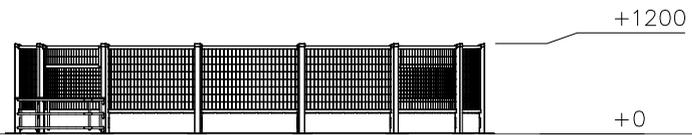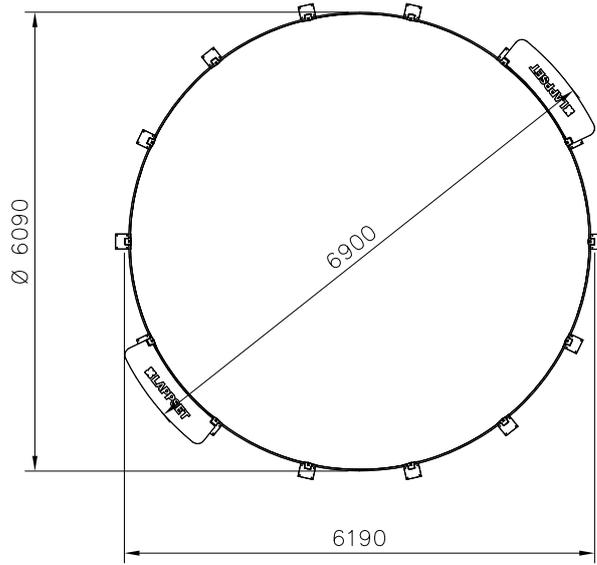

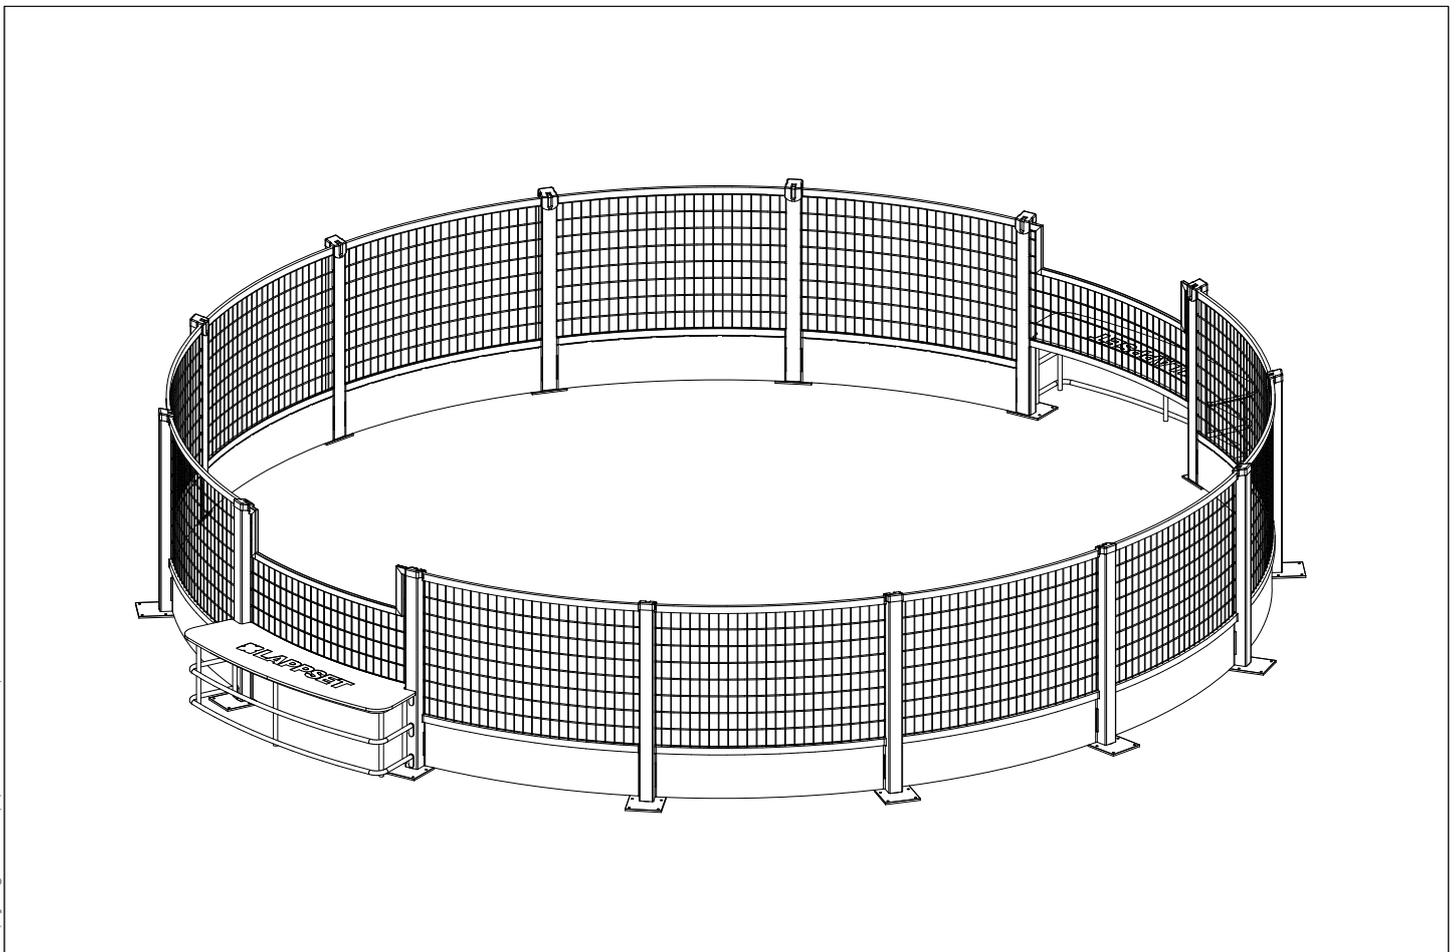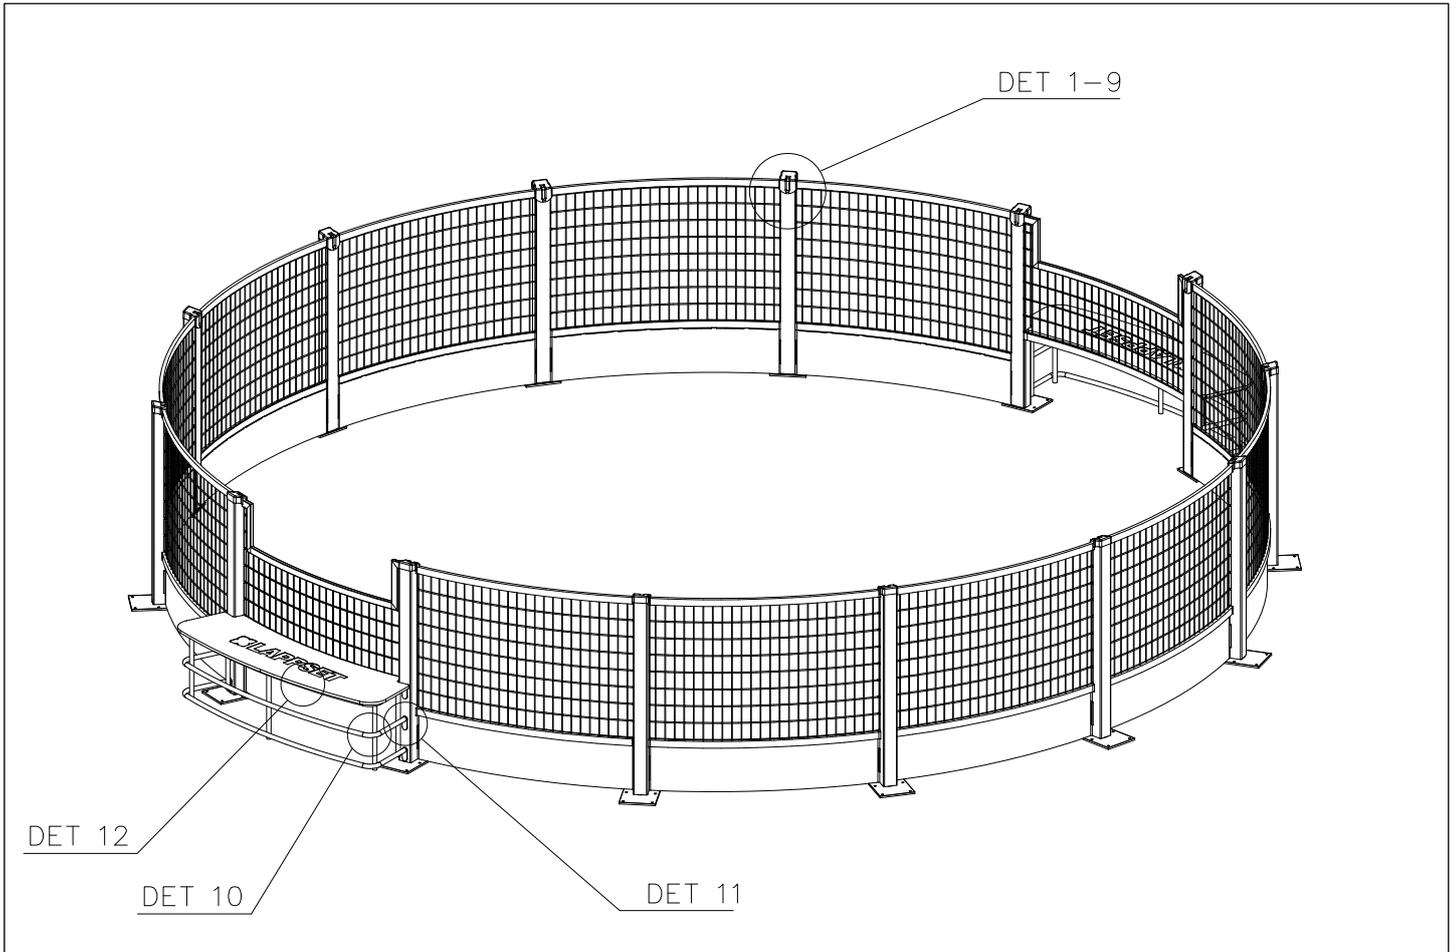

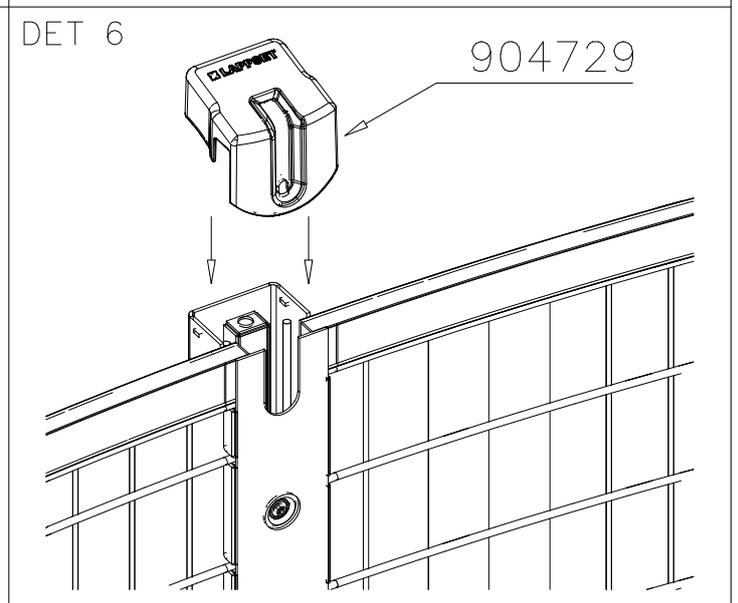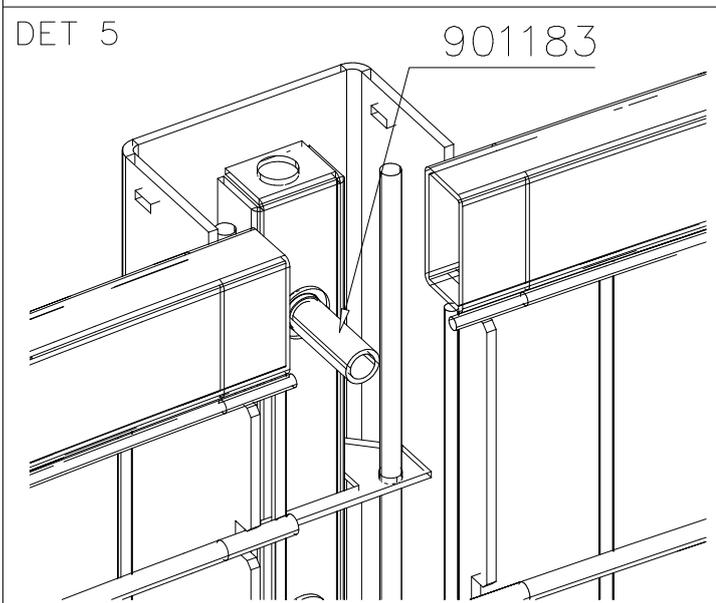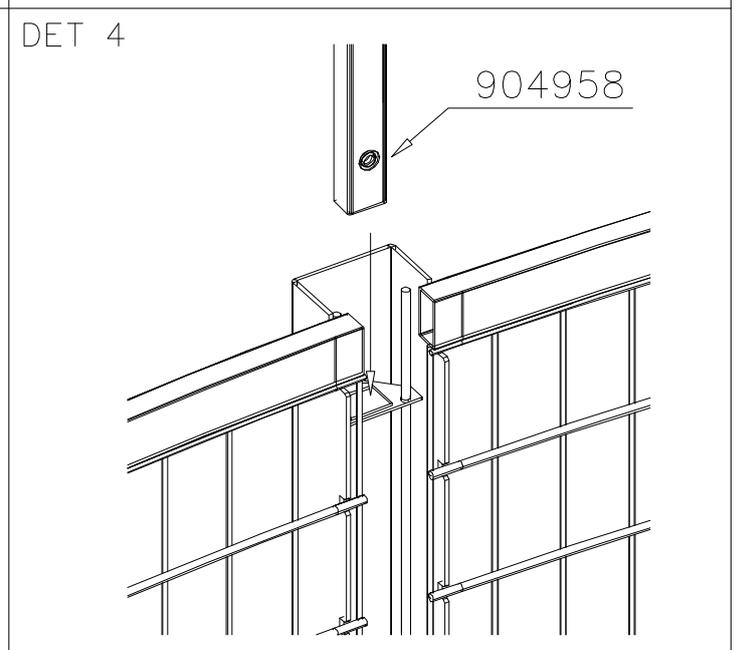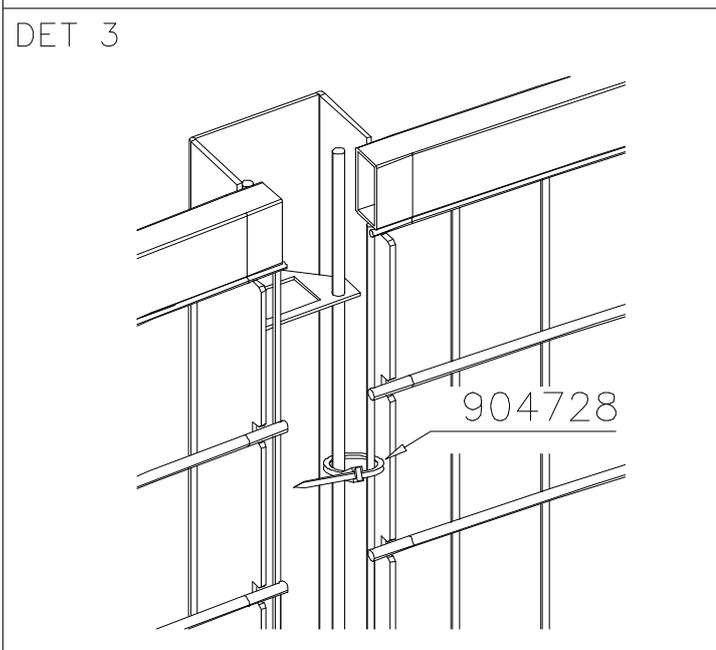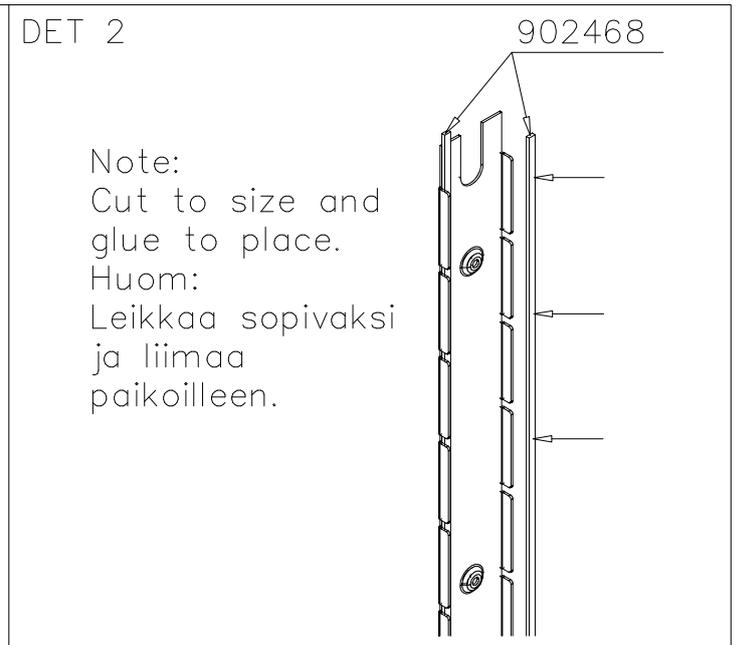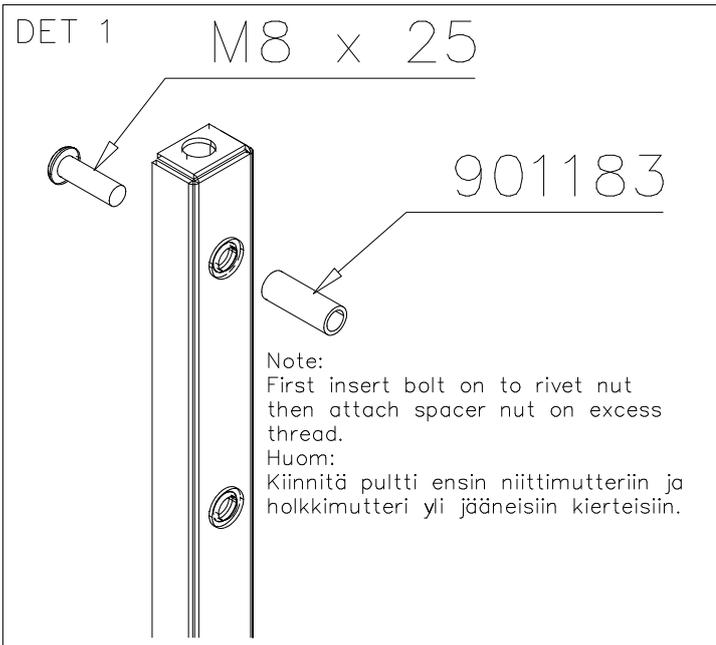

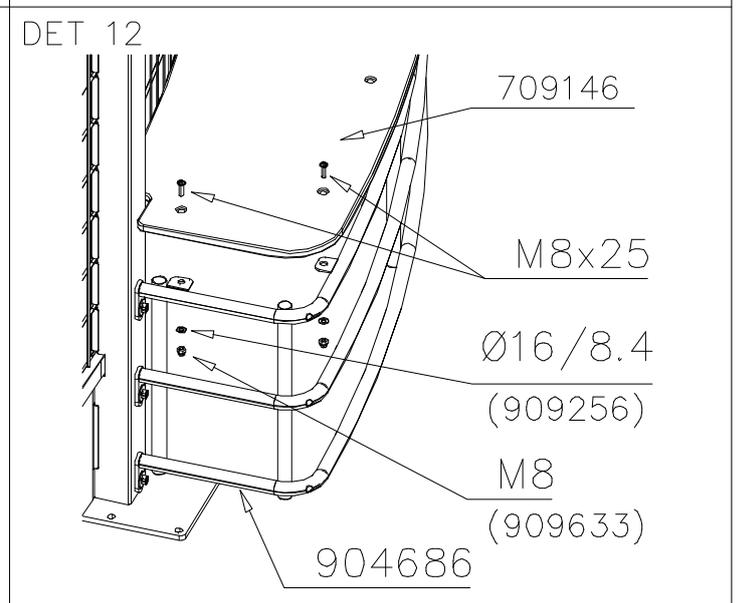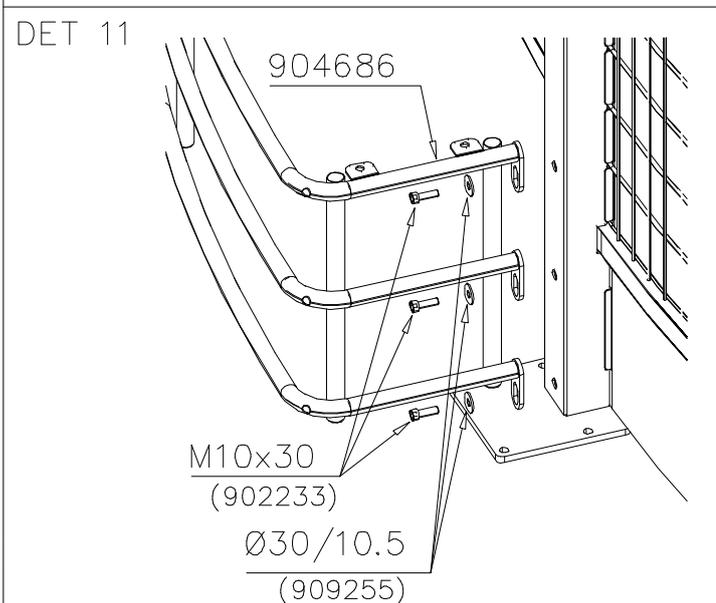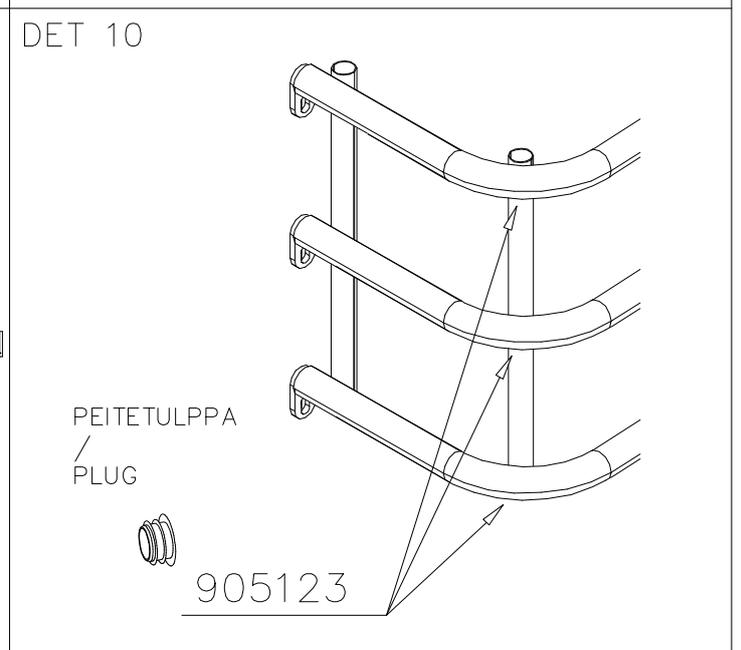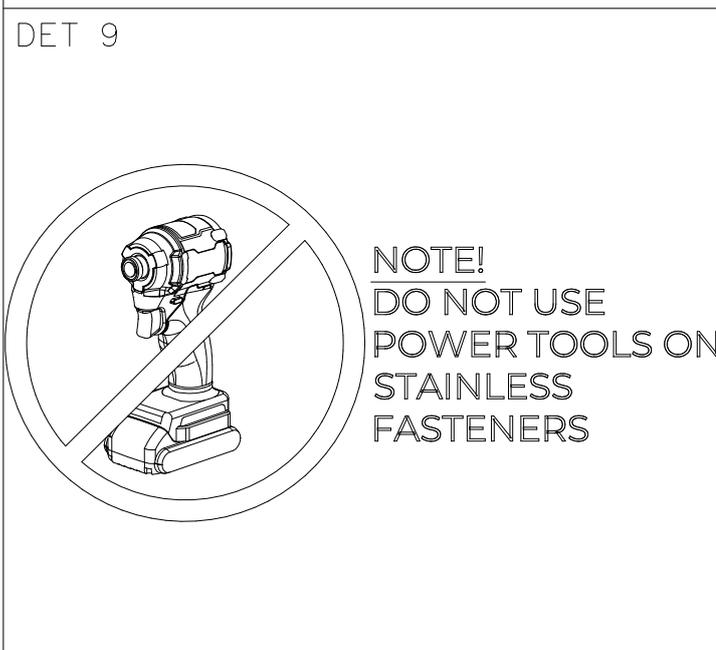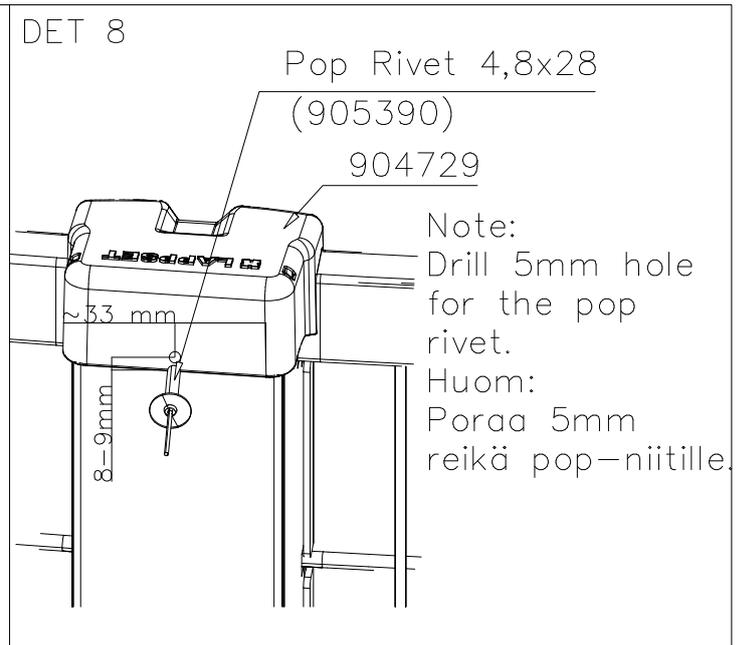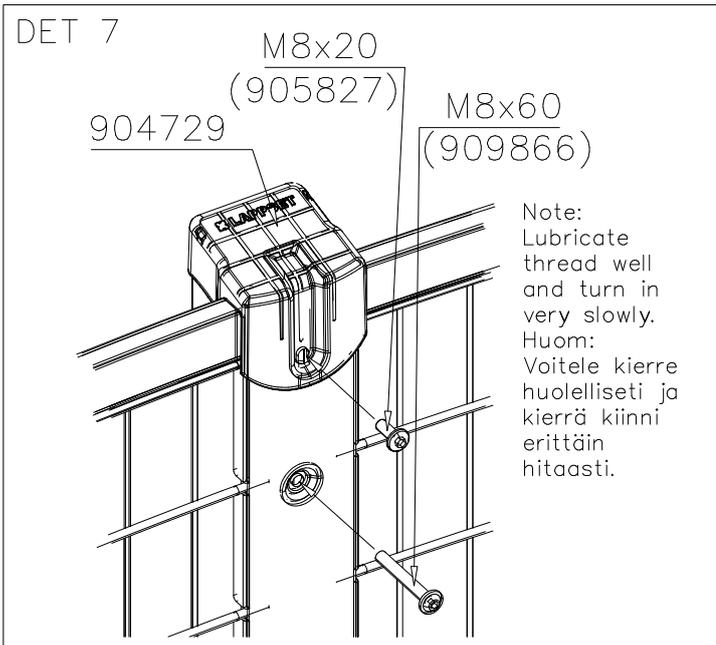

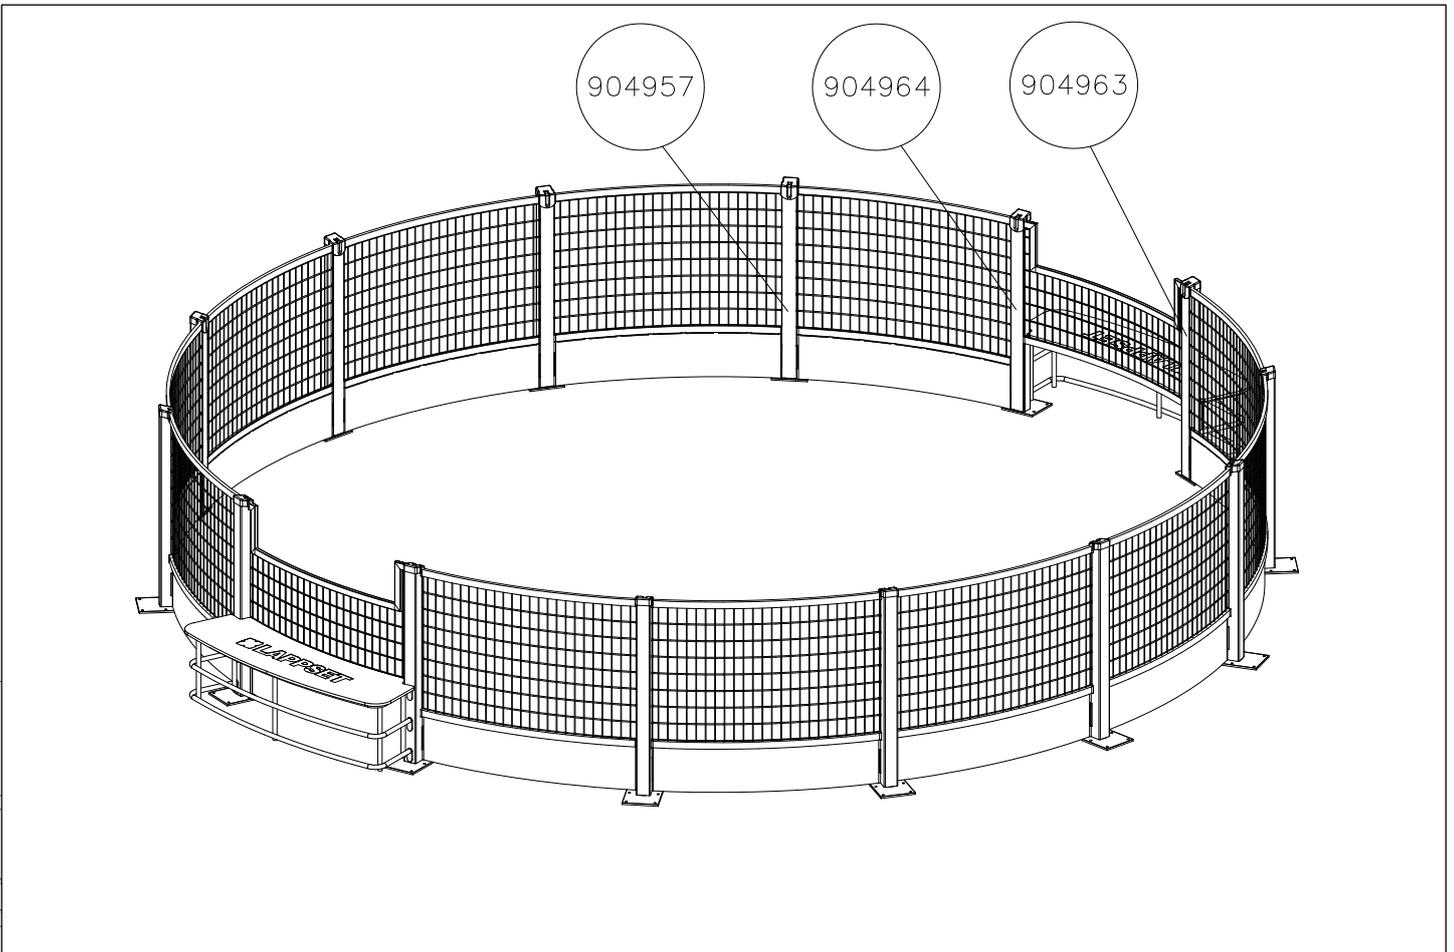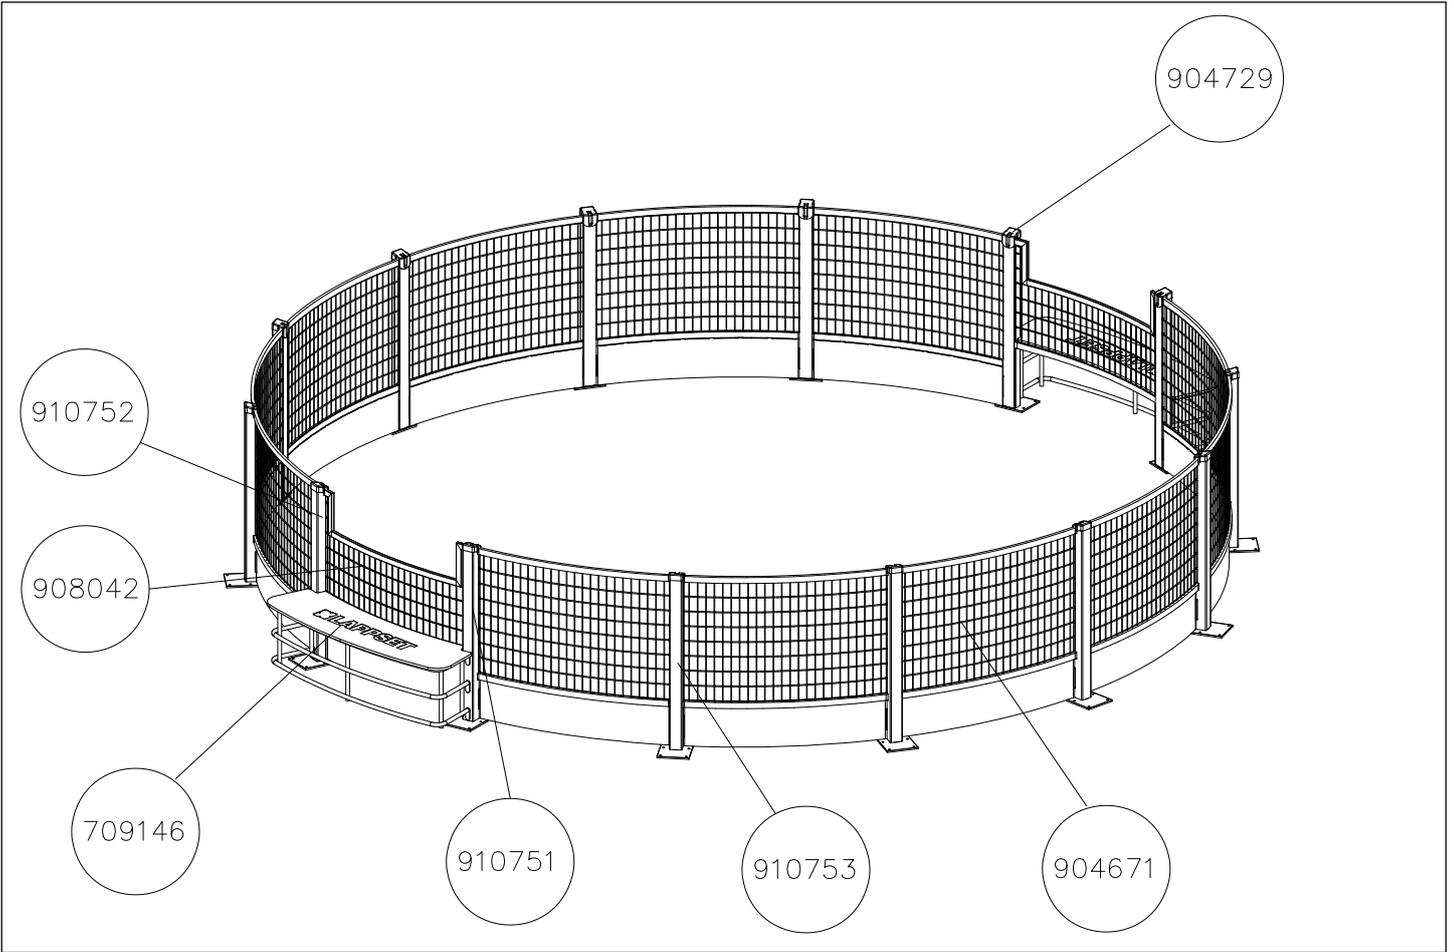

LAPPSET®


PANNA




ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

REF: 080902






DATE: 30.1.2015


080902

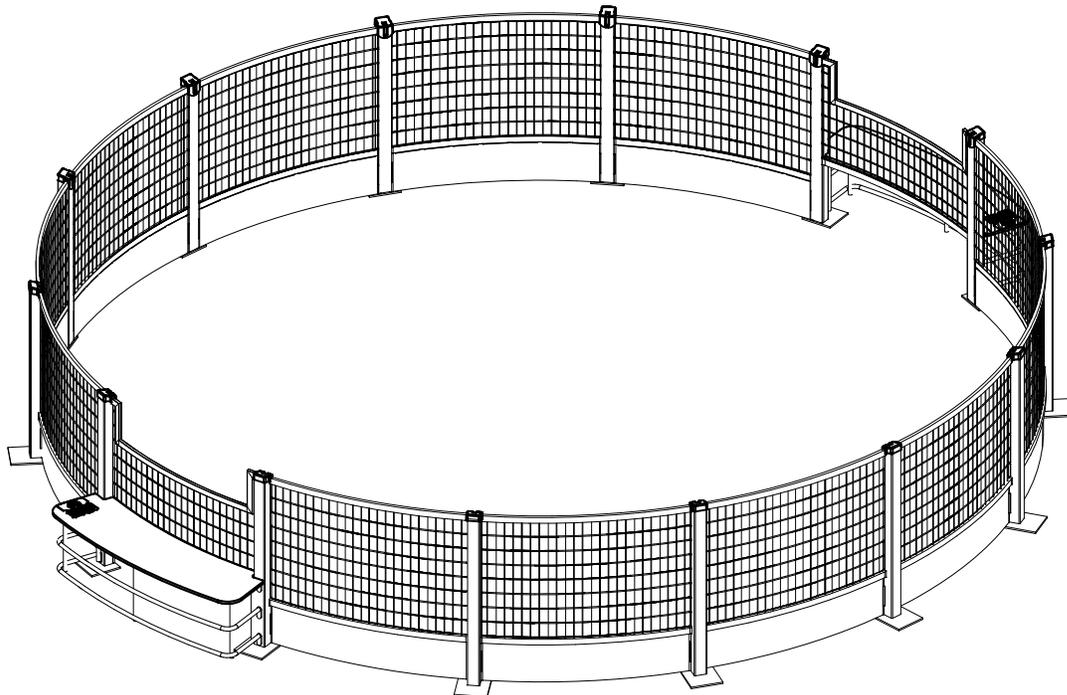

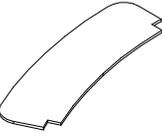904950	PCS	704229	PCS	705191	PCS		PCS		PCS		PCS
	1		2		1						
LOW		20x530x1562									
	PCS		PCS		PCS		PCS		PCS		PCS

904950 =

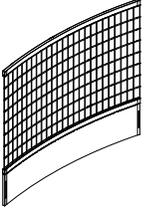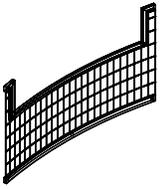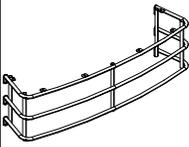904951	PCS	904955	PCS	904953	PCS	904671	PCS	908042	PCS	904958	PCS
	2		2		10		12		2		14
LEFT		RIGHT									
904686	PCS	904963	PCS	904964	PCS	904957	PCS		PCS		PCS
	2		2		2		10				
GOAL		LEFT		RIGHT							
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

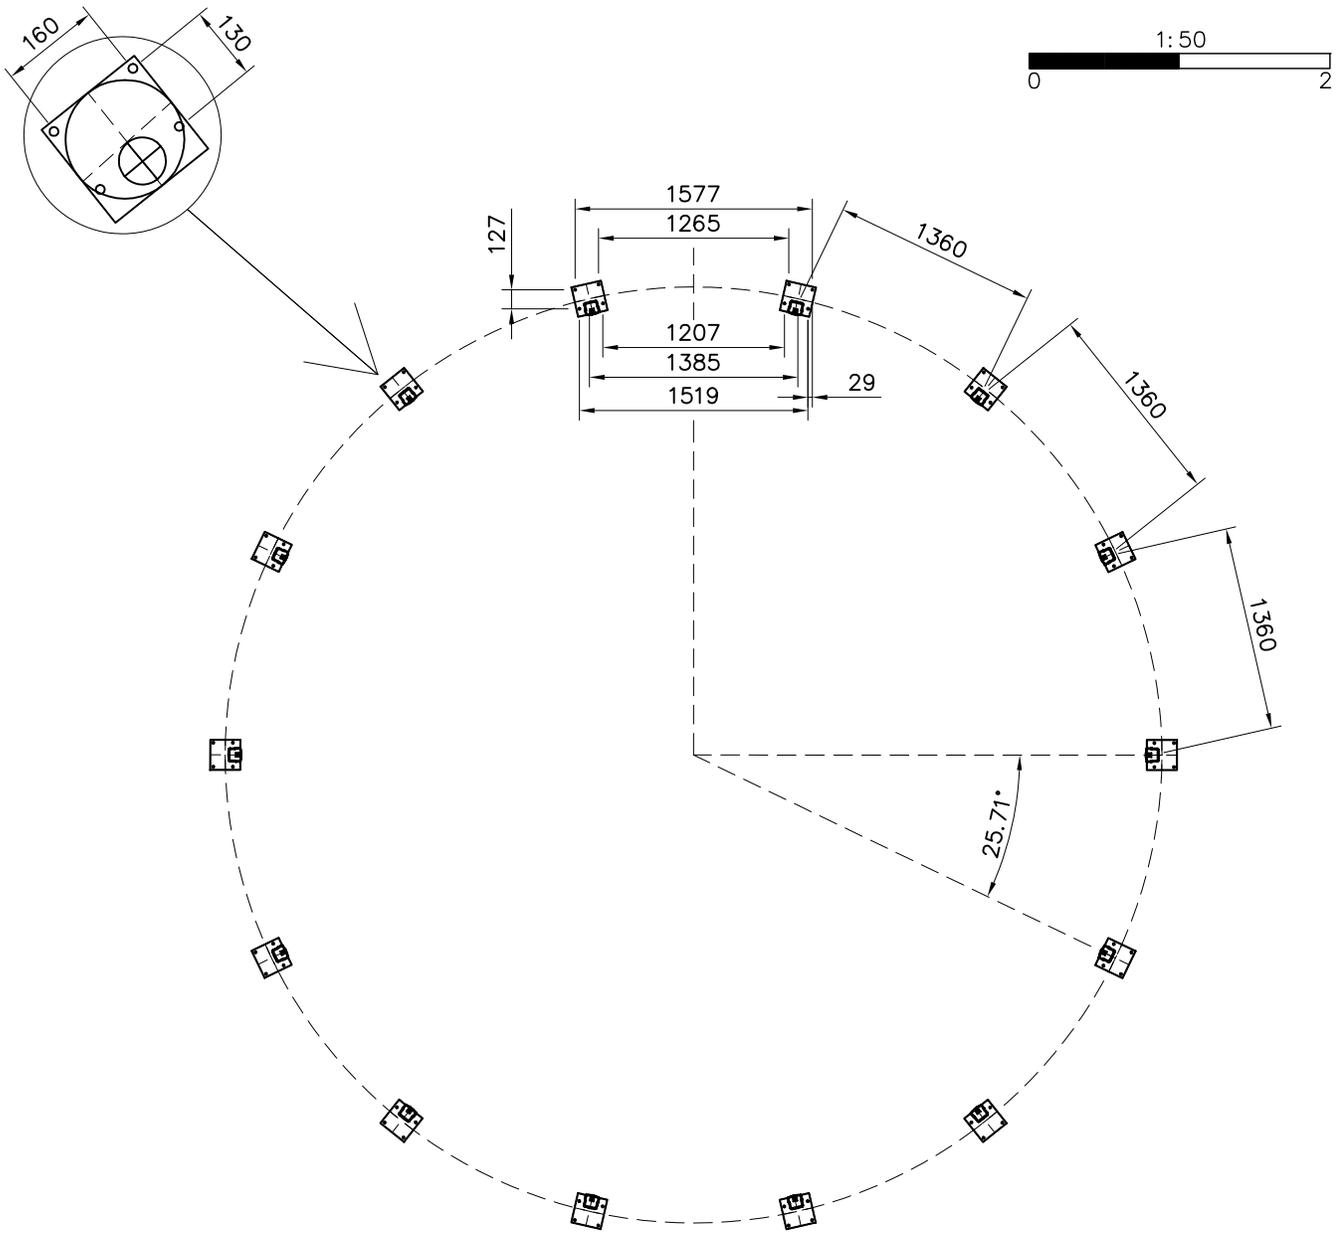


Kun käytetään keinonurmea


- 1) Ensin kannattaa liimata tekonurmen palaset yhteen (kaksi puolipallo mallista). Lisätietoja Saltex asennusohjeessa.
- 2) Kun liima on hyvin kuivunut niin rakennetaan Panna nurmen ympärille.

When using artificial grass


- 1) Install and glue the artificial grass (see the Saltex installation instructions)
- 2) Build Panna 080902 on the artificial grass (Panna 080902 assembling instructions)




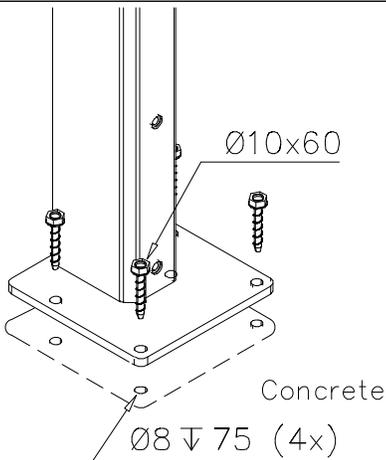




If the product is not installed on one large concrete platform, Option 1.

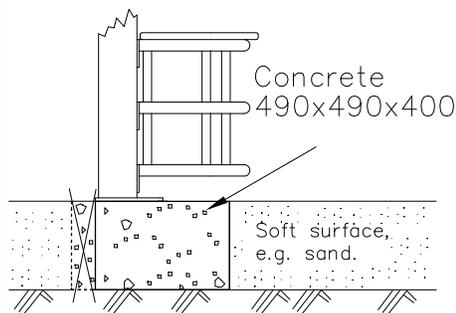


If the product is not installed on one large concrete platform, Option 2.

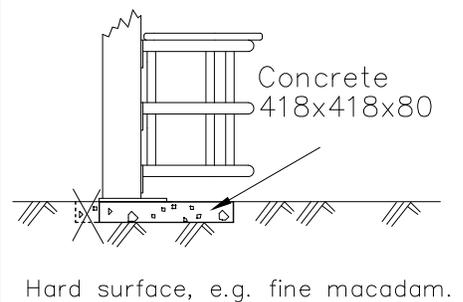

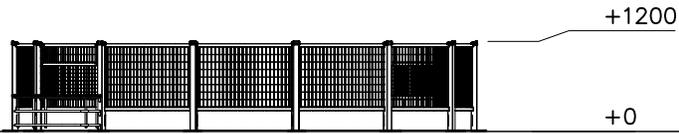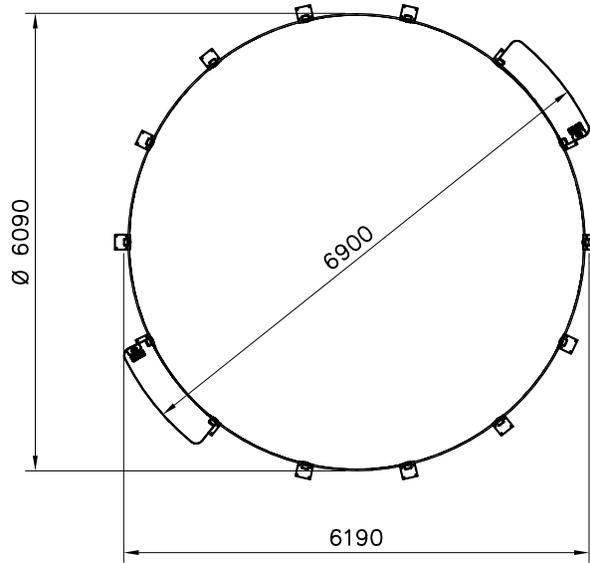


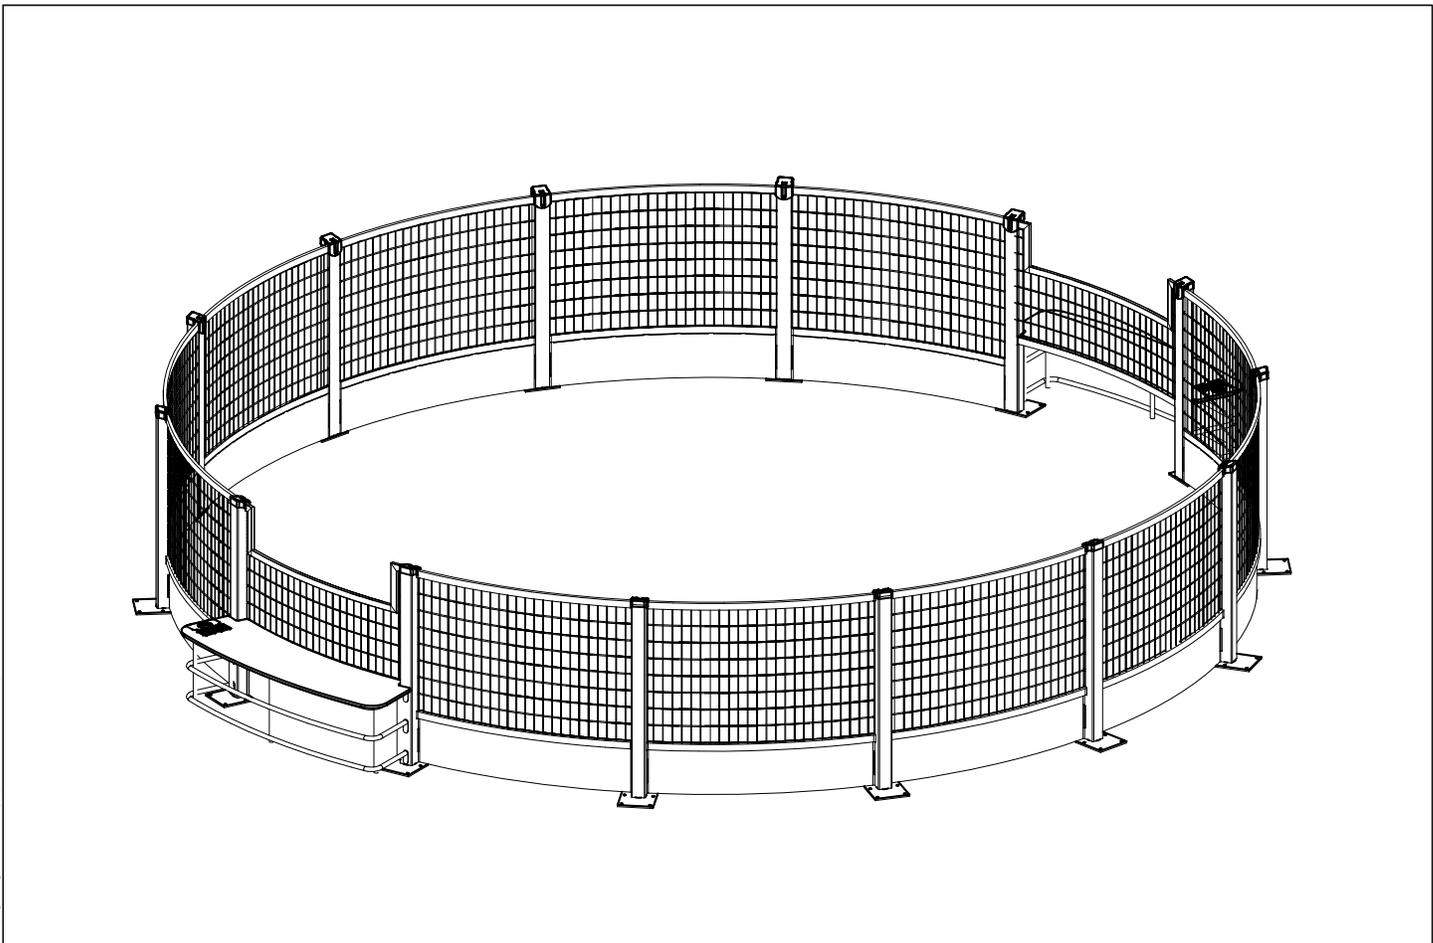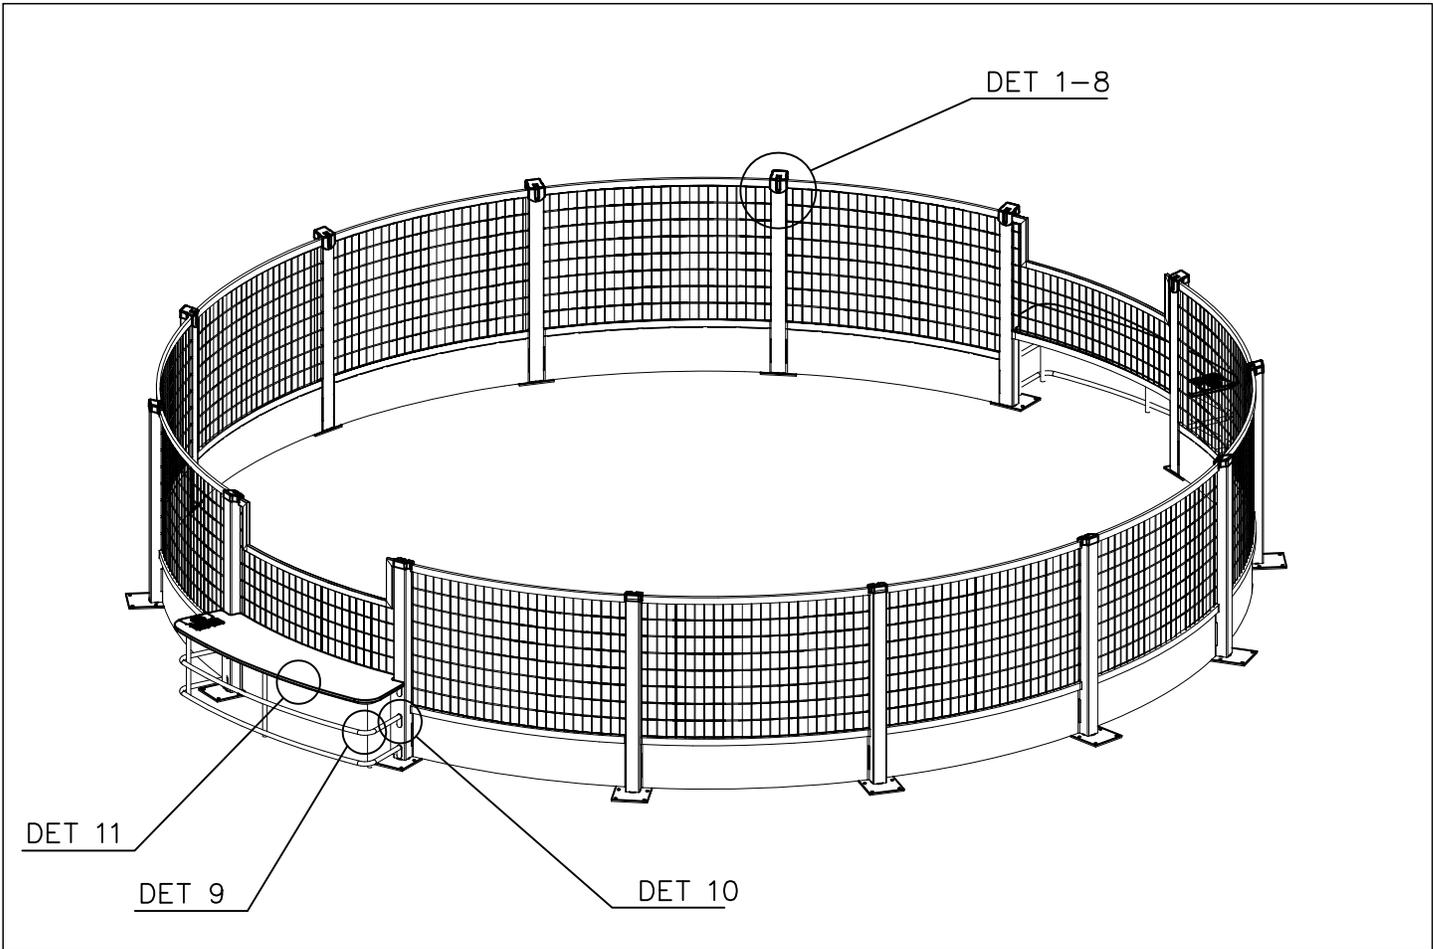


DET 1

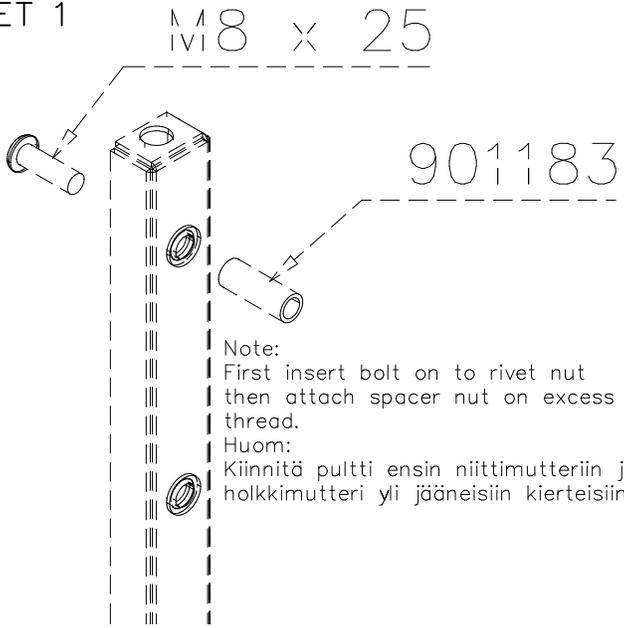


DET 2

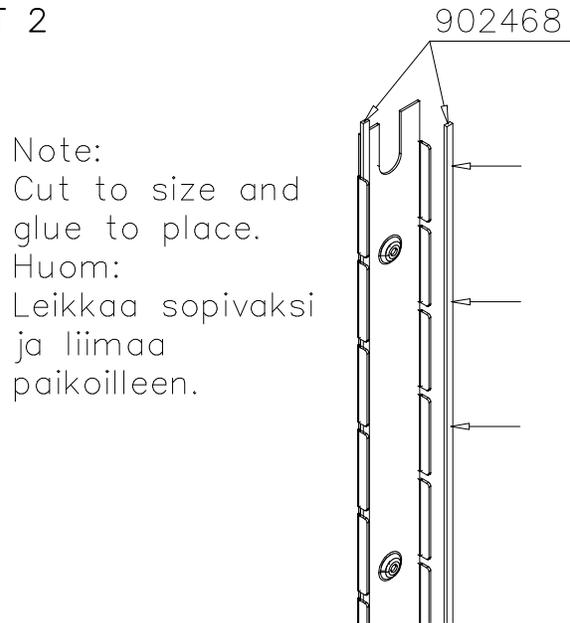


DET 3

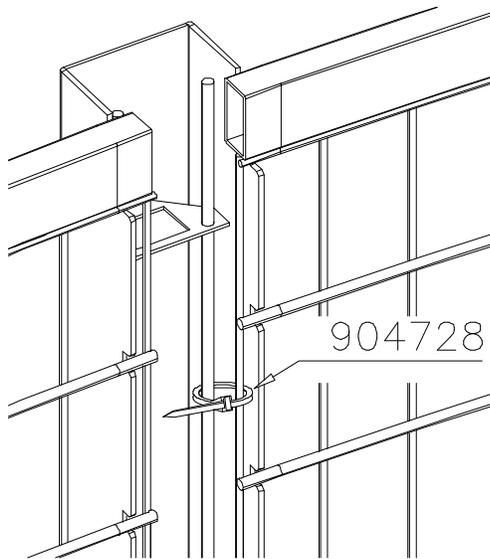


DET 4

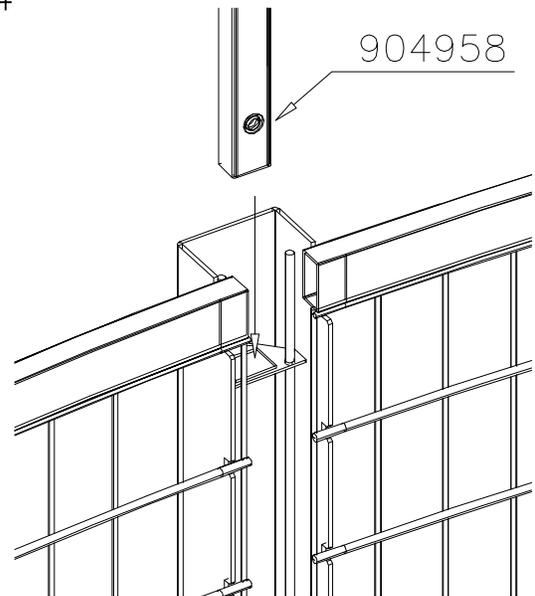


DET 5

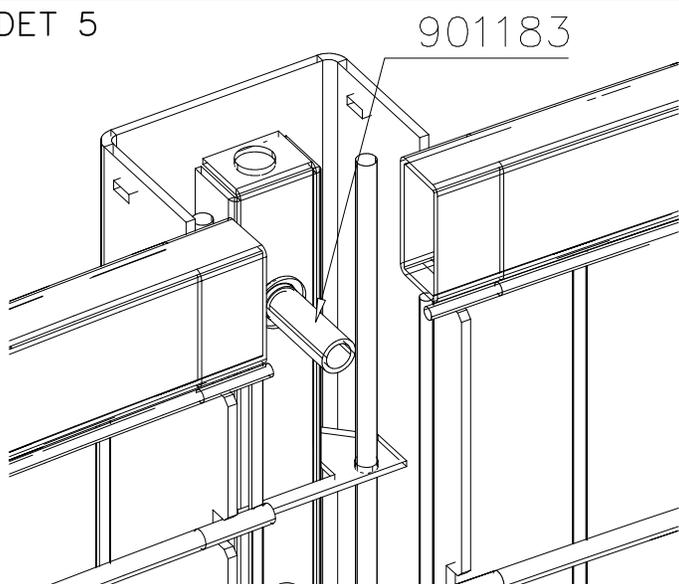


DET 6

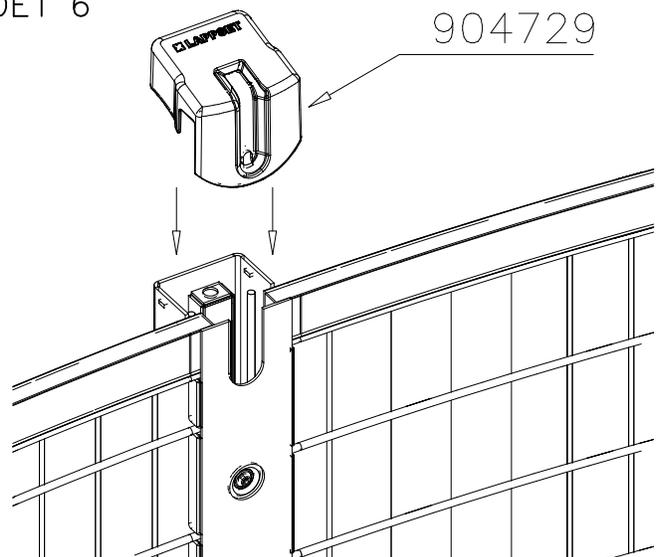


DET 7

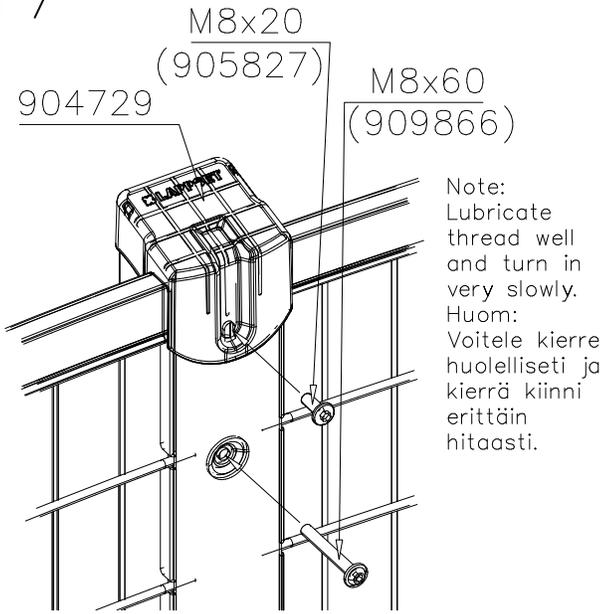


DET 8

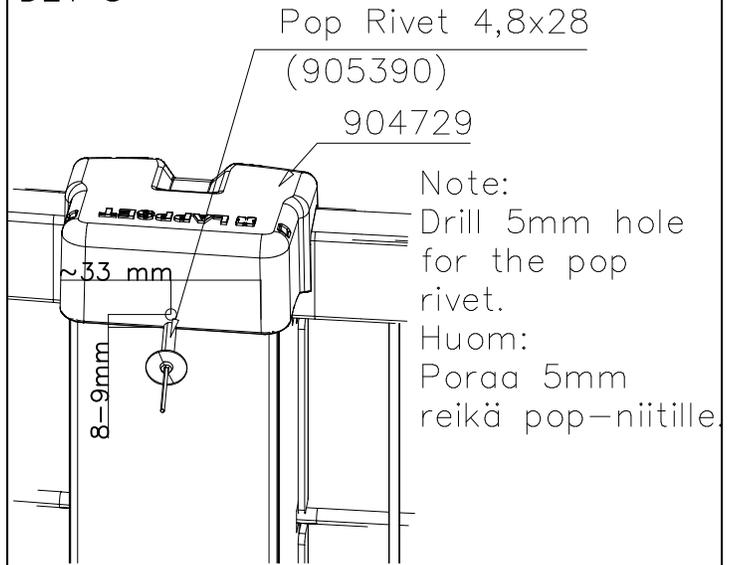


DET 9

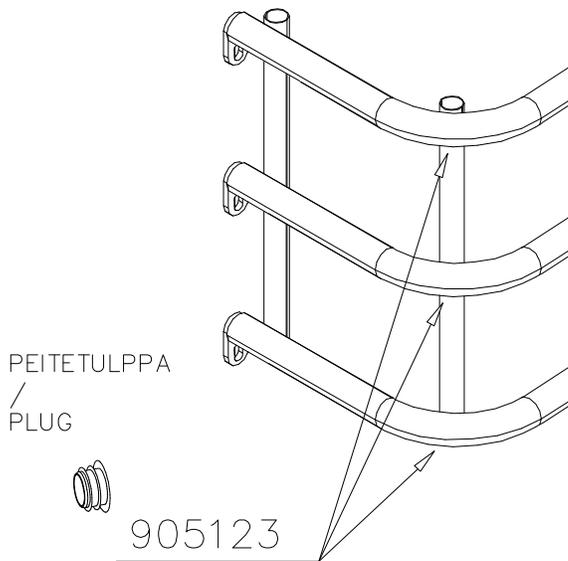

DET 10

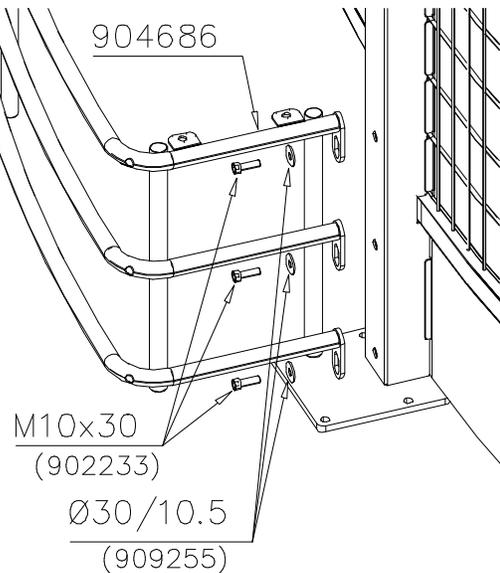

DET 11

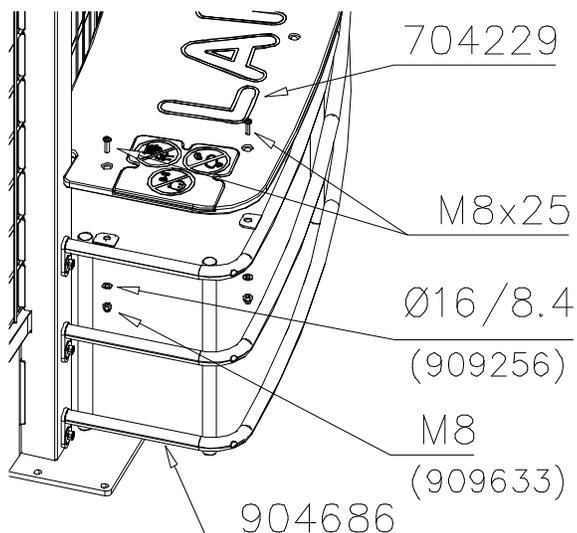

DET 12

