


LAPPSET®



FOREST

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION







REF: 138050
DATE: 15.6.2003






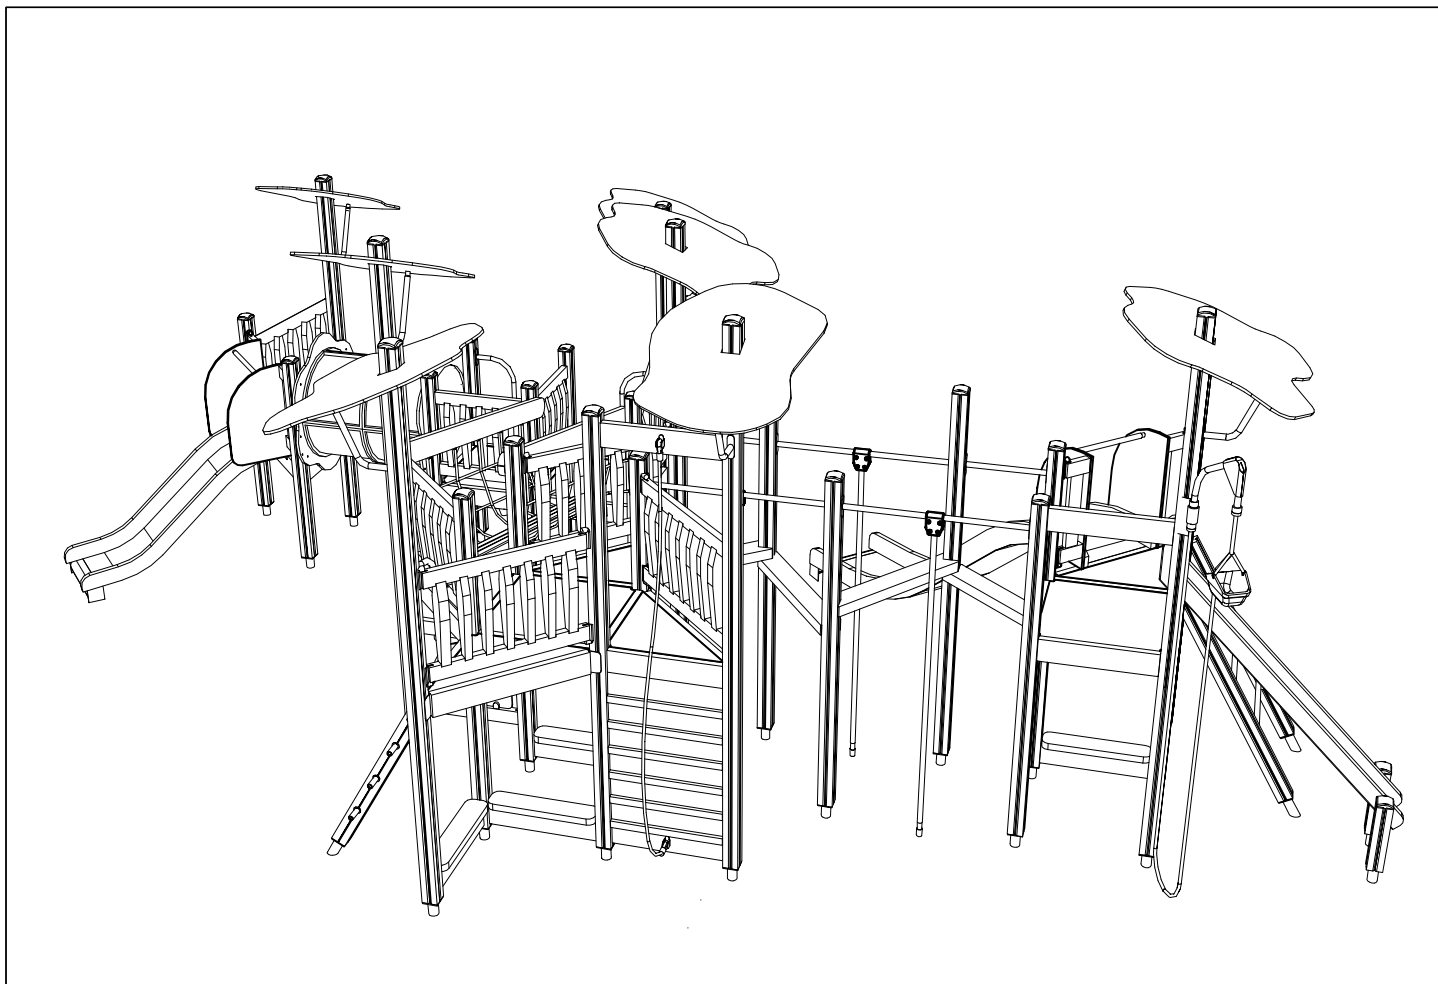
138050


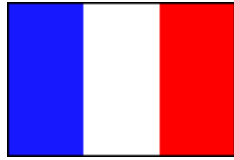
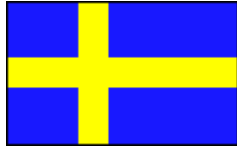


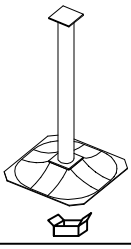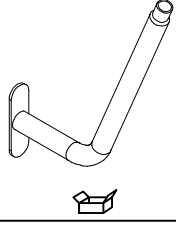


001854	PCS 1	002305	PCS 1	003502	PCS 1	003506	PCS 1	003614	PCS 1	003618	PCS 1
005270	PCS 1	005272	PCS 1	006804	PCS 2	006816	PCS 7	006822	PCS 7	006825	PCS 3
					L 450		L 1650		L 2250		L 2550
006828	PCS 3	006834	PCS 5	007224	PCS 1	007333	PCS 4	007530	PCS 4	008570	PCS 4
	L 2850		L 3450								
008572	PCS 2	008574	PCS 2	008701	PCS 2	008705	PCS 5	008711	PCS 2	008715	PCS 1
008750	PCS 1	008791	PCS 2	008875	PCS 3	008876	PCS 4	008901	PCS 1	008903	PCS 1
					GREEN		BLUE				
008906	PCS 1	008910	PCS 1	008940	PCS 9	905051	PCS 36	905083	PCS 16	905104	PCS 128
					L 704		Ø24/8.4		Ø32		M10
905112	PCS 16	905120	PCS 54	905137	PCS 27	905195	PCS 27	909217	PCS 16	909238	PCS 36
	Ø22				YELLOW		YELLOW		8x70		8x90

909521	PCS	909540	PCS	909543	PCS	909575	PCS	980131	PCS	980151	PCS
	32		4	 L 705	1		7	 6x60	108	 Ø16/8.4	16
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

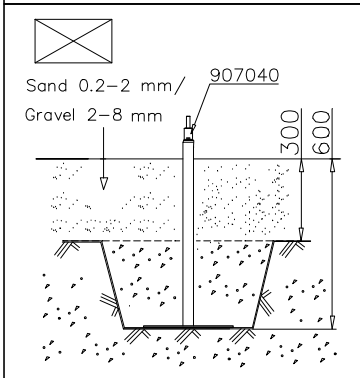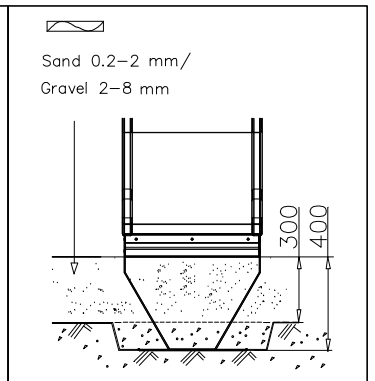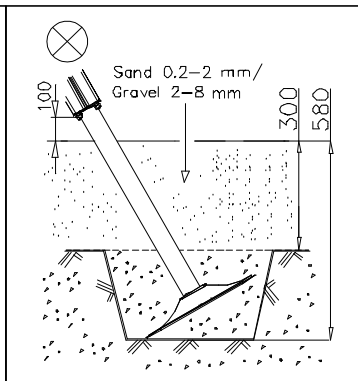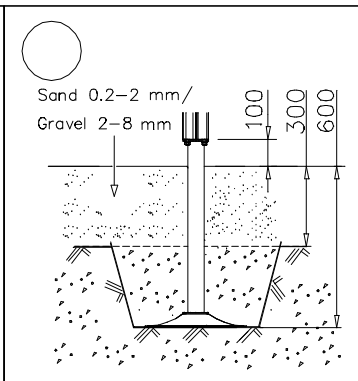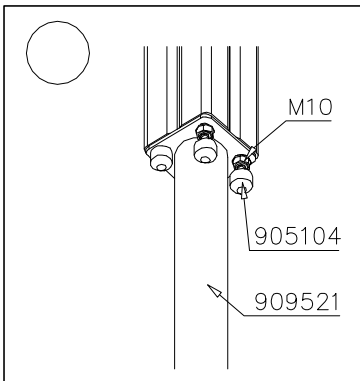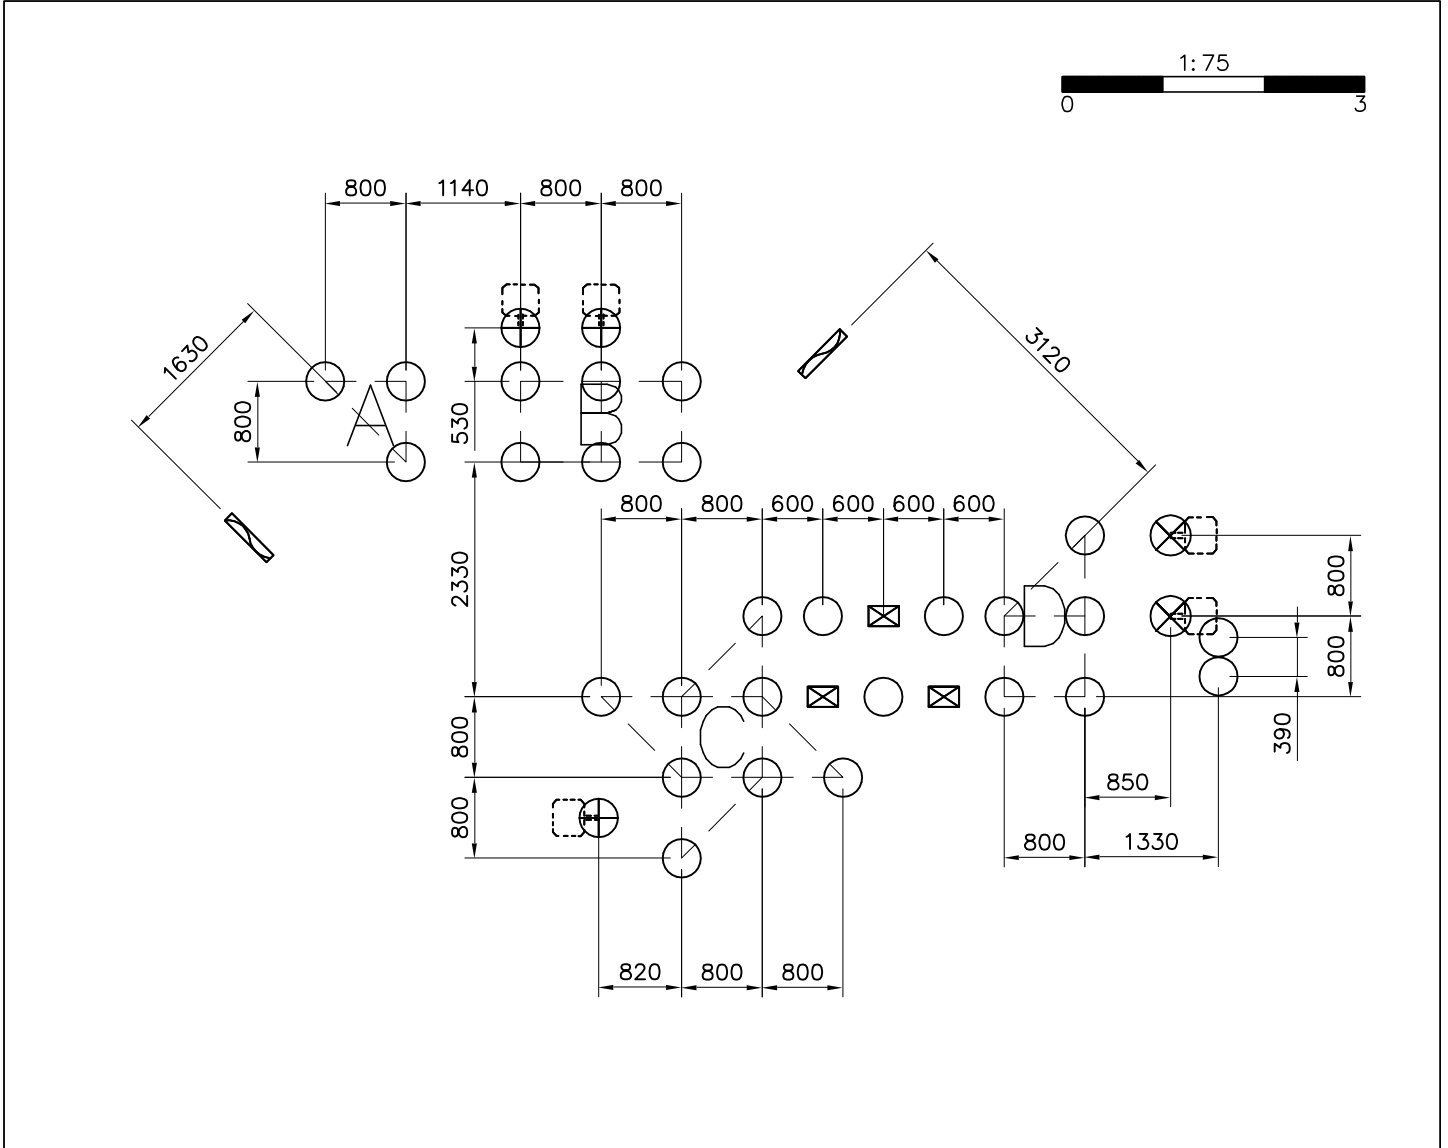

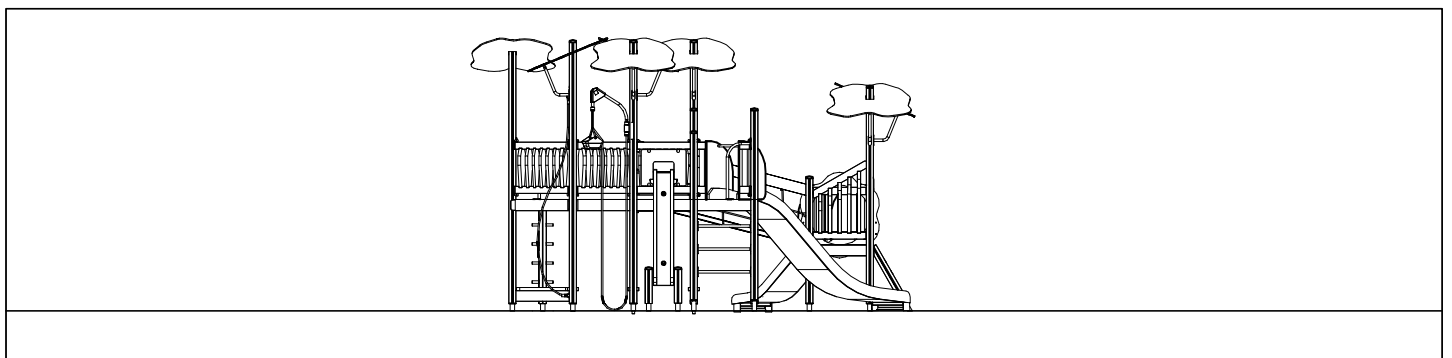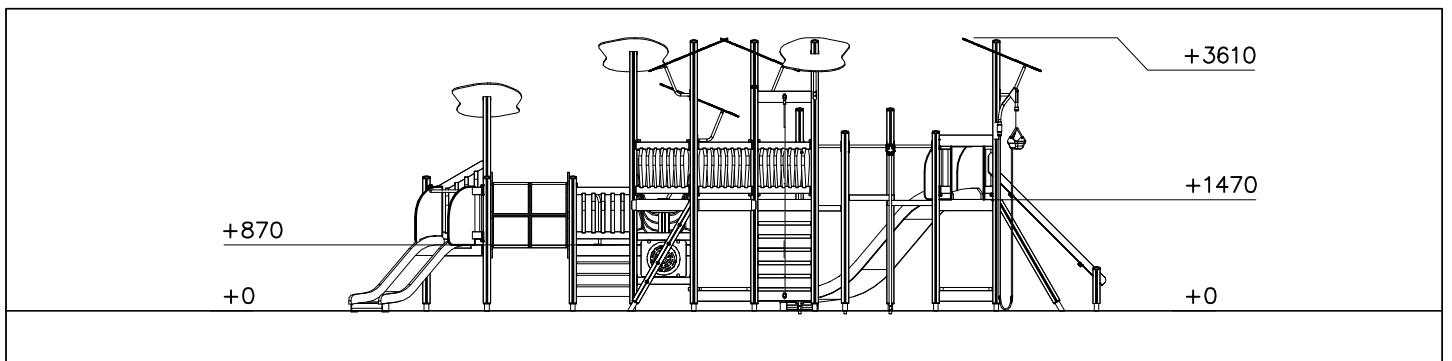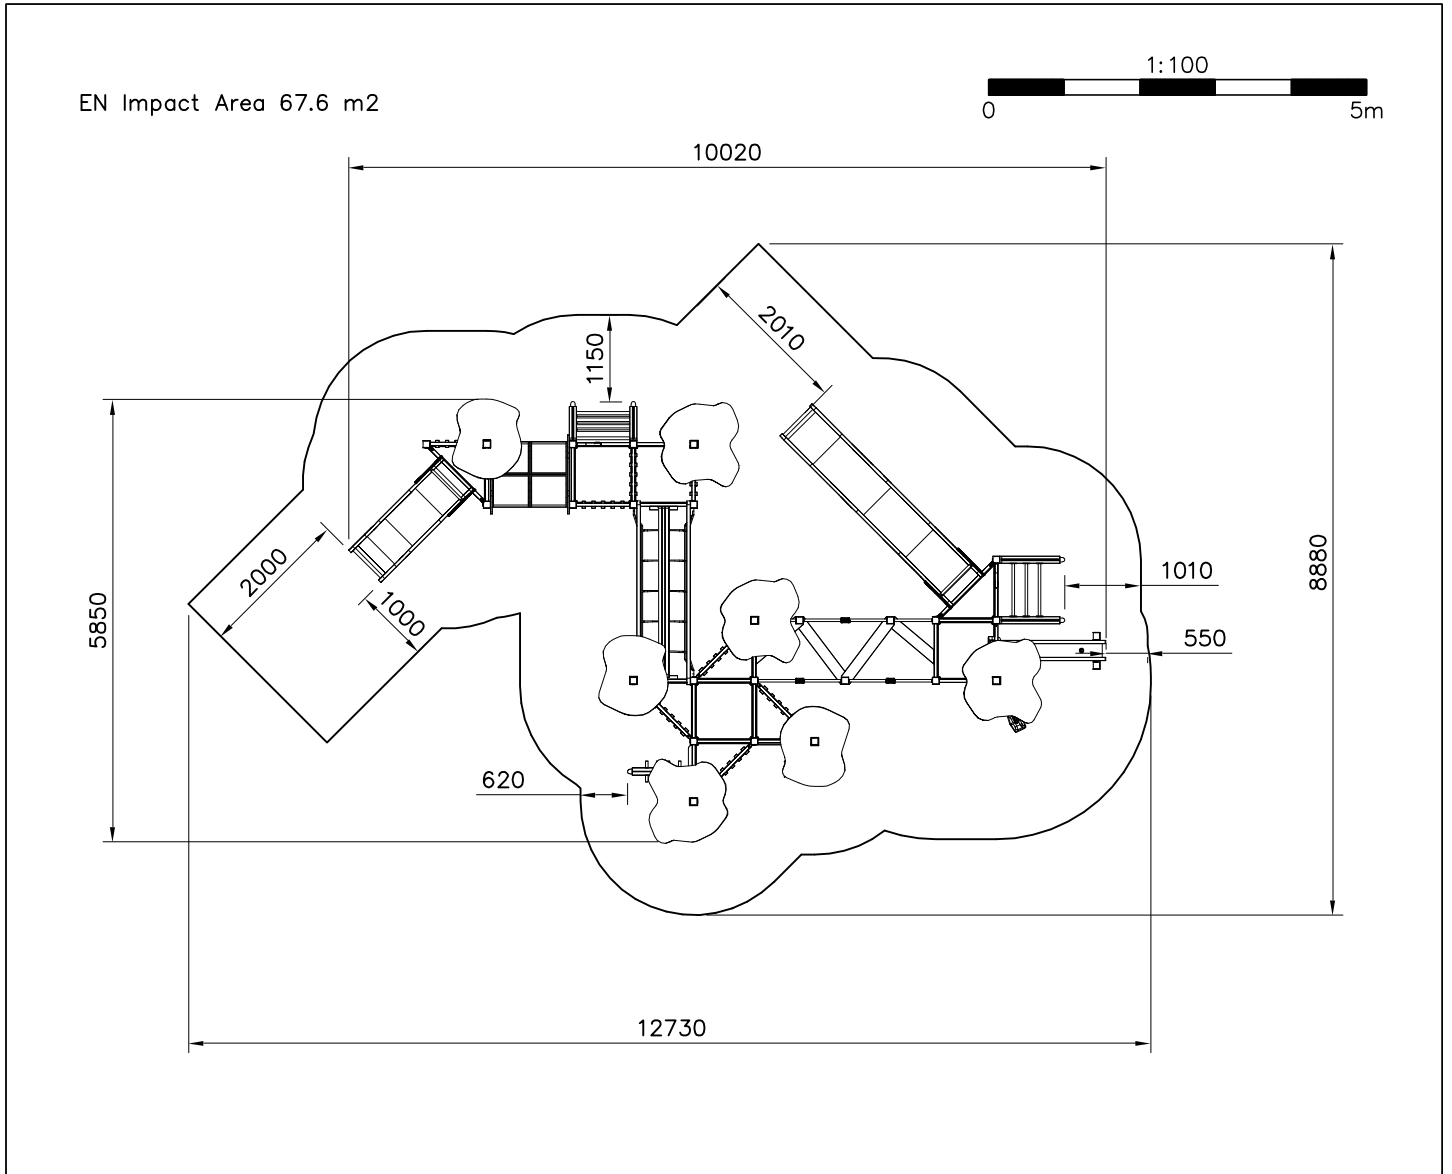

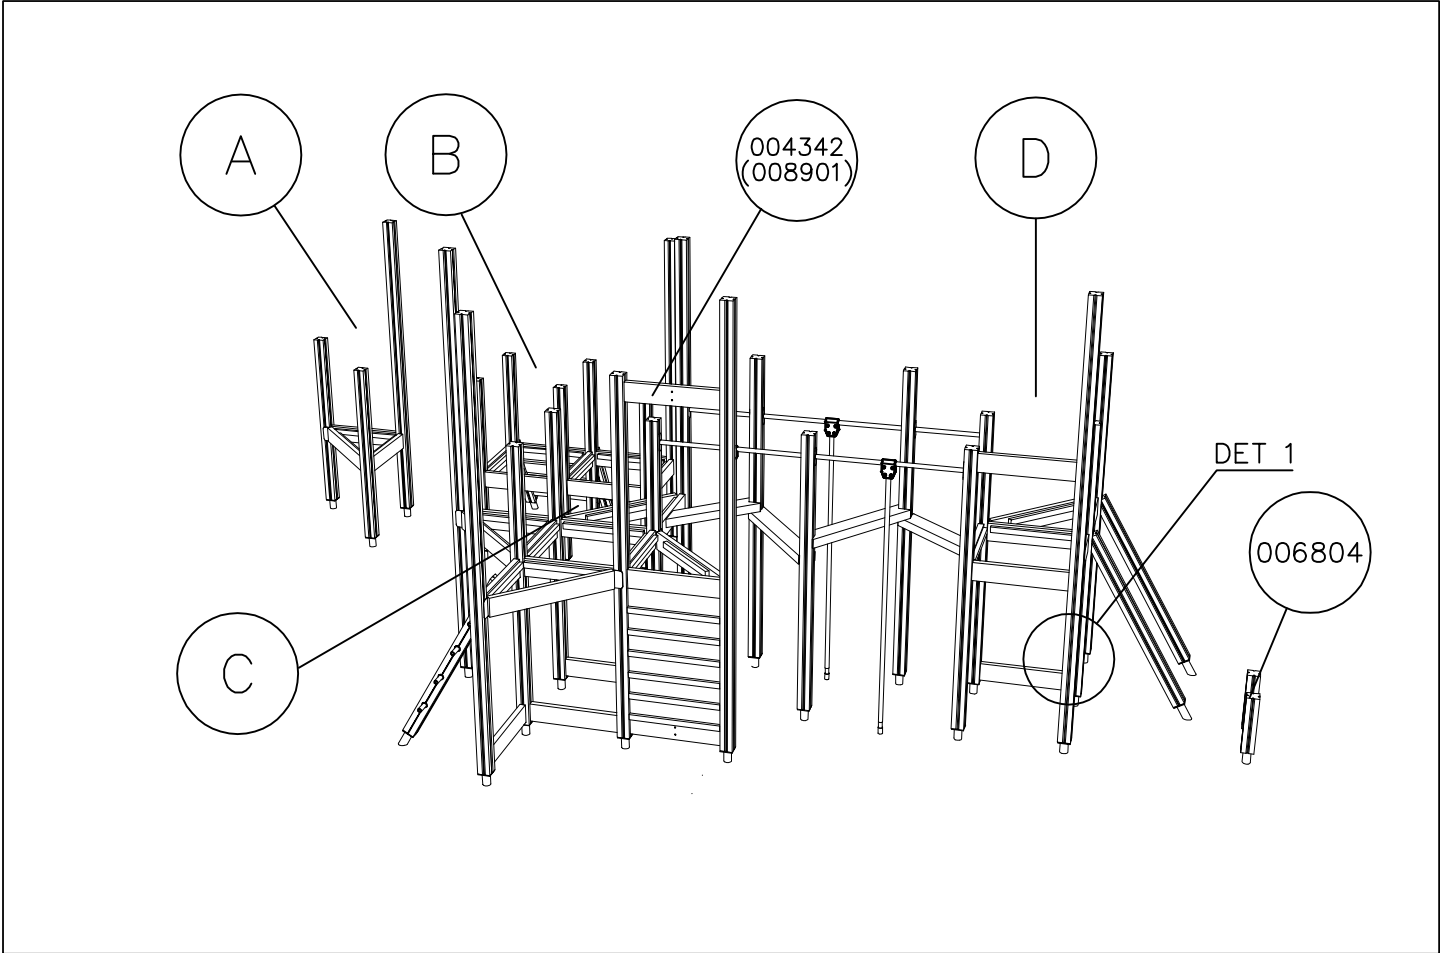

<p>DET 1</p>	<p>DET 2</p>	<p>DET 3</p>	<p>DET 4</p>
<p>DET 5</p>	<p>DET 6</p>		

