


LAPPSET®

FLORA









ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

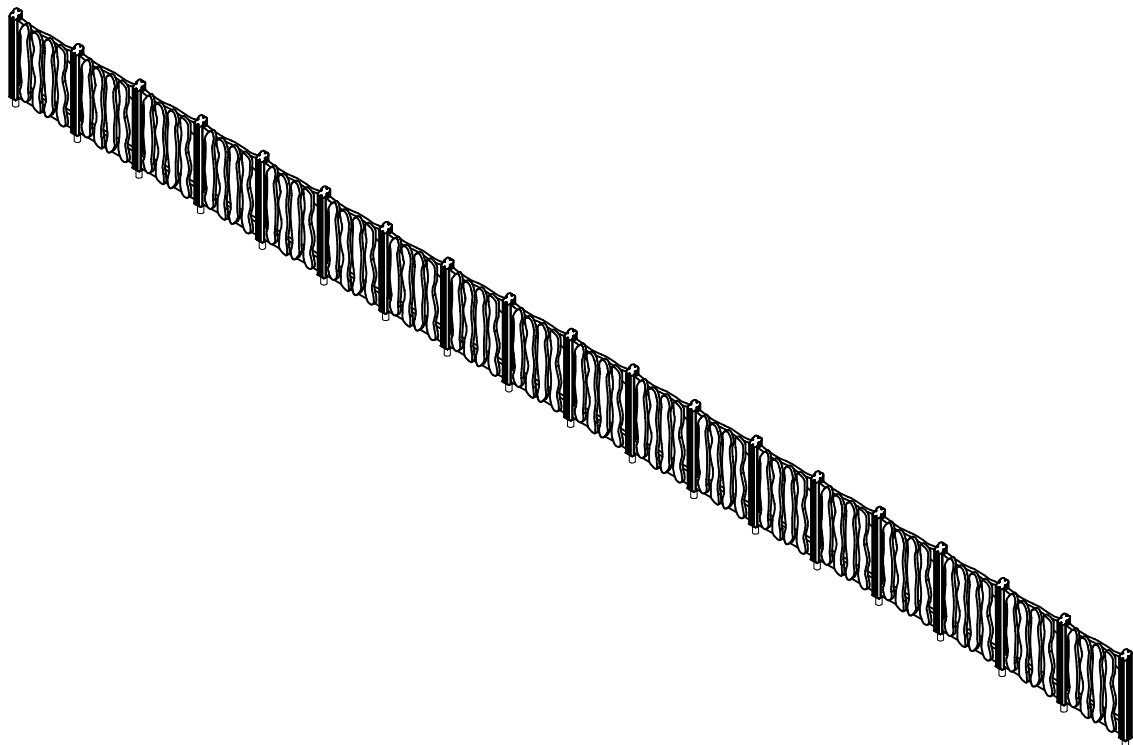
DATE: 24.9.2024

QFL0155

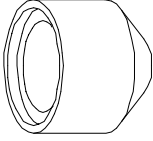

DATE: 24.9.2024

702286	PCS	706192-614	PCS	711812-614	PCS	905104	PCS	909521	PCS	980114	PCS
	1		19		18		76		19		4
65x65		93x93x946				M10				Ø4x20	
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

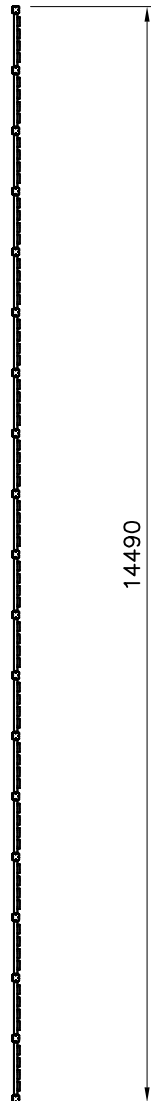



+1050

+0

