


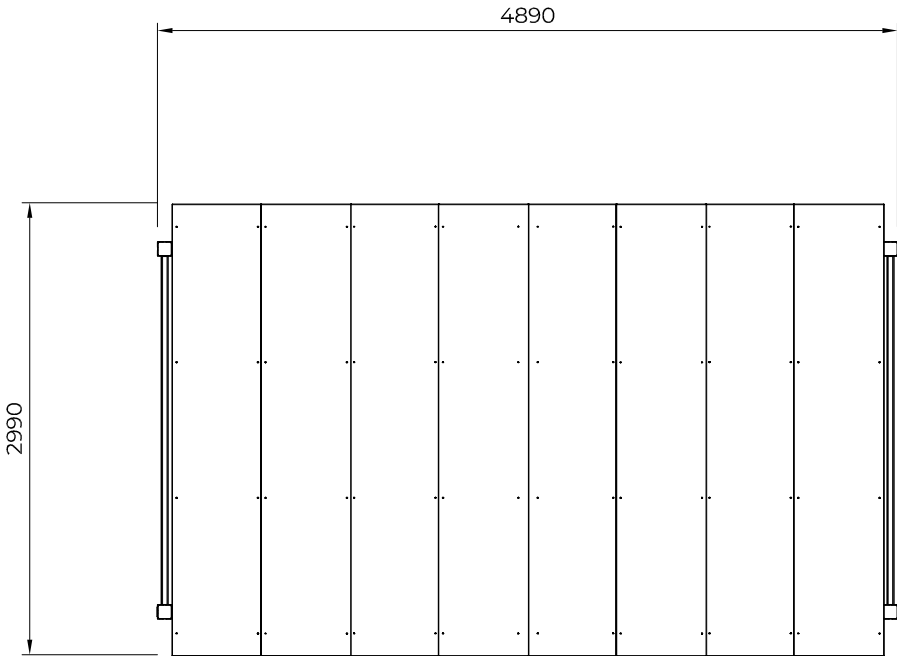
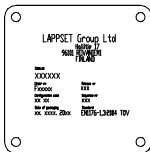

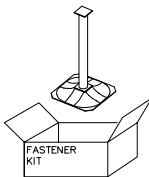



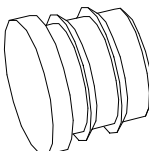







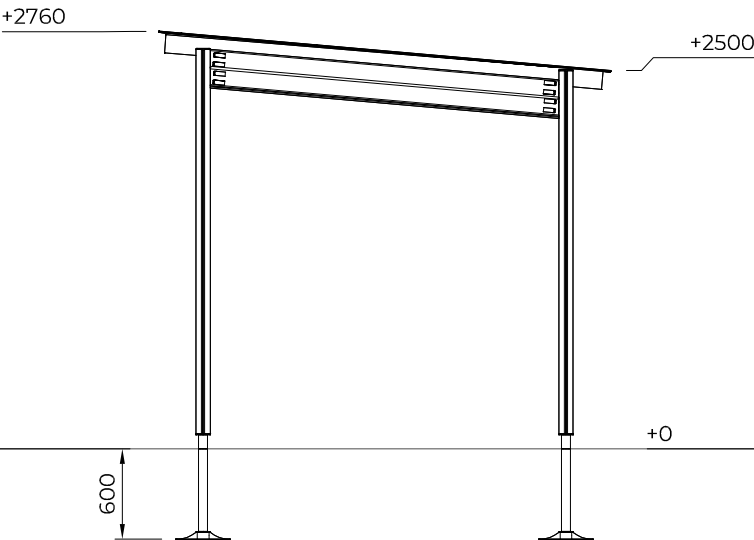

702286  65x65	PCS 1	706481-707  93x93x10	PCS 6	706531  FASTENER KIT	PCS 6	706664-604  93x93x2540	PCS 3	706669-604  93x93x2400	PCS 3	707295-604  L 2304	PCS 8
903093  Ø8x90	PCS 56	905051  Ø24/8.4	PCS 32	905066  S30H	PCS 32	909232  8x120	PCS 32	909511  90x90x650	PCS 6	909519  50x380x380	PCS 6
980107  Ø6x60	PCS 12	980114  Ø4x20	PCS 4	980128  Ø7x40	PCS 64	P10563-604  L 2900	PCS 16	P15316-604 	PCS 6	P15980-707  10x598x3000	PCS 4
P17751-707  10x598x3000	PCS 2	P17755-707  10x598x3000	PCS 2		PCS		PCS		PCS		
	PCS		PCS		PCS		PCS		PCS		
	PCS		PCS		PCS		PCS		PCS		
	PCS		PCS		PCS		PCS		PCS		

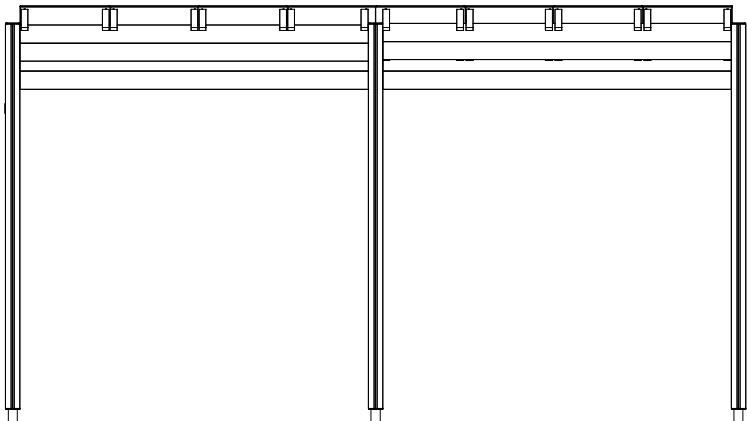

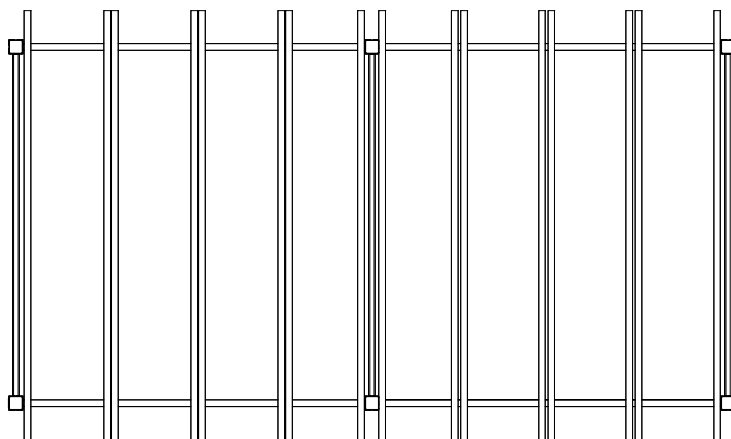

Start installing/positioning the roof plates from the middle towards the ends. Ensure that plate holes are align with the beams before final fixing. Pre-drill Ø5 mm holes through the roof plate holes to the roof beams.

