


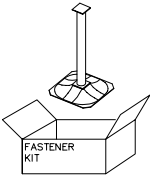



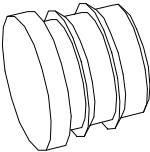





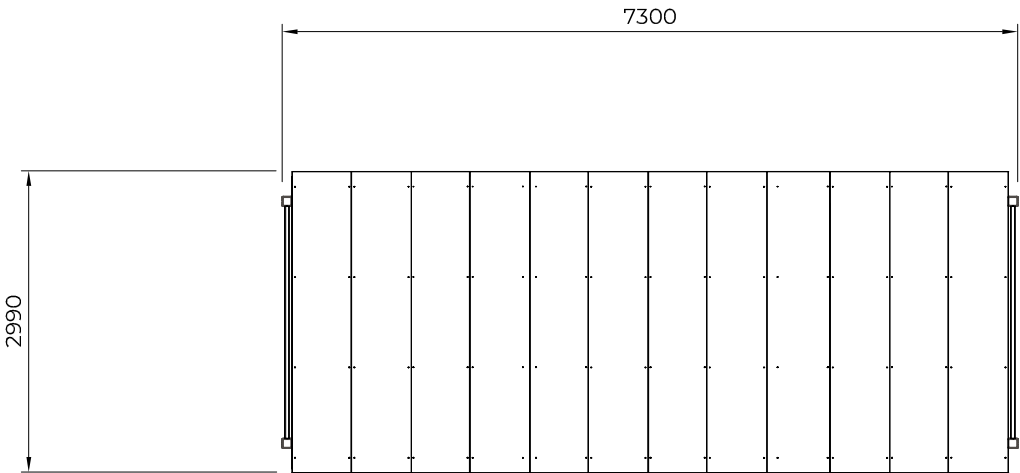


702286  65x65	PCS 1	706481-704  83x83x10	PCS 8	706531  FASTENER KIT	PCS 8	706662-603  93x93x2600	PCS 4	706669-603  93x93x2400	PCS 4	707295-603  L 2304	PCS 12
903093  Ø8x90	PCS 80	905051  Ø24/8.4	PCS 48	905066  S30H	PCS 48	909232  8x120	PCS 48	909511  90x90x650	PCS 8	909519  50x380x380	PCS 8
980107  Ø6x60	PCS 16	980114  Ø4x20	PCS 4	980128  Ø7x40	PCS 96	P10563-603  L 2900	PCS 24	P15316-603 	PCS 8	P15980-704  10x598x3000	PCS 7
P17751-704  10x598x3000	PCS 2	P17755-704  10x598x3000	PCS 2	P18021-704  10x643x3000	PCS 1		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

EN/AS Impact Area 38.8 m2

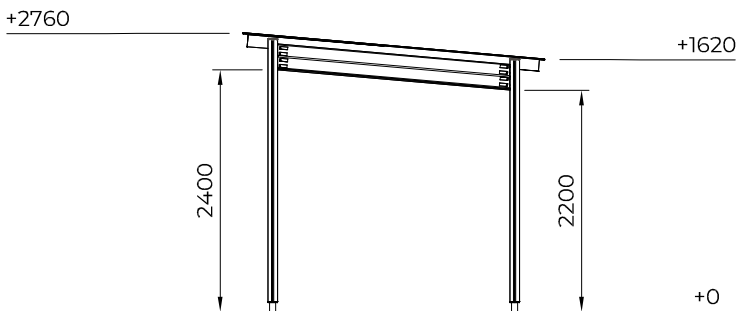

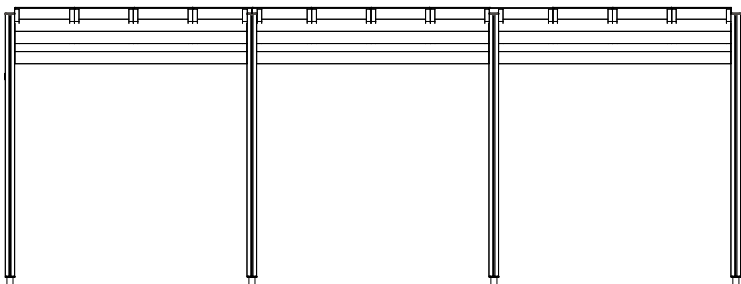

Start installing/positioning the roof plates from the middle towards the ends. Ensure that plate holes are align with the beams before final fixing. Pre-drill Ø5 mm holes through the roof plate holes to the roof beams.

