


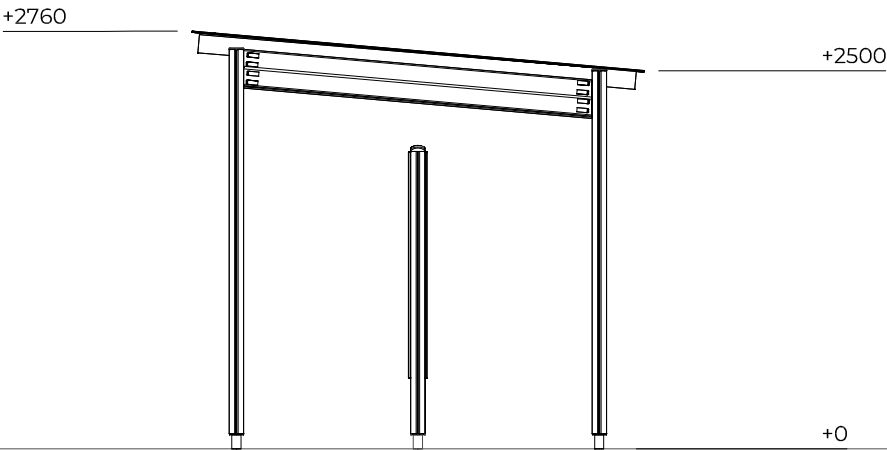
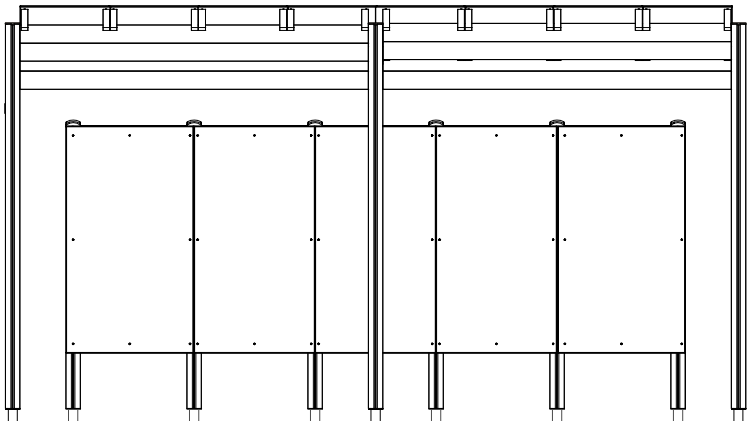

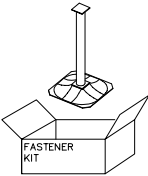


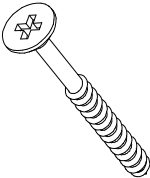


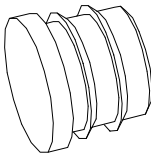






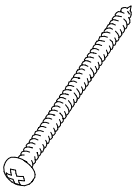






702286  65x65	PCS 1	706481-704  83x83x10	PCS 6	706511  93x93x1870	PCS 6	706531  FASTENER KIT	PCS 12	706664  93x93x2540	PCS 3	706669  93x93x2400	PCS 3
707295  L 2304	PCS 8	707912  L 704	PCS 15	902270  Ø5x50	PCS 80	903093  8x90	PCS 86	905051  Ø24/8.4	PCS 32	905066  S30H	PCS 32
905138  GRAY	PCS 6	905196  GRAY	PCS 6	909232  8x120	PCS 32	909511  90x90x650	PCS 6	909519  50x380x380	PCS 12	911155  90x90x650	PCS 6
980107  Ø6x60	PCS 12	980114  Ø4x20	PCS 4	980128  Ø7x40	PCS 64	980131  Ø6x60	PCS 24	P10563  L 2900	PCS 16	P15316 	PCS 6
P15980-704  10x598x3000	PCS 4	P17751-704  10x598x3000	PCS 2	P17755-704  10x598x3000	PCS 2	P19446  15x843x1498	PCS 4	P19448  15x797x1498	PCS 6		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

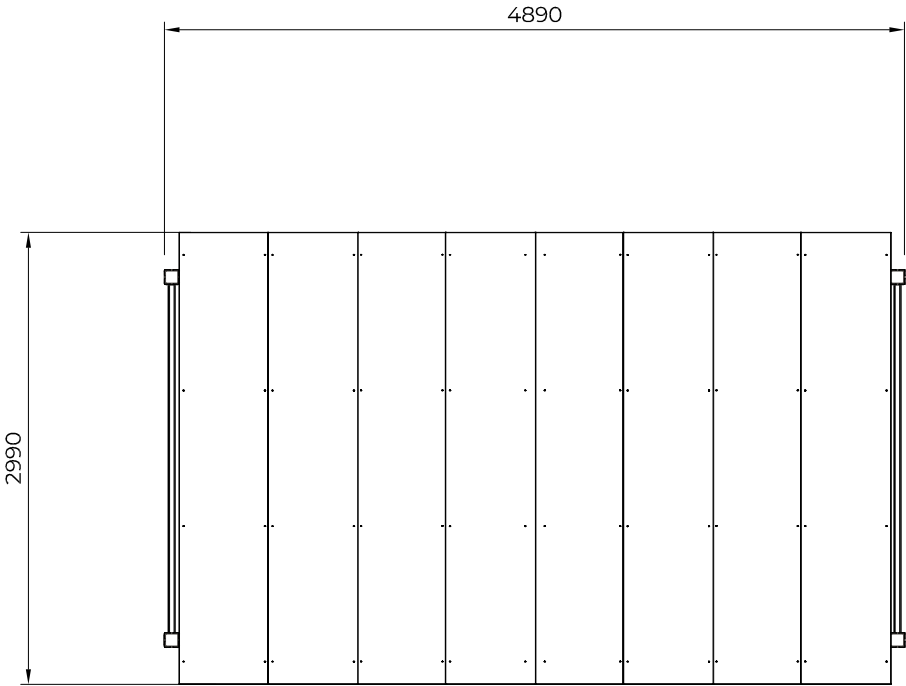

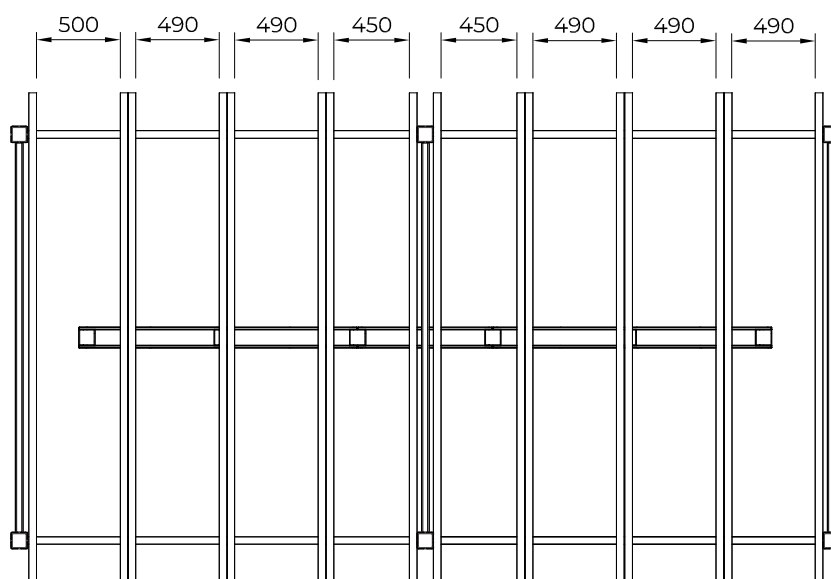

Start installing/positioning the roof plates from the middle towards the ends. Ensure that plate holes align with the beams before final fixing. Pre-drill Ø5 mm holes through the roof plate holes to the roof beams.

