

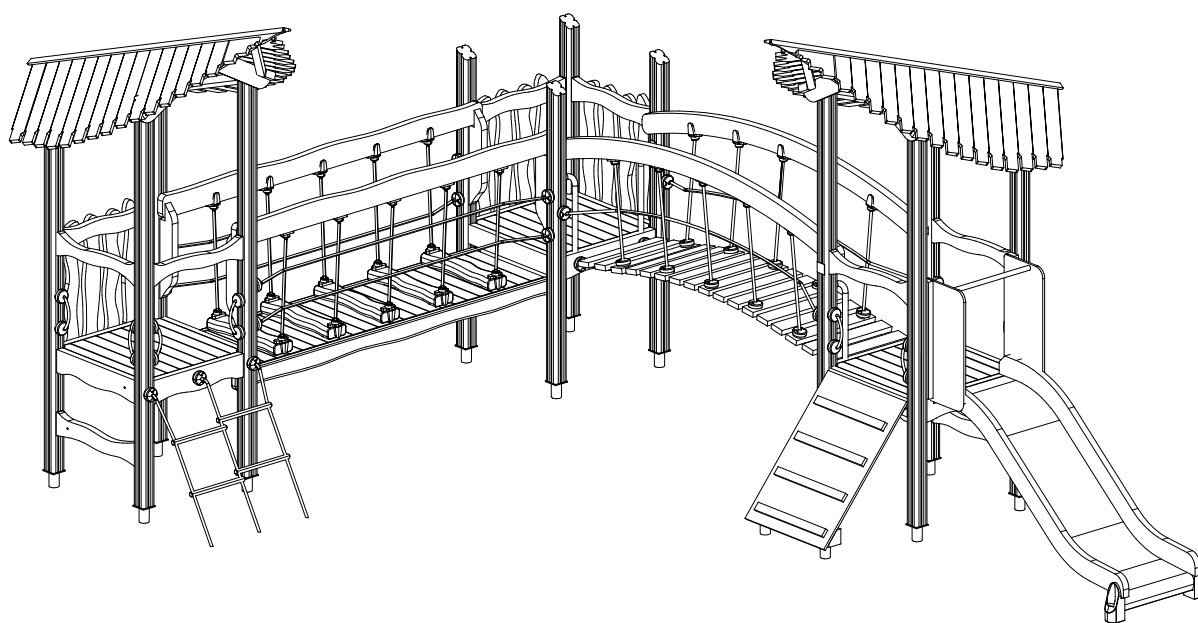


FLORA

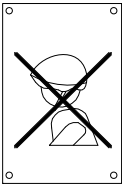
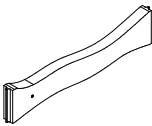
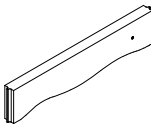
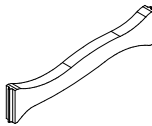


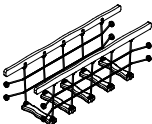
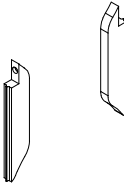
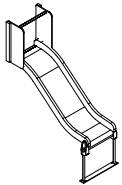
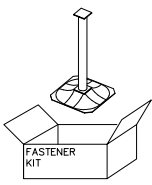
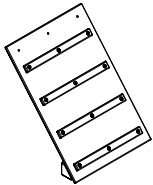



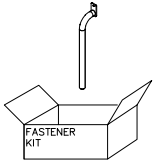




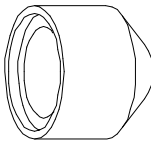


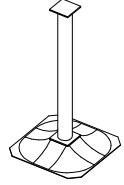

ASENNUSOHJE MONTERINGSANSVISNING INSTALLATION INSTRUCTION AUFBAUANLEITUNG NOTICE D'INSTALLATION

DATE: 20.8.2025

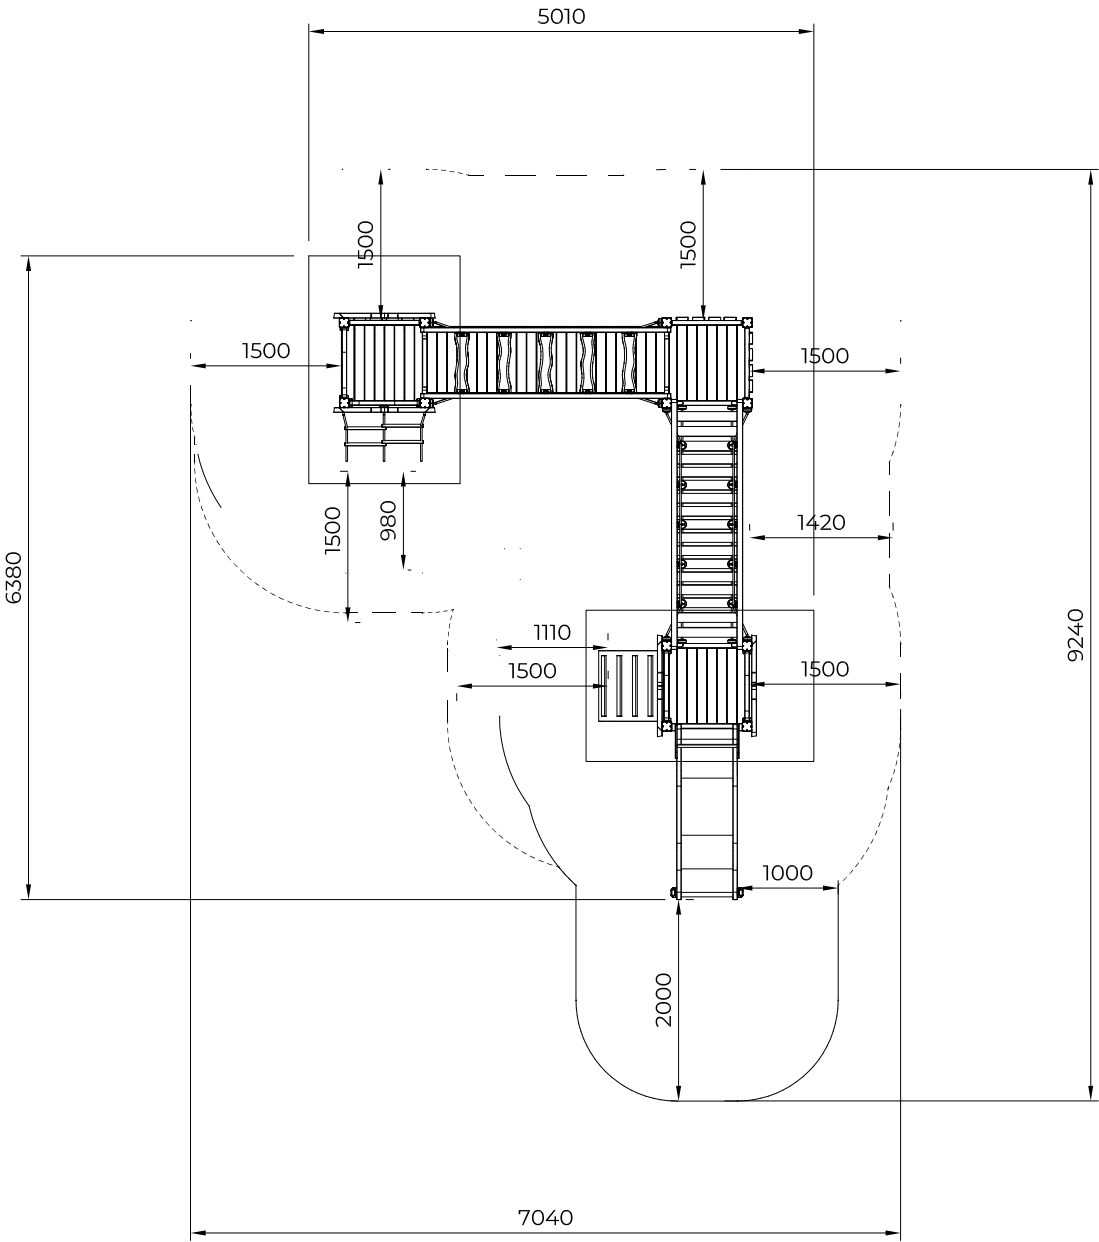
QFL0492

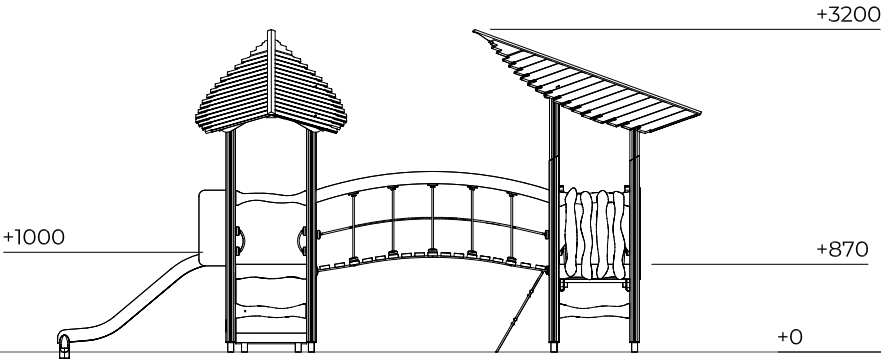
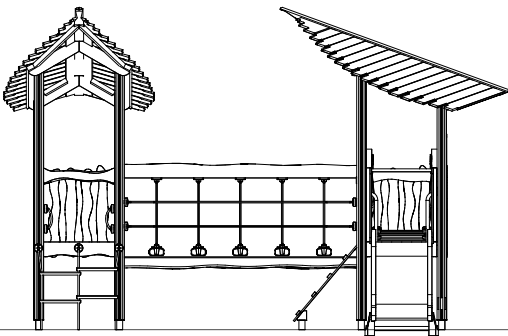


DATE: 20.8.2025

702286  65x65	PCS 1	702339  118x78	PCS 1	705197-001  45x145x724	PCS 2	705203-001 	PCS 2	705211-001  45x145x715	PCS 7	705214-001  45x145x724	PCS 4
705230-001 	PCS 3	705258-001 	PCS 3	705262-001 	PCS 1	705507-001 	PCS 2	705511 	PCS 8	706178-001  93x93x2246	PCS 4
706180-001  93x93x2538	PCS 4	706234-001 	PCS 1	706531  FASTENER KIT	PCS 2	707418-707  700x1000	PCS 1	707419 	PCS 1	707584  55x120x2480	PCS 2
707604-303  685x2394	PCS 2	707607  32x95x612	PCS 17	707608-303  Ø16x2374	PCS 2	707732  FASTENER KIT	PCS 4	707876 	PCS 1	708746-001  45x120x724	PCS 2
711369-001  93x93x1846	PCS 4	711605 	PCS 1	711642-001 	PCS 1	903093  Ø8x90	PCS 52	905104  M10	PCS 48	907701-216 	PCS 4
908291-216  47x55x696x3	PCS 1	909511  90x90x650	PCS 2	909519  50x380x380	PCS 2	909521 	PCS 12	980114  Ø4x20	PCS 8		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

- EN/AS Impact Area 43 m2
- - - - Falling Space 45.5 m2
- Max Falling Height 1000 mm





Max Falling Height 1000 mm

