

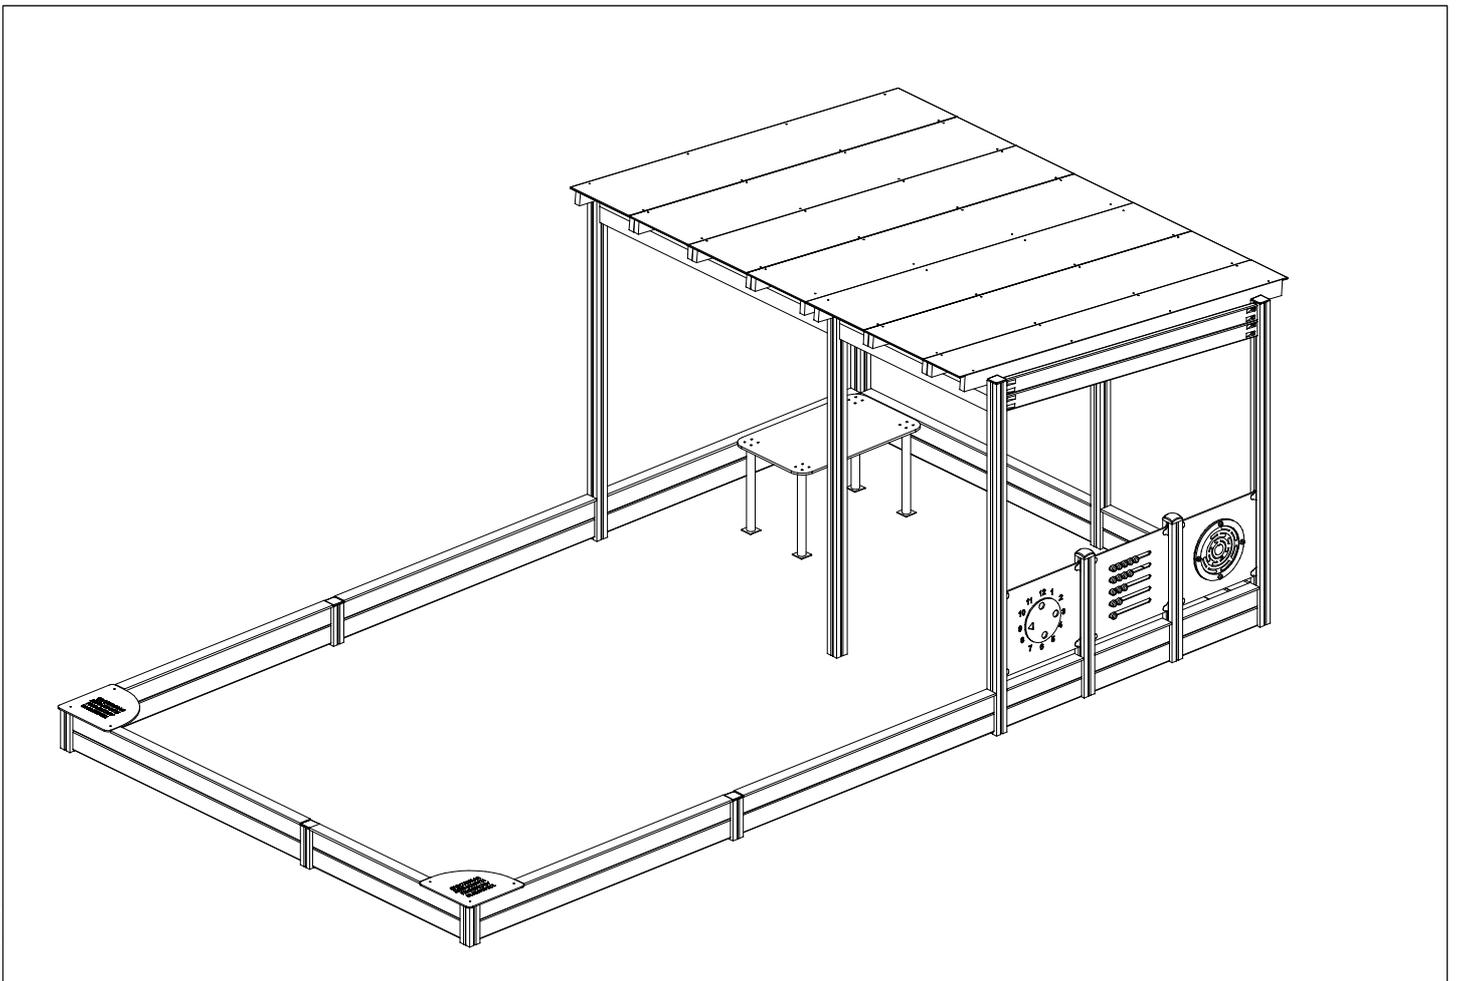


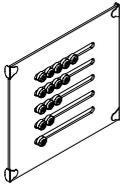

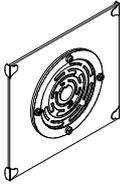

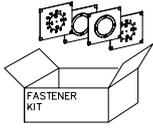










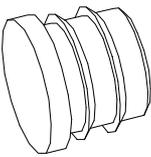



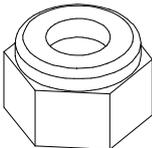

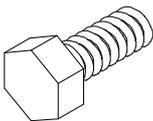


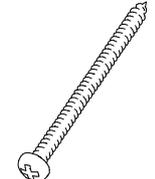
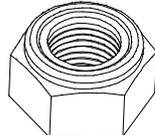
FINNO




ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 3.9.2025

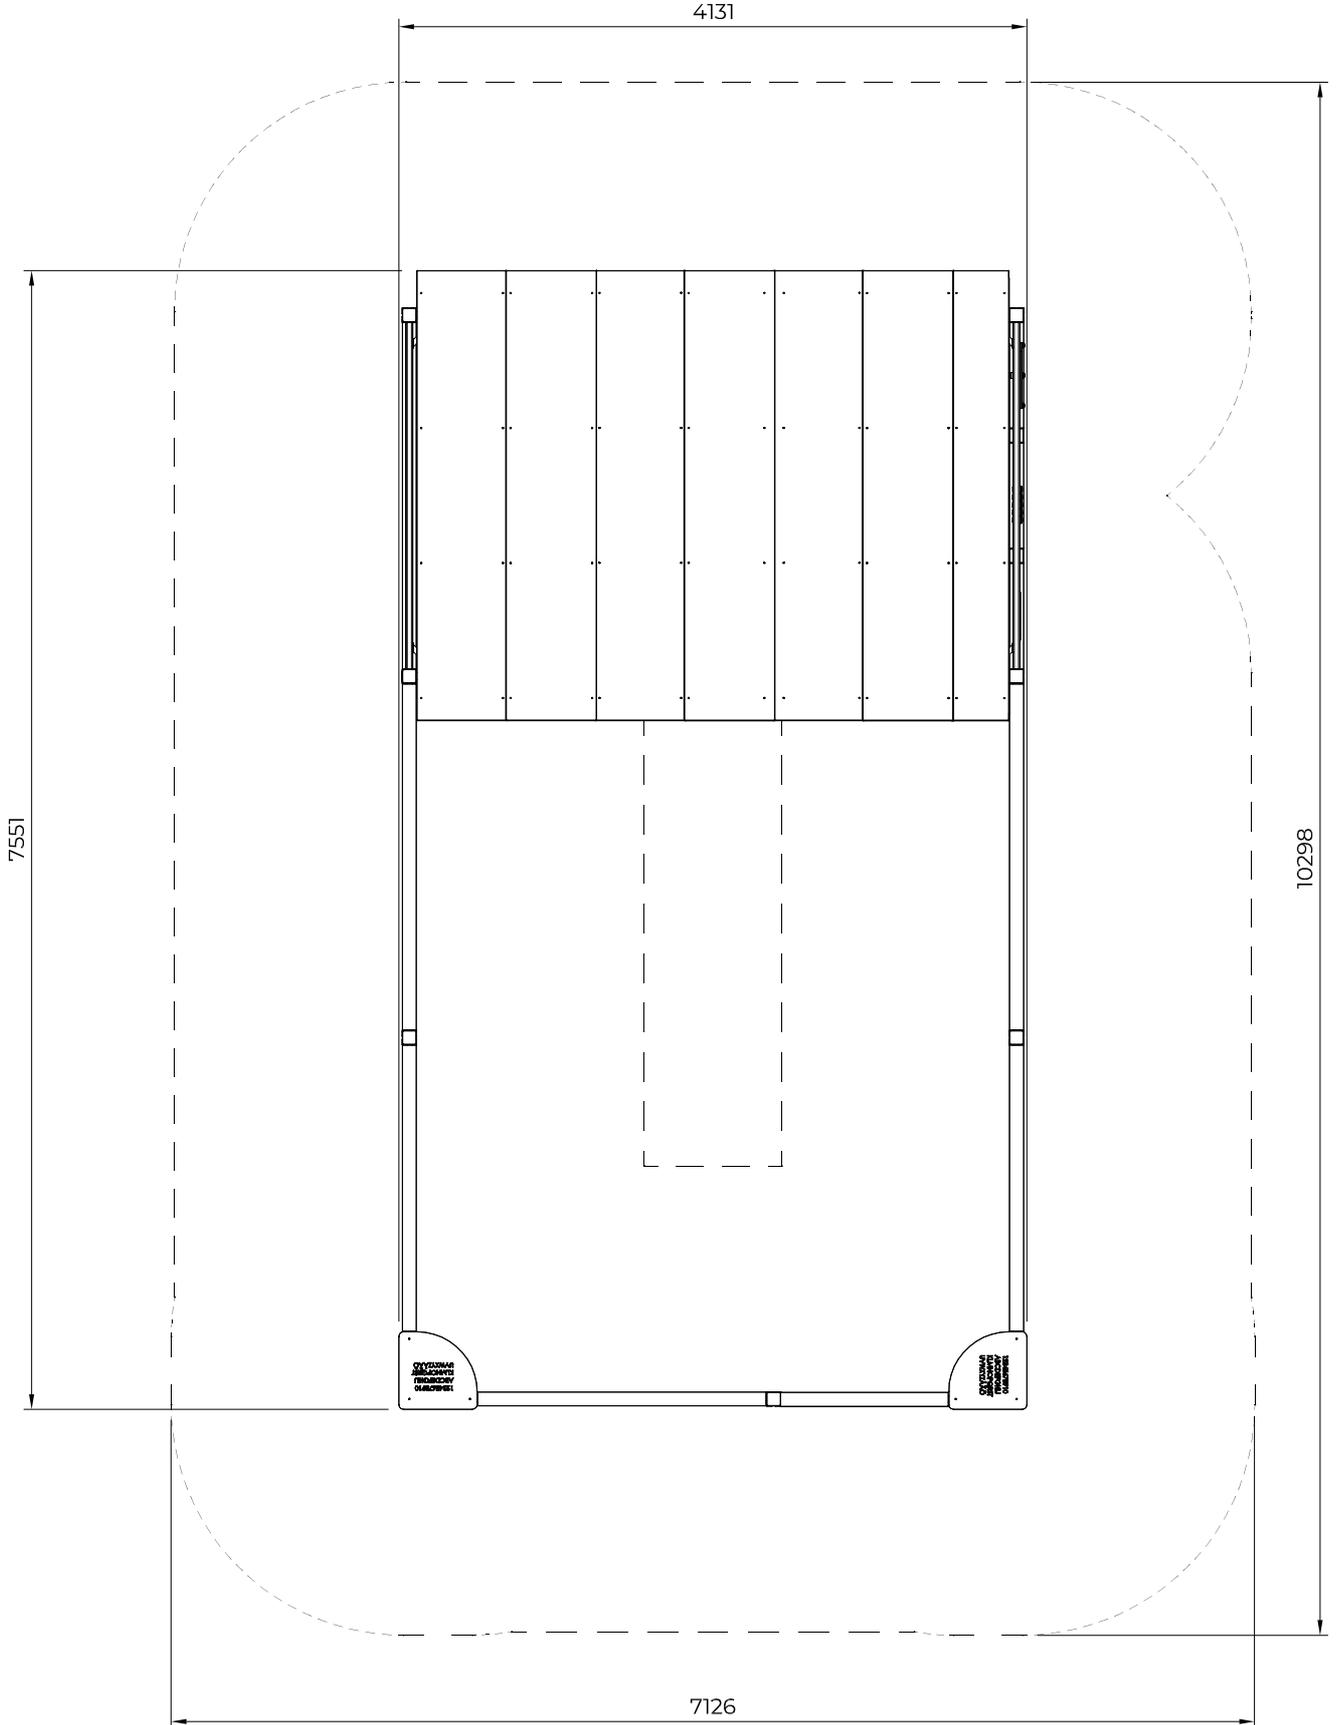
Q19308

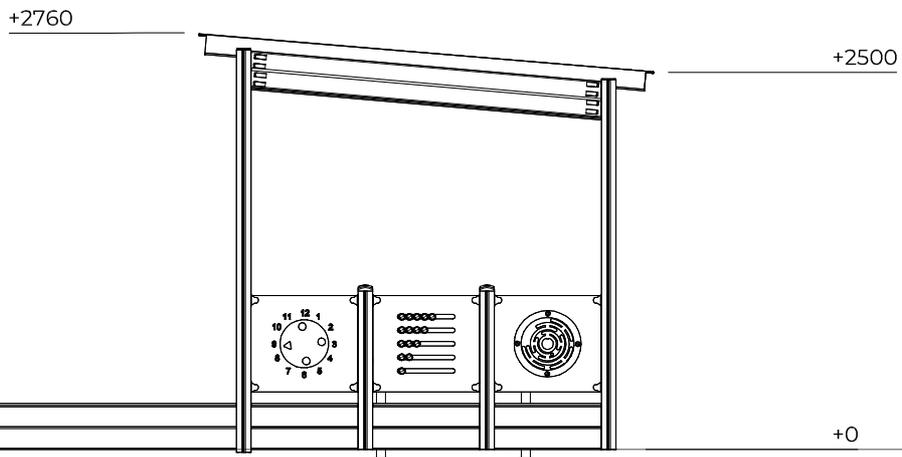
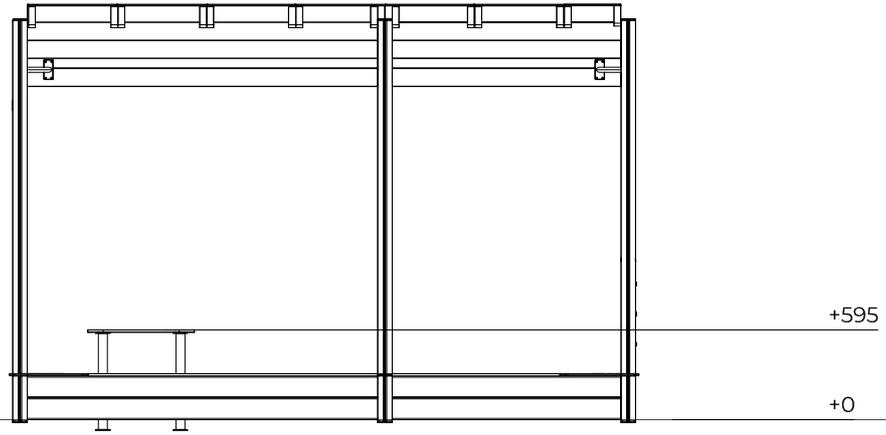


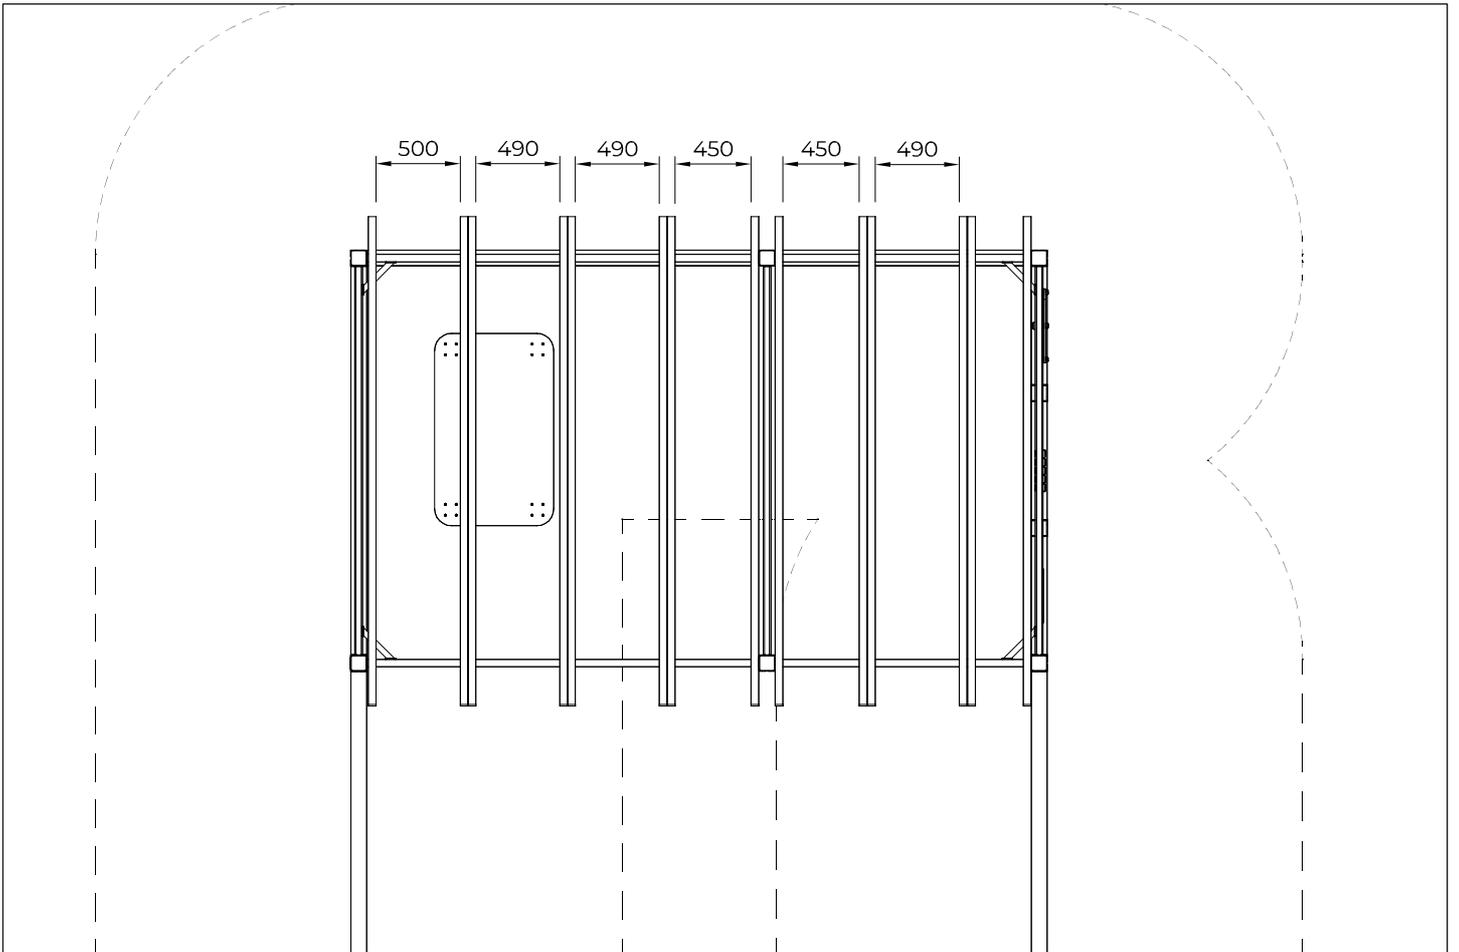
702286  65x65	PCS 1	706308-702  10x640x702	PCS 1	706444  93x93x3200	PCS 3	706481-704  93x93x10	PCS 9	706527  93x93x1600	PCS 2	706568  93x93x3000	PCS 3
706577  93x93x600	PCS 5	706766-702  1	PCS 1	706772-702  1	PCS 1	706778  FASTENER KIT	PCS 2	706887  45x290x1524	PCS 2	706889  L 1500	PCS 1
706890  L 1900	PCS 3	706891  45x145x724	PCS 6	706892  L 700	PCS 3	707273  45x290x2324	PCS 7	707277  L 1105	PCS 1	707282  L 2300	PCS 4
707295  L 2304	PCS 4	707374  L 1504	PCS 4	707446  1	PCS 1	900240  Ø8x70	PCS 62	903093  Ø8x90	PCS 116	905051  Ø24/8.4	PCS 28
905066  S30H	PCS 28	905138  GRAY	PCS 2	905196  GRAY	PCS 2	909232  8x120	PCS 28	909511  4	PCS 4	909519  50x380x380	PCS 8
909521  4	PCS 4	909637  M10	PCS 16	909638  Ø20/10,5	PCS 32	909639  M10x25	PCS 16	909850  M8x25	PCS 16	914840-510  50x130x275	PCS 4
980107  Ø6x60	PCS 18	980114  Ø4x20	PCS 4	980123  Ø7x60	PCS 6	980128  Ø7x40	PCS 88	980131  Ø6x60	PCS 8	980150  M8	PCS 16

980151  Ø16/8.4	PCS 16	P06776 	PCS 1	P10563  L 2900	PCS 14	P14964-702 	PCS 2	P15316 	PCS 6	P15980-707  10x598x3000	PCS 3
P17751-707  10x598x3000	PCS 1	P17755-707  10x598x3000	PCS 2	P19462-707  10x376x3000	PCS 1		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

----- Falling Space 67 m2
Max Falling Height 595 mm







Start installing/positioning the roof plates from the middle towards the ends. Ensure that plate holes are align with the beams before final fixing. Pre-drill $\text{\O}5$ mm holes through the roof plate holes to the roof beams.

