

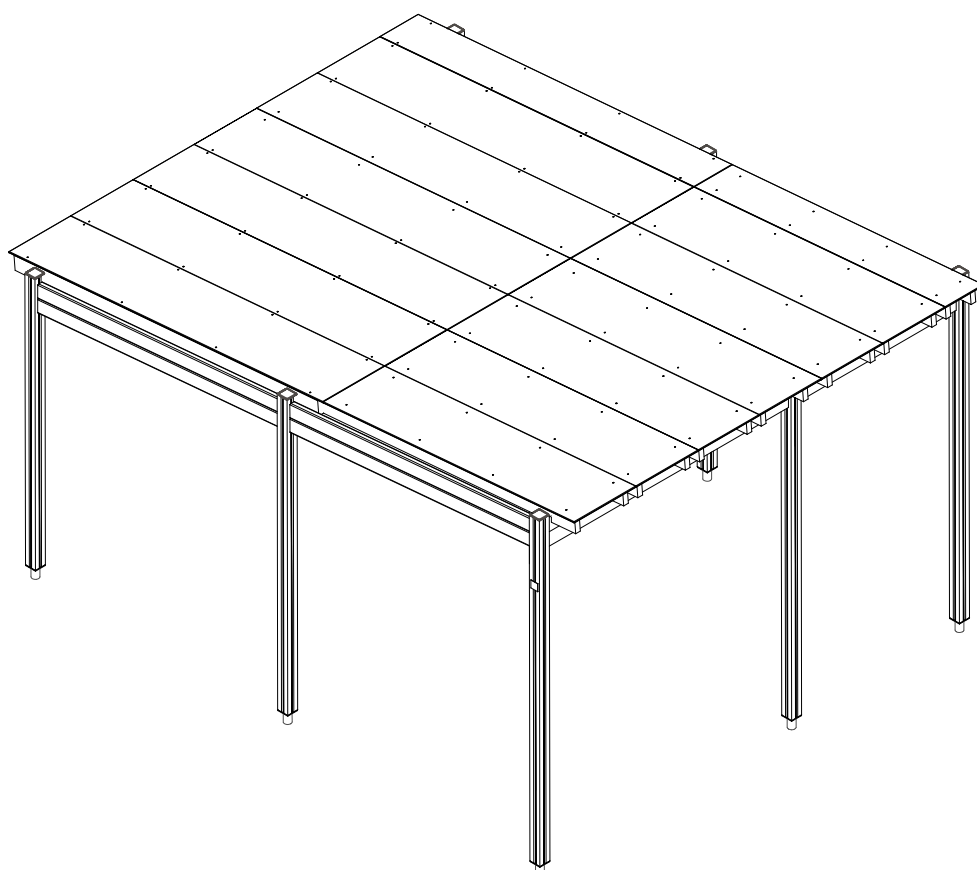


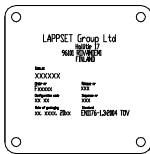

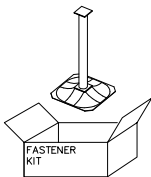



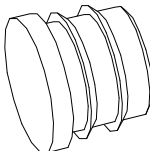








FINNO



ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION



DATE: 25.8.2025


Q19280



702286  65x65	PCS 1	703332  L 2850	PCS 3	706481-704  83x83x10	PCS 9	706531  FASTENER KIT	PCS 9	706662  93x93x2600	PCS 3	706669  93x93x2400	PCS 3		
707295  L 2304	PCS 6	707374  L 1504	PCS 6	903093  Ø8x90	PCS 96	905051  Ø24/8.4	PCS 56	905066  S30H	PCS 56	909232  8x120	PCS 56		
909519  50x380x380	PCS 9	911155  90x90x650	PCS 9	980107  Ø6x60	PCS 18	980114  Ø4x20	PCS 4	980128  Ø7x40	PCS 112	P10563  L 2900	PCS 28		
P15316  10x598x3000	PCS 12	P15980-704  10x598x3000	PCS 3	P17751-704  10x598x3000	PCS 1	P17755-704  10x598x3000	PCS 2	P19453-704  10x598x2400	PCS 1	P19454-704  10x598x2400	PCS 3		
P19458-704  10x598x2400	PCS 2	P19462-704  10x376x3000	PCS 1	P19464-704  10x376x2400	PCS 1		PCS		PCS		PCS		
	PCS		PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS		PCS

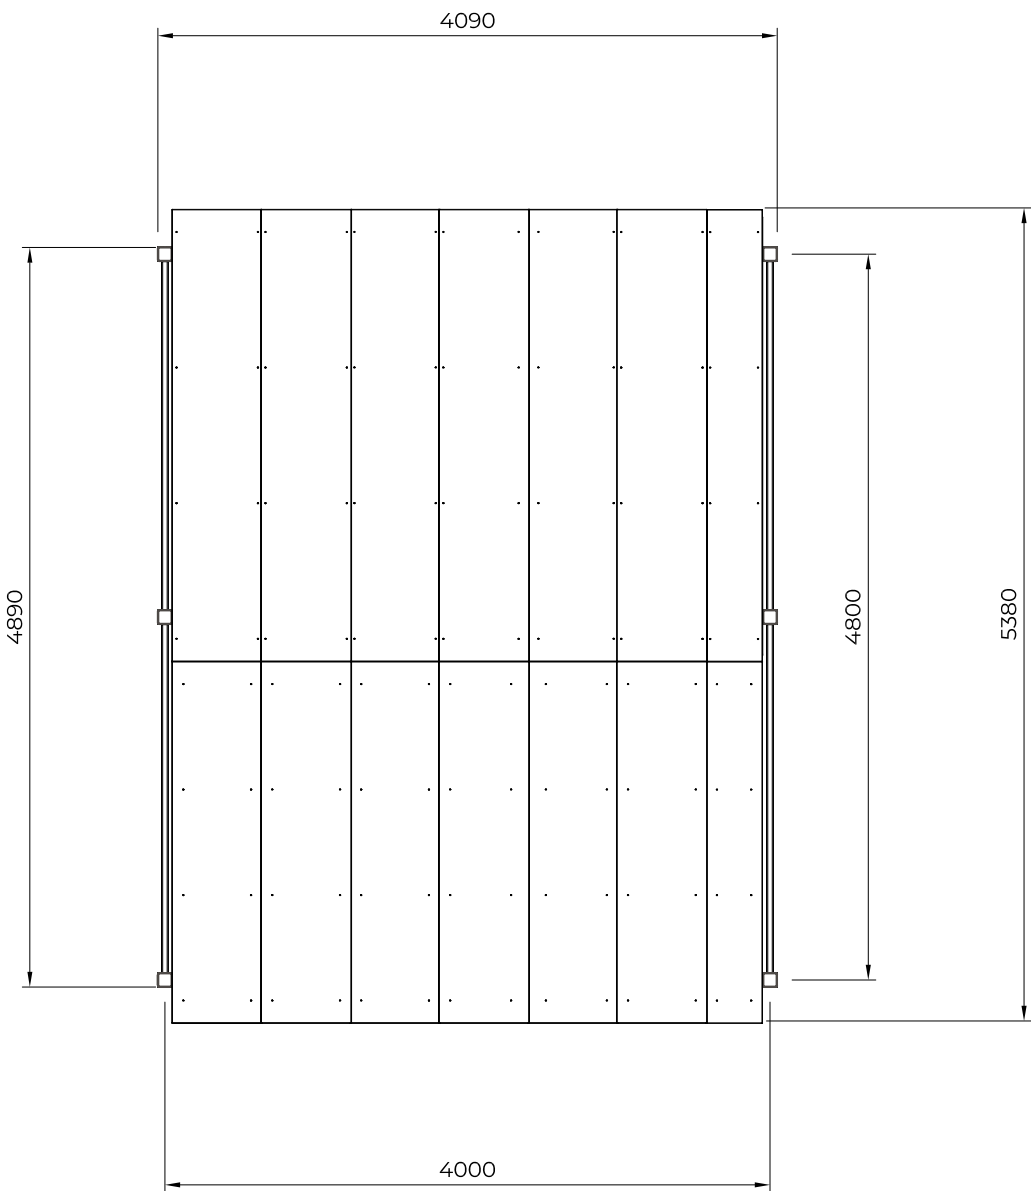

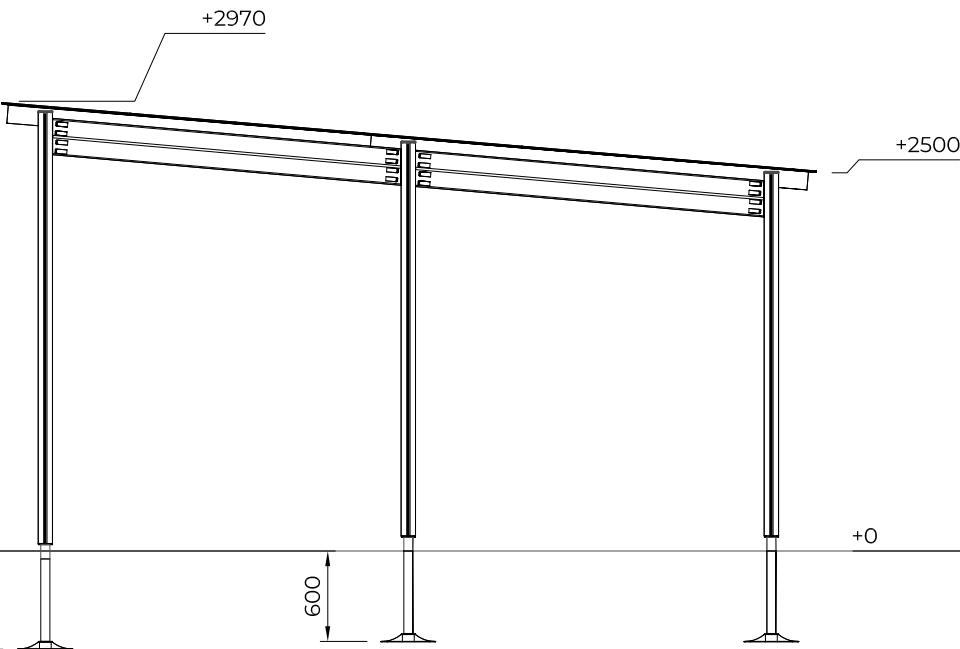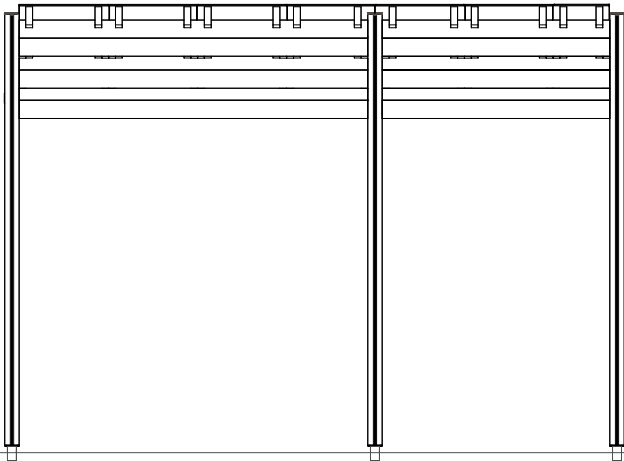

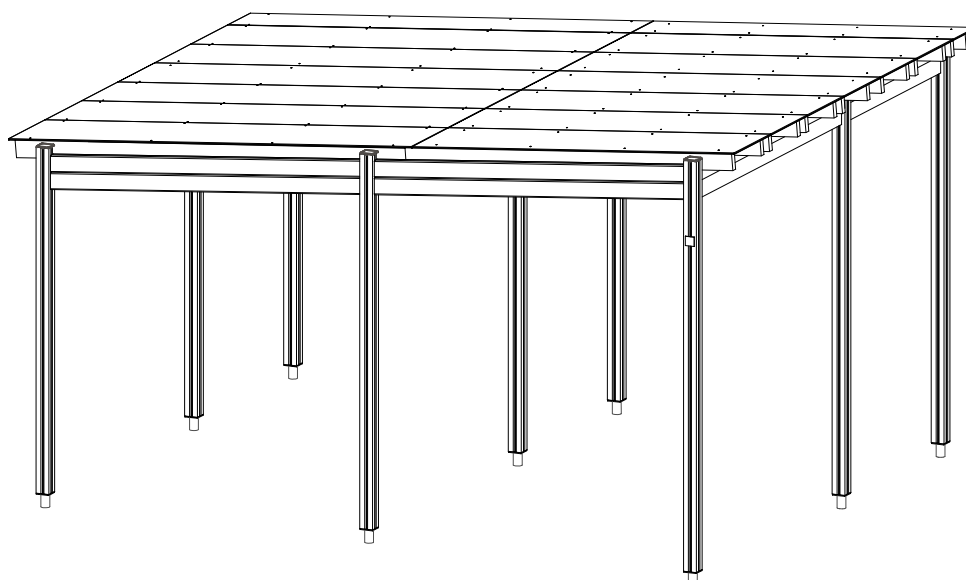

Start installing/positioning the roof plates from the middle towards the ends. Ensure that plate holes are align with the beams before final fixing. Pre-drill Ø5 mm holes through the roof plate holes to the roof beams.

