




FLORA

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 16.9.2025

QFL0522

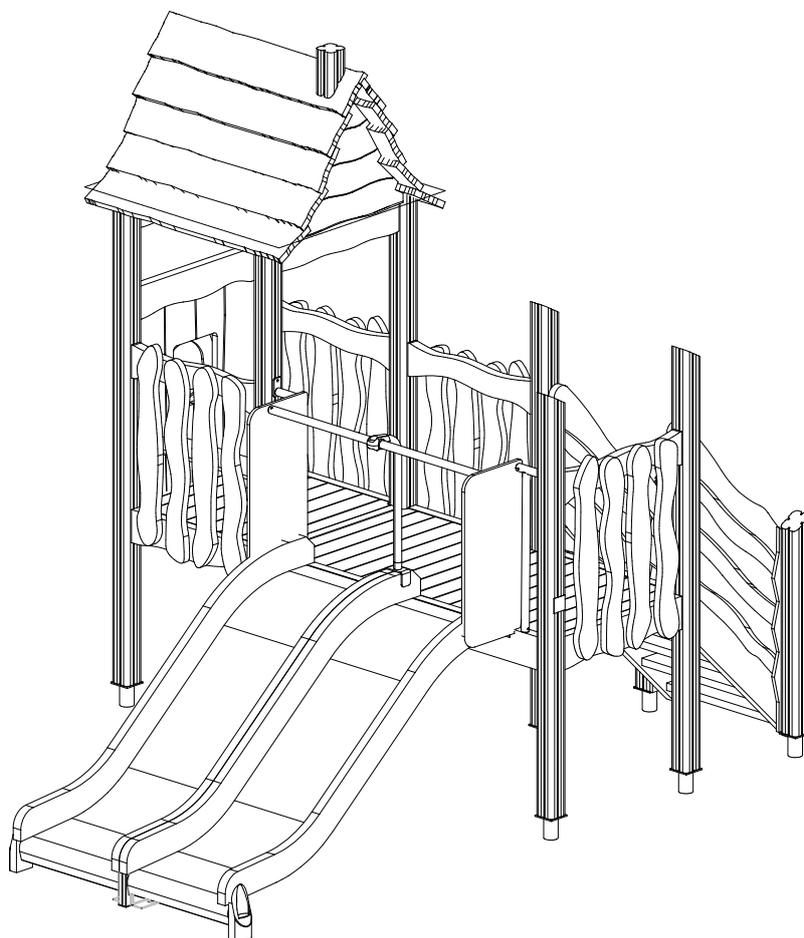

702286	PCS	705206-001	PCS	705211-001	PCS	705230-001	PCS	705258-001	PCS	706185-001	PCS
	1		4		5		4		1		1
65x65		93x93x2146		45x145x715							
706192-001	PCS	706371-707	PCS	706443	PCS	706452-001	PCS	706753	PCS	706783	PCS
	3		2		2		2		1		1
93x93x946		15x345x750		32x45x702		600x780x1470				15x170x700	
707437	PCS	707440	PCS	708374-001	PCS	708437-001	PCS	708469-001	PCS	708767-001	PCS
	1		1		2		1		1		1
32x45x1502				690x704				93x93x200		45x145x1525	
711190	PCS	711192	PCS	711369-001	PCS	711393-001	PCS	711509	PCS	900240	PCS
	1		1		3		1		1		2
750x770		750x770		93x93x1846		45x145x500				Ø8x70	
903093	PCS	905104	PCS	907783-216	PCS	909521	PCS	980100	PCS	980114	PCS
	33		40		2		10		40		4
Ø8x90		M10						Ø5x60		Ø4x20	
A10874	PCS	A10875	PCS	P13450	PCS	P13453	PCS	P13454	PCS		PCS
	1		1		8		1		1		
				28x200x1100		28x200x1100		28x200x1100			
	PCS		PCS		PCS		PCS		PCS		PCS

—— EN/AS Impact Area 26 m²

- - - - Falling Space 29 m²

