

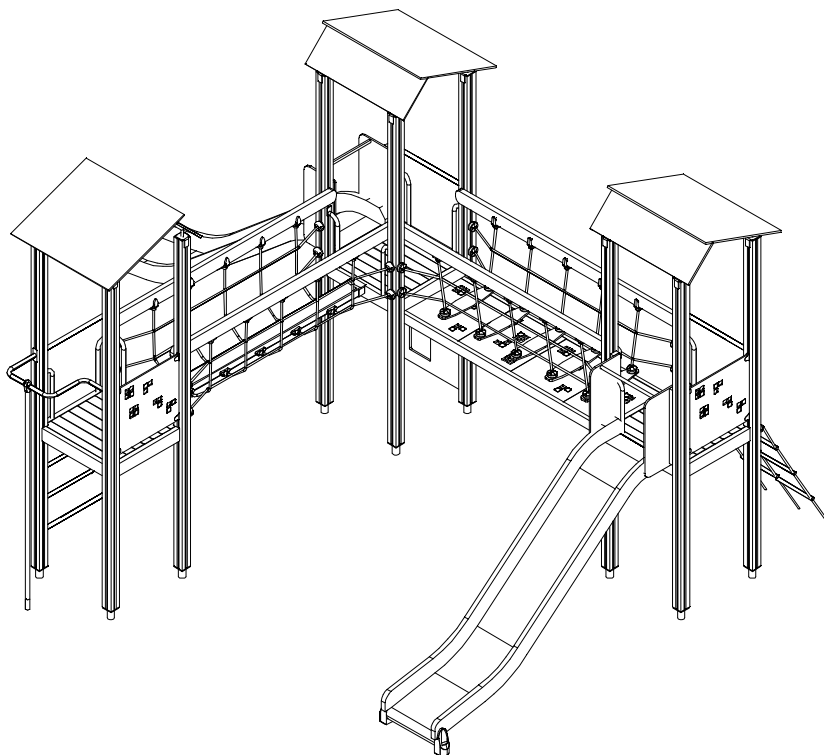


FINNO





ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 4.12.2025

Q19467



008986	PCS	702286	PCS	702339	PCS	706371-702	PCS	706436-702	PCS	706439-604	PCS
	3		1		1		4		2		12
750x750		65x65		118x78		15x345x750		10x640x702		L 704	
706443	PCS	706444-604	PCS	706446	PCS	706447	PCS	706450-604	PCS	706453	PCS
	6		12		3		3		2		5
32x45x702		93x93x3200		15x900x1100		15x390x1100		600x381x2685		15x145x600	
706462-305	PCS	706505	PCS	706507-702	PCS	706531	PCS	706533	PCS	706534	PCS
	1		4		1		12		2		2
		35x70x730				FASTENER KIT		FASTENER KIT		FASTENER KIT	
706535	PCS	706536	PCS	706541	PCS	706542	PCS	706558	PCS		PCS
	3		1		1		1		1		
FASTENER KIT				FASTENER KIT		FASTENER KIT					
706959	PCS	707133	PCS	707255-604	PCS	707259-305	PCS	707260-305	PCS	707262	PCS
	3		2		4		2		2		1
		10x80x745		45x120x2480		2340x800		2375x600		70x145x2235	
707268	PCS	707270	PCS	707271-604	PCS	707272-702	PCS	707284	PCS	707732	PCS
	1		1		2		4		1		14
				70x95x2480		15x630x590					
900240	PCS	901868	PCS	901879	PCS	901916	PCS	903093	PCS	907667-216	PCS
	24		6		4		1		48		6
Ø8x70		Ø34x598				L 650		Ø8x90			

907694-216	PCS	907695-216	PCS	907698-216	PCS	907701-216	PCS	909511	PCS	909519	PCS
	6		1		1		14		12		14
L 704				L 2054				90x90x650		50x380x380	
980114	PCS		PCS		PCS		PCS		PCS		PCS
	8										
Ø4x20											
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

- EN/AS Impact Area 56 m2
- - - - Falling Space 58 m2
- Max Falling Height 1470 mm

